85.609.159

When you first set up your telescoping wand for operation, remove each section to a maximum distance of 50% of the overall length of the section. Once you have extended the wand to 50% of it's overall length, pull the trigger gun while under pressure and work with the wand to get a feel for how it performs. The further out you extend your telescoping wand the less accurate it becomes at the point of cleaning, and less ideal the angle at which you clean. When fully extended, each section should have approximately 6" - 8" remaining for support into the next section of pole.

Due to backwards thrusts of water under pressure, it is extremely important to pressure clean while standing firmly on solid ground and the telescoping wand gives you advantage to do this. Trying to get the nozzle end closer to the surface than it will normally go under full pressure. This can become very tiring, and can also bend the inner aluminum section of the pole if to much force is used. The wands are rated for a maximum pressure of 4000 PSI and a flow of 8 GPM, with the water being carried through a single steel braided 1/4" hose.

SERVICING & REPAIRS

Your long wand has been designed to be easily serviceable and repairable in the field.

The tension of the lever locks can be adjusted by tightening or loosening the bolts.

Should you have to replace the spray gun on the fiberglass pole, remove the two locating screws from the rear of the gun and then unscrew the entire gun from the pole.

No

85.202.114 85.300.1055 85.300.133 85.238.118 85.238.124 85.704.004 85.205.111 85.205.110 85.791.024 85.300.1025 85.791.025 12 85.791.026 13 85.400.019

Part#

WARNING

Beware of overhead power lines. Contacting these lines with the long wand may result in electrocution, injury, or even death. Do not use from ladders or elevating devices of any kind. Operator must maintain both feet on solid ground.

	any, r	eport	it to	the re	etaile	er
	delive	ered t	he or	der.		
2.	Attac	h the	threa	ded	end	0
uE.		727				

1. Remove the long wand from

- 3. Following startup instruction the high pressure hose with wand before using.
- 4. See Belt Kit manual with in:
- 5. Grasp the long wand firmly the yellow fiberglass pole.
- 6. Caution The release of hig back.
- 7. Gently move the wand clos a side to side motion.
- 8. To extend the wand, lift the out of the pole locks. Clip th



Beware of overhead wand may result in e ladders or elevating

- Remove the long wand from the box and check for any shipping damage. If there is any, report it to the retailer who sold the long wand, or to the shipping company wh delivered the order.
- 2. Attach the threaded end of the hose to the elbow on the gun with Teflon tape.
- Following startup instructions for your pressure washer, attach the long wand to the high pressure hose with the quick coupler. Make sure there is a nozzle in the wand before using.
- 4. See Belt Kit manual with instructions for proper usage.
- 5. Grasp the long wand firmly in both hands. Put one hand on the gun and the other of the yellow fiberglass pole.
- Caution The release of high pressure through the wand may cause the wand to kick back.
- Gently move the wand closer to the surface you are pressure washing and wash with a side to side motion.
- 8. To extend the wand, lift the red levers and slide the poles out. Do not slide the poles out of the pole locks. Clip the pole lever firmly so that the poles do not slide during use.

No.	Part#	Description
1	85.202.114	long wand spray gun c/w locating screws
2	85.300.105S	3/8" Stainless Steel male plug (ST-N3M)
3	85.300.133	3/8" screw-type male fitting (M22)
4	85.238.118	3/8" hose assembly (18' LW)
	85.238.124	3/8" hose assembly (24' LW)
5	85.704.004	1/4" street brass elbow
6	85.205.111	large pole lock (onto fiberglass outer pole)
7	85.205.110	small pole lock (onto fiberglass outer pole)
8	85.791.024	front lance
9	85.300.1025	1/4" stainless steel female coupler (BST-2)
10	85.791.025	1/4" x 1½ screw type fitting MNPT (M22)
12	85.791.026	AL Pole adaptor fitting, for long wand (18'/24')
13	85.400.019	long wand belt assembly



Beware of overhead power lines. Contacting these lines with the long wand may result in electrocution, injury, or even death. Do not use from ladders or elevating devices of any kind. Operator must maintain both feet on solid ground.