 


Summary

1. Introduction	4
2. Safety instructions	5
2.1 Symbols and safety labels	5
2.2 Safety instructions specific to cordless tools and chargers	6
2.3 Using the charger and battery charge	7
2.3.1 Function LEDs loader	7
2.3.2 Charging the battery	7
2.3.3 Charger and Battery Storage	7
2.4 Before use	8
2.5 When using	8
2.5.1 Vibrations	9
2.6 After use	9
3. Instructions for using the trimmers on pole	10
3.1 Preparation of hedge trimmers	10
3.2 Using the trimmers	10
3.2.1 Starting the hedge trimmer	10
3.2.2 Stopping the hedge trimmer	11
3.2.3 Tips for size	11
3.3 Cleaning, maintenance, storage and transport	12
3.3.1 Cleaning the hedge trimmer	12
3.3.2 Maintenance of hedges sizes	12
3.3.3 Storage and transport of the hedge trimmer	12
4. Technical Specifications	13
5. Problems and Solutions	14
6. Environmental protection	15

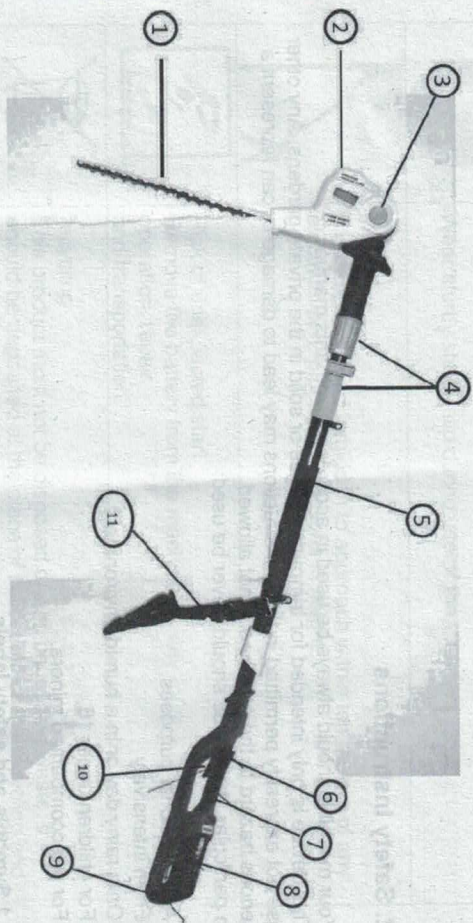

DESCRIPTION ELECTRIC HEDGE WIRELESS ON POLE

Accessories: protective sleeve

1	Cutting blade	2	Swivel cutting head
3	Unlock the cutting head	4	Lock the telescopic tube
5	telescopic tube	6	Trigger safety button
7	rear handle	8	Batterie Li-Ion
9	Lock / Unlock Battery	10	Control trigger on / off
11	shoulder		

1. Introduction

Thank you for the preference you have shown in our product and congratulations for purchasing your new Sydney Tools device.

We believe that, properly maintained, this tool will bring you years of trouble-free operation and you can fully appreciate its quality, performance and comfort.

This product was designed and manufactured with great care, according to strict standards of safety, reliability and ease of use of Sydney Tools products.

Please read this manual. Familiarise yourself with all control elements of the trimmers before first use.

Please follow all notes, explanations and instructions in this manual for optimal and safe use of this device.

2. Safety instructions

Your machine should always be used in accordance with this manual.

This device is only intended for trimming hedges or solid in the private gardens. Any other use not expressly permitted in these instructions may lead to damage or can represent a serious hazard to the user and is not allowed.







In particular, the device should never be used:


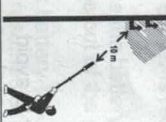

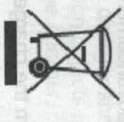
- A professional purposes
- From intensively
- On a rainy day or in a humid environment
- For children under 16,
- For unaccompanied minors.

2.1 Symbols and safety labels

IMPORTANT: Some of the following symbols may be used on the tool and / or accessories. Be sure to study them and learn their meaning.

Proper interpretation of these symbols will allow to use the device more effectively and reduce the risk of accidents.

	Danger ! Warning ! This symbol indicates danger, warning or caution. It indicates that operator safety is at stake.
	Read the instruction manual The instruction manual contains information intended to draw attention to potential safety problems, the risk of damage to the machine and useful tips for startup, operation and maintenance. Observe all notes, explanations and instructions in this manual extras for optimal and safe use of this device.
	Keep a safe distance The operator is responsible for the security of the third lying in the working area of the machine. Do not use the camera while other persons, especially children, or animals, are nearby.
	Do not expose the unit to rain Never expose the machine to rain or wet environment. Do not use this device in the rain.
	Wear protections Wear a helmet, eye and ear protection when using this hedge trimmers on pole.
	Wear protections Wear protective gloves when using the hedge trimmer.

	Wear protections Wear sturdy shoes slip during use of the trimmers.
	It is dangerous and forbidden to approach within ten meters of any electrical son, pipes or other pipes in height.
	Risk of unexpected start Remove the battery from the machine for any routine maintenance operation, repair, and transportation.
	recycling This product must not be disposed of with household waste. It should be deposited at the place of collection for the recycling and recovery of electrical and electronic waste.

2.2 Specific safety precautions for cordless tools and chargers

WARNING: Always remove the battery of your device to assemble or disassemble parts, making adjustments, cleanings or when you are not using your tool. This will reduce the risk of unintentional starting of the machine, which can cause serious personal injury.

- Do not recharge the battery of your device with the charger recommended by the manufacturer. An inappropriate charger to the battery may cause a fire.
- The battery should not be milled or crushed, should not be heated or incinerated not be short-circuited or disassemble, immersed in any liquid.
- Only a specific type of battery can be used with a wireless device. The use of any other batteries may cause a fire.
- When the battery is not in use, keep it away from metal objects such as paper clips, coins, keys, screws, nails or other objects likely to connect the contacts between them. Caused the short circuit can cause fire and / or explosion of it, and cause serious burns and injury.
- Avoid contact with the liquid leaking from a battery due to overheating or otherwise. If this happens, flush the affected area of the body with clean water, and in case your eyes are affected, consult a doctor immediately.
- Due to the heat generated during charging, the charger should not be used on combustible or flammable environment surface.
- Never block the ventilation slots of the charger.
- Never disassemble the device yourself. A non-reassembly can cause electrical shock or fire.
- Unplug the charger when not in use or when cleaning.
- Use only approved extension cords and in perfect condition.
- Make sure the load during aeration of the place is enough. Poor ventilation of the load may cause excessive operating temperature, causing a malfunction of the charger.
- Temperatures above + 40 ° C should be avoided.
- Charges made in closed cabinets or near heat sources such as radiators or sunlight undergo heat increases and should be avoided.
- If you do not use the battery for a long time, remove it from the charger and unplug it.

- Do not attach any element to the charger using rivets or screws. The rivets or screws may render ineffective the insulating housing. Only charge original batteries.
- If the power cable is damaged, take his place in an authorized service center to avoid the risk of accidents.

2.3 Using the charger and battery charge

CAUTION: You must use a charger and a battery used with this product

WARNING: If no lights are on charging, remove the battery from the charger to avoid damaging it. Do not insert another battery. Make repair or replace the battery or charger in the center nearest authorized service.

2.3.1 Function charger lights

- The LEDs (LED A and LED B) show the operation of the charger and the advancement of battery charge.
- Steady green LED A + B Led off: Power Charger empty.
- Steady green LED A + B LED lit red: Battery charge current.
- A and B LED Green lit: Battery charged. (Remove the charged battery from the charger and unplug it.)


Note: The Li-ion batteries planned for this charger have no memory effect, the load can be interrupted and resumed at any time.



2.3.2 Charging the battery

If the charger does not correctly load the battery under normal conditions, bring the charger and the battery at an authorized service center for electrical Sydney Tools control these elements.

- The load must be carried out at a room temperature between $+5^{\circ}$ and $+40^{\circ}$ C
- Only charge the battery or batteries planned for this charger.
- Connect the charger to a 220-230V outlet (regular household voltage).
- Insert the battery into the slots of the charger, ensuring that the locking tab is in place and fixes the battery. Figure below

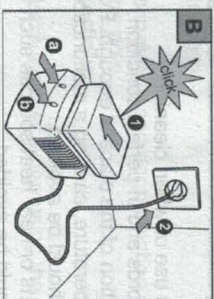

- The B LED is red during charging and turns green when the battery is recharged.
- Once the battery fully charged, remove the by pressing up the locking tab and pulling the same out of the grooves of the charger.
- This battery "Li-ion" has no memory effects, its load can be interrupted without problems and resumed at any time.

2.3.3 Charger and Battery Storage

- For long-term storage, it is preferable that the battery is fully charged and stored in a dry place at a temperature between 10 and 25° C
- The charger should be stored in the same conditions as the battery, taking care that no foreign objects such as metal chips or other can not penetrate through the ventilation slots of the charger.

2.4 Before use

- Consider carefully this manual.
- Familiarize yourself with the operation of the unit and learn to use it properly.
- Never allow other people (especially children) who have not read the operating instructions to use the machine.
- If the appliance should be delivered to other person, give them these operating instructions as well.
- Never remove the labels or safety elements.
- Do not use the power tool if the trigger Start / Stop is not working properly. If necessary, contact your dealer for possible repair.
- Never expose the appliance to rain or moisture. Never allow water or other liquids to enter the unit.
- Check the condition of the cutting tool, fastening and safety elements before each use. Replace excessively worn or missing parts.
- Do not cut close to other electrical son.
- Do not operate the power tool in environments with flammable items such as liquid, gas or dust. The sparks generated by the operation of the unit can result in a risk of explosion.
- Do not start cutting until the working area is clear and cleaned. Keep the work area clean and tidy to reduce the risk of accidents.
- This device is only intended for trimming hedges and massive in private gardens. Any other unauthorized use in this manual can lead to damage, can represent a serious hazard to the user and is not allowed. In particular the device must never be used:

- Intensively,
- For professional use,
- For public gardens,
- Agricultural or forest maintenance,
- To grind yard waste for the compost –

2.5 When using

- Use the Machine only in daylight or good artificial lighting.
- Do not prune when the plants are wet.
- The use of motorized equipment can be regulated. Remember to comply with legal regulations which may differ from one locality to another.
- Do not use the machine if you are tired or ill. Also avoid use if you have consumed alcohol or taken drugs. A moment of inattention can lead to serious injury.
- During use, keep the hair away from the cutting system. Never wear loose clothing or accessories that could become caught in the machine or into the cutting system such as tie, scarf or jewelry.
- Wear close-fitting clothing, dressers and protect you from cuts. Always wear long pants, strong and non-slip shoes and protective equipment such as gloves, goggles, a helmet visor and acoustic shield, etc.
- Prevent anyone to remain in the operating range of the electric hedge trimmer during use. Keep people, children and animals away from the work area. If it is a group work, keep a safe distance between people.
- Make sure that the handles are clean and dry. When the engine is running, always grasp the tube firmly with the left hand and the rear handle with your right hand.
- Always work in a stable position, balanced and firm. Do not work on slippery or unstable. Hold the camera with both hands. Put yourself in a position that allows you to withstand the forces exerted by a backlash. Never release the device.
- Always begin cutting with the tool on.
- Never work with a damaged machine repaired poorly, poorly assembled or modified arbitrarily.
- Do not overload the machine. Always use the correct device for the job.
- Always keep hands and feet away from the cutting tool and particularly when the cutter bar is moving.

2.5.1 Vibrations

The vibrations transmitted to the hand-arm system can reveal a set of symptoms called "vibration syndrome." These symptoms can result in the form of Raynaud's phenomenon (painful crises whitening of the phalanges in case of exposure to cold and / or moisture), less sensation of touch, warm and cold, pain in the arms and hands, functional impairment of joints of the wrist and elbow. The simultaneous exhibitions such as muscle strain, awkward postures, cold, can enhance the effects of vibration on humans.

WARNING: In order to limit "vibration transmitted", it is best to wear protective gloves and cut working time by making frequent breaks, and limiting the daily continuous working hours.

WARNING: The level of vibration during actual use of the tool, may differ from the total declared value depending on how the tool is used, and the need to identify the security measures to protect the operator that are based on an estimation of exposure in the actual conditions of use, taking into account all parts

identify safety measures to protect the operator that are based on an estimation of exposure in the actual conditions of use, taking into account all parts of the duty cycle such as the times when the tool is set off and when it is idling.

NOTE: As part of prevention, you can use the link below for further details.

2.6 After using

- Always remove the battery from the camera before performing any control or maintenance.
- Do not carry the hedge trimmer when it is completely stopped and the battery removed.
- Always follow the instructions provided for maintenance. After each use, check the operation of safety devices, fixation, tension and condition of the parts. Maintain the device. Replace worn or damaged parts.
- Do repairing the pole hedge trimmer on by qualified personnel. For safety reasons, use only original parts or approved by Sydney Tools.
- Keep clean electric hedge trimmers and keep it always in a dry place, in height. Store power tools in a place out of reach of children.
- Keep this manual carefully and refer to it each time you use the machine.

3. Instructions for use on the pole hedge trimmer

Any unauthorized modification by Sydney Tools can make the dangerous machine and lead to severe injury during use. Sydney Tools disclaims all responsibility for any misuse or non-compliance with the instructions and / or regulations.

3.1 Preparation of hedge trimmers

CAUTION: Do not mount the battery on the device before having fully assembled.

CAUTION: Wear gloves when handling the hedge trimmers to prevent accidents related to the cutterbar whose teeth are extremely sharp.

- Carefully unpack the unit. Ensure cleanliness and good condition of all the parts. If in doubt, contact your dealer.

3.2 Using the trimmers

Before use, always check the presence and proper operation of the safety devices. Also check the state of the cutter bar and the fastening system. If necessary, replace or repair defective parts. Use only original parts or approved by Sydney Tools.

WARNING: Never work with a damaged or excessively worn cutter bar because you might hurt yourself.

3.2.1 Mise en marche du taille-haies

- Pull the telescopic tube to the desired length by loosening the clamping systems "4" descriptive.
- Orient the engine by pushing the button "3" descriptive to give the right angle



-Occupational cutterbar.

- Remove the protective sheath.
- Introduce and lock the battery into place, taking care not to press any button to avoid accidental starting. Fig. 1

-Hold the camera with both hands and simultaneously press the trigger safety button on the rear handle with your right thumb while simultaneously tightening the control trigger with the same hand as in Figure 2 below.



Fig 1

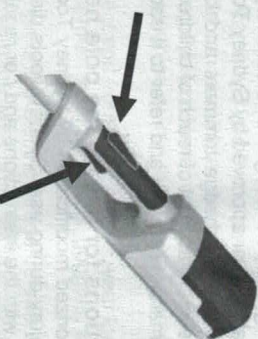


Fig 2

3.2.2 Stopping the trimmers


- Release the trigger switch on / off to stop the machine.
- The unit stops completely after a few seconds.
- Remove the battery from the camera for more security.

3.2.3 Tips for size

- Do not prune in the rain.
- Start the engine before being in contact with the plant to avoid the blade is blocked.
- For trimming hedges, go on to describe circular arcs. Alternately use the two sides of the blade.
- For efficiency, tilt the blade to about 10 ° without poking the tip of the hedge trimmer.
- For horizontal areas, going from the inside to the edge of the hedge to break down the branches cut to the ground.

Examples of possible sizes with the trimmer on pole.

- If the height of the hedge is excessive, make several passes. Between each size, cut large branches with pruning shears or lopper.
- Work with care near fences to avoid blocking the blade.
- In case of blade lock, immediately stop the machine before the release.

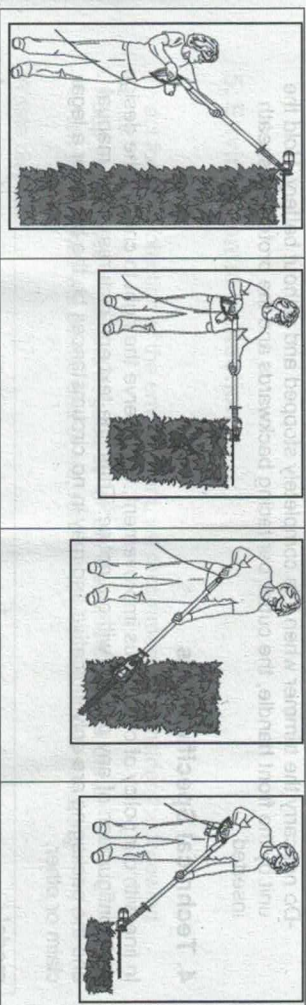

3.3 Cleaning, maintenance, storage and transport

- CAUTION: All cleaning operations, transport and maintenance are to be made engine off and battery removed.

3.3.1 Cleaning the trimmers

- Regular cleaning after each use allows better operation and increased life of the hedge trimmer.
- Maintain the surface of the unit with a soft damp cloth. Never clean plastics with a chemical that could damage
- CAUTION: Never immerse the trimmer in water or other liquids for cleaning. Never clean the unit with running water or high pressure.

- The blade must be cleaned regularly to remove the resin residue. Preferably use a mild solvent for this purpose. Leave for a few minutes and wipe the blade with a cloth.
- To optimize the operation of hedge trimmers and avoid corrosion, oil the blade and the guide rail after each use with an environmentally friendly lubricant.

CAUTION: Wear gloves when handling the hedge trimmers to avoid any accident related to the blade whose teeth are extremely sharp.

3.3.2 Maintenance of hedge trimmers

- Sharpening blades

- For best results, do sharpen the cutting blade at least once a year by a specialist workshop.
- For replacement if necessary the dull blade or damaged by a specialist workshop.

3.3.3 Storage and transport of hedge trimmers

- Remove the battery imperative for storage and transportation.
- Store the hedge trimmer in a dry, temperate and protected from light. Put it in a place out of reach of children and do not cover it with a tarp under risk of moisture accumulation.
- For long-term storage, lightly oil the cutter bar.

-Do not carry the trimmer when it is completely stopped and without battery. Hold the unit by the front handle, the cutter bar facing backwards and the protective sheath inserted.

4. Technical Specifications

In line with our policy of continuous improvement, we reserve the right to change the design and configuration of any product without notice. Thus, the text and pictures of this manual and the packaging are only indicative and may in no circumstances be the basis for a legal claim or other.

model	
Device type	Electric hedge trimmers on wireless boom
Voltage	40 V D.C.
Length of the cutter bar	400 mm
Spacing teeth	18 mm
Length of the boom	150cm to 200cm Extensible
Guaranteed acoustic power (LWA)	92 dB(A)
Sound pressure (LpA)	77.2 dB(A)
Protection class	Double protection
Net weight with battery	4.1 Kg
total vibration	1.643 m/s ² k=1.5m/s ²

5. Environmental protection

To act for the protection of the environment, we recommend to consider the following points:

- Keep your device clean and in good condition. Replace damaged parts.
- When your device will be the end of life, return it to your retailer for recycling.

Waste disposal

According to the European directive on the disposal of electrical and electronic equipment waste, power tools that are no longer usable must be collected and undertake appropriate way of recycling. Do not dispose of power tools into household waste.

Battery

All batteries and accumulators which are reaching the end of life should be brought to your dealer or to a place of receipt of hazardous waste for recycling their imperative. (Dangerous for the environment)