



ABACO MACHINES

OPERATION MANUAL ABACO ONE STOP A-FRAME



ABACO MACHINES (USA)

14508 S. Garfield Ave., Paramount, CA 90723, USA Tel: 310-532-0366 Fax: 310-532-0499 Email: sales@abacomachines.com

Website: www.abacomachines.com

ABACO MACHINES (AUS)

Unit 4/34-36 Fairfield St., Fairfield N.S.W 2163 Australia Tel: 61-2-9632-4990 Fax: 61-2-9632-1510 Email: abacomachines@abaco.com.au

Website: www.abaco.com.au

I. GENERAL

Sturdy structure, designed to eliminate any risk of slab tipping over.

Slabs are placed on special rubber profile and secured with 4 ratchet securing bars.


Contains extra storage section in the center. Ideal for storing tools, splash backs etc.


Frame features 2 eyelets to be picked up by an overhead crane.

Built in brackets on all underneath sides for forklift transport.

Four removable casters included

The correct way of tightening the rubber lined securing bars for the One Stop A-Frame.

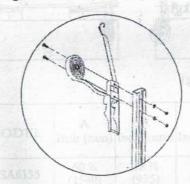

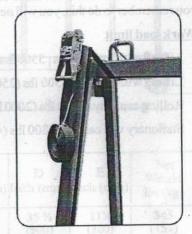

As shown to the right, the ratchet hook needs to run under the bar and back around to the tie down point. This will ensure that the rubber lined securing bar stays in position and does not lift up when tightening. It is recommended that the securing bars stand level with or taller than the slabs itself.

The securing bars will not work to its full potential if your material does not stand within the height of the bars. This is because the straps are not as strong as the ratchet securing bar.

Please Note:

The securing bars are not to be used when carrying full slabs of material.

To secure a full size slab on the A-frame use only the straps.

II. FORKLIFT USERS

Always make sure your forks are fully inserted into the A-Frame before lifting.

This will ensure a proper and secure lift.

The correct way of removing the casters. Make sure the load is fully secured before removing the casters. Lift A-frame off the ground, high enough for you to have proper access to the casters.

With one hand holding the caster, use your other hand to pull out the pin. This will release the caster from the A-frame. Please place the caster in its holder. If you remember to do this, you will never have to worry about losing your casters.

Work load limit

Lifting with fork inserts: 5500 lbs (2500 kg)

Lifting with eyelets: 5500 lbs (2500 kg)

Rolling capacity: 4400 lbs (2000 kg)


Stationary w/o casters: 8800 lbs (4000 kg)

shown to the right, the ratelest hook needs as nun under the bar and ook around the time down point. This will ensure that the nibber lined scouring but stays in sentent and does not left up when tightening. It is recommended that the securing


he securing bass will not work to its full potential if your insterial does not stand thin the heapin of the bars. Thus is because the straps are not as strong as the

he securing **bets ere not** to be used a ben corrying full slabs of materia

TECHNICAL SPECIFICATIONS

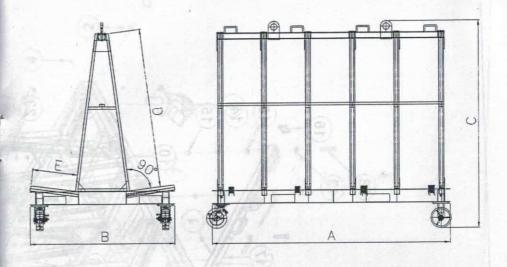

MODEL	A Inch (mm)	B Inch (mm)	C Inch (mm)	D Inch (mm)	E Inch (mm)	Net Weight Ibs (kg) 345 (157)	
OSA6135	60 5/8 (1540)	38 3/s (975)	50 % (1285)	35 3/8 (900)	11% (300)		
OSA7247	71 ¼ (1810)	43 1/4 (1100)	62 3/8 (1585)	47 ¼ (1200)	13 (330)	398 (181)	
OSA7263	71 ¼ (1810)	43 ¼ (1100)	78 1/8 (1985)	61	13 ¾ (350)	462 (210)	
OSA8763	86 ¼ (2190)	43 1/4 (1100)	78 1/8 (1985)	61 % (1570)	11 % (300)	537 (244)	
OSA9679	95 (2410)	48 (1220)	94 (2390)	77 % (1972)	13 3/8 (340)	706 (321)	

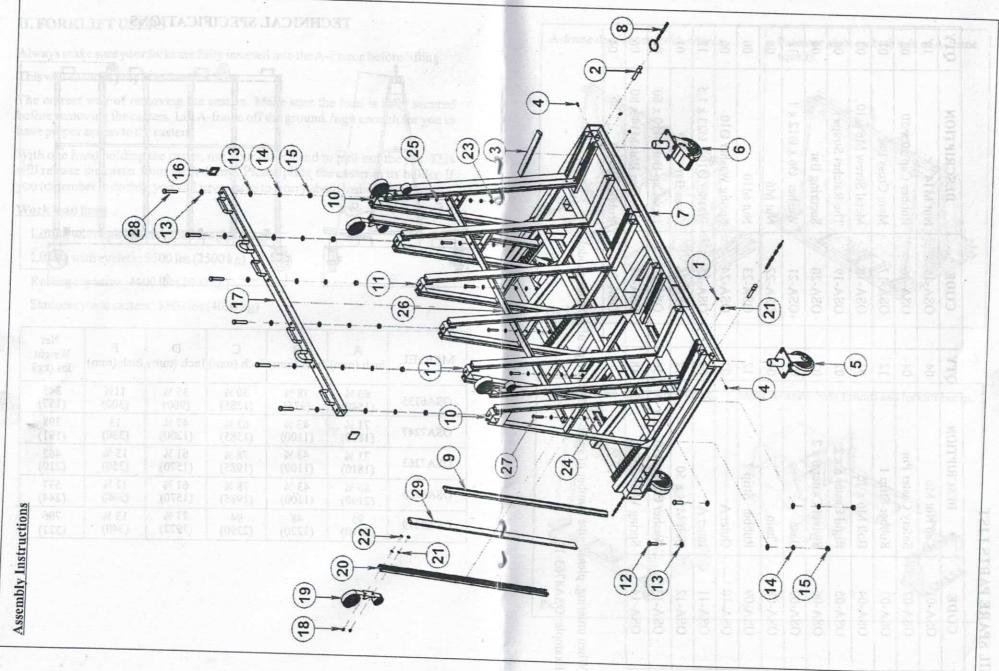

III. SPARE PARTS LIST

OTV	18	00	70	10.	80	04	04	13	80	90	90	12	10	90	90	04
DESCRIPTION	Nut M14	Rubber Can 50 v 50	Main Cross Box	Matal Carry Mar	Metal Sciew Mo x 10	I he Katchet Straps	Securing Bar	Washer @6 x Ø12 x 1	Nut M6	Nut M10	Spring Washer Ø10	Washer Ø10 x Ø23 x 1 5	Cross Bar	Hex Cap Bolt M10 x 60	Hex Cap Bolt M14 x 80	Rubber Strip 3
CODE	OSA-15	OSA-16	OSA-17	OSA 18	00.410	USA-19	OSA-20	OSA-21	OSA-22	OSA-23	OSA-24	OSA-25	OSA-26	OSA-27	OSA-28	OSA-29
QTY	04	04	12	04	50	70	02	10	04	12	02	04	12	36	18	No.
DESCRIPTION	Cap Nut M6	Safety Caster Pin	Rubber Strip 1	Bolt M6 x 15	Rigid Caster 6 v 2	7 VO PARON AND A	Swivel Caster 6 x 2	Base	Chain	Rubber Strip 2	Outer A	Inner A	Bolt M14 x 50	Washer Ø14 x Ø30 x 2.5	Spring Washer Ø14	
CODE	OSA-01	OSA-02	OSA-03	OSA-04	OSA-05	20100	OSA-06	OSA-07	OSA-08	OSA-09	OSA-10	OSA-11	OSA-12	OSA-13	0SA-14	

When ordering, please give number of spare-part plus type of A-frame model. Example: OSA8763-12

