


SAFETY INSTRUCTIONS

- Light towers shall be stalled on a solid floor, in a clean location with sufficient ventilation (at least 1 meter away from walls).
- Provide earthing to your light tower as well as the load. Light tower must be protected against short circuits with fuses and circuit breakers.
- When the unit is used in a confined space, conduct engines exhaust to the outside atmosphere⁽¹⁾.
- When operating in a dust-laden atmosphere, place the unit so that dust is not carried towards it by the wind.
- Operate the unit only for the intended purpose and within its rated limits (pressure, temperature, speeds, etc).
- Avoid overloading the light tower⁽¹⁾.
- Pay attention to the markings on the unit.
- Before connecting the load, switch off the corresponding circuit breaker, and check main load characteristics⁽¹⁾.
- Never operate the generator in a humid atmosphere.
- Do not open electrical cabinets, cubicles or other equipment while voltage is supplied.
- Never touch the power terminals during operation of the machine.
- Do not deploy the mast:
 - If light tower is not standing in an even surface with adjusted stabilizers.
 - In the vicinity of the overhead power cables.
 - With people staying too close.
 - If the wind is stronger than 80 km/h.
- The light tower is equipped with an emergency button (S2). It should only be used in emergency situations and not to stop the generator.

⁽¹⁾For more information check instruction Manual.


This Quick Start Guide does not replace the Instruction Manual delivered with the machine. Please refer to the Instruction Manual for complete safety, operation and maintenance guidelines. For a copy please contact your local Atlas Copco customer center, or visit: www.atlascopco.com

MAIN PARTS

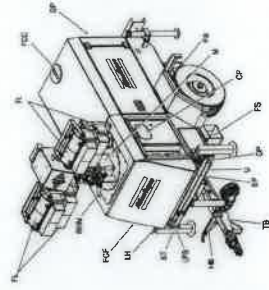


- CP Control panel
- DP Data plate
- EP Earth pin (optional)
- FL Floodlights
- FCC Filling cap coolant

HiLight H4

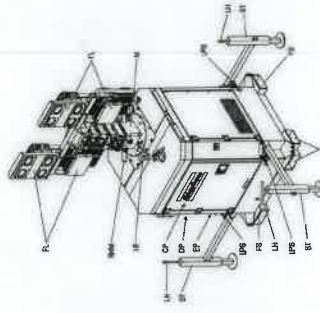

- FCF Filling cap fuel
- FS Forklift slots
- HB Handbrake
- LE Lifting eye
- LPS Locking pin stabilizer

HiLight B5+

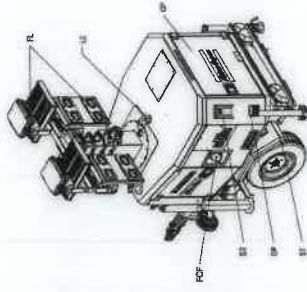

- LH Levelling handle, to adjust the height of the supporting foot
- M Mast
- RHM Rotating handles mast
- ST Stabilizer and supporting foot

HiLight H5+

Technical Characteristics


	HILIGHT H4	HILIGHT B5+	HILIGHT H5+
Rated frequency / Voltage	Hz/V	50 / 230	50 / 230
Rated prime power	kW	6	2,7
Spot light	W	4 x 1000 Metal Halide	4 x 350 LED
Fuel tank capacity	l	110	130
Autonomy lamps ON	h	65	260
Sound power level	dB(A)	90	88
Weight	Kg	1195	980
Dimensions in transport & fix bar L x W x H	m	2,7 x 1,3 x 2,3	1,2 x 1,2 x 2,5
			2,3 x 1,3 x 2,5

MAXIMUM LIGHT COVERAGE (20 luxes media)



2854 9710 00

CUBICLE

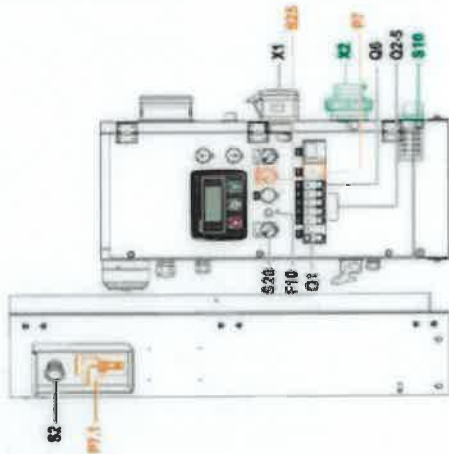

- F10 Fuse
- P7.1 Photocell option
- Q1 General circuit breaker
- Q2-5 Circuit breaker for lamps
- S20 Power switch
- S50/S51 UP/DOWN button
- S2 Emergency button
- X1 Outlet socket
- X2 Inlet power selector
- X2 Inlet socket for mains connection

Not all models follow this drawing, please check instruction book.


Lc1003



Check instruction book for other functionalities.


POSITIONING FLOODLIGHTS

1. Adjust the rotation by loosening the bolt on the bracket of the support (A). Fix bolts afterwards.
2. Loose the wing screw (B) and untighten the handle (C) slightly, select an inclination and tight wing screw and handle again.
3. Recommended tilting 70°.

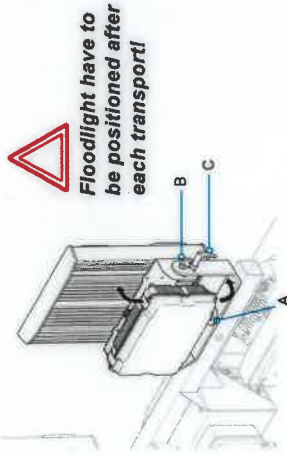

POSITIONING MAST

1. Unlock the locking pin (D), located on its rotating base.
2. Rotate the light tower using the mast handles (E).
3. Lock the mast using again the pin.

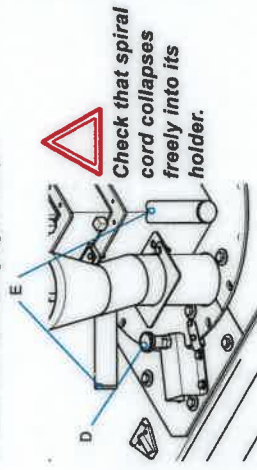

CONNECTING APPLIANCE

1. Wait 3- 4 minutes before connecting the appliances to allow the engine to warm up.
2. Plug in the socket X1.
3. Switch on circuit breaker Q6.

This Quick Start Guide does not replace the Instruction Manual delivered with the machine. Please refer to the Instruction Manual for complete safety, operation and maintenance guidelines. For a copy please contact your local Atlas Copco customer center, or visit: www.atlascopco.com

MANUAL MODE:START (3)

1. Switch S20 to position 1 (ON) to power the controller.
2. Push the START button to start the engine.
3. Extend the mast.
 - a. Switch ON Q1.
 - b. Make sure Q2-Q6 are OFF.
 - c. Use UP and DOWN buttons to adjust height.
4. Make sure mast is in desired operating position.
5. Controller will check if functioning conditions are OK.

SWITCH ON THE LAMPS.

- a. Switch ON circuit breaker Q2-Q5.
- b. Push the AUTO button
- c. Sequentially the lamps will start every 2 seconds.

MANUAL MODE:STOP (3)

1. SWITCH OFF THE LAMPS.
 - a. Push the START button to shut down the lamps.
 - b. Switch OFF circuit breakers Q2-Q5.
2. Lower the mast using the button.
3. Push the STOP button engine will cool down during 30 secs till it stops.
4. Switch S20 to position 0 (OFF)

REMOTE MODE: START/STOP (3)

Only applicable with standard timer or optional "Photocell" (P7 and P7.1)

1. Switch S20 to remote position the controller.
2. Switch ON Q1.
3. Switch S25 in desired position.
 - a. MANUAL check MANUAL MODE section.
 - b. AUTO. Once the Lc1003 receives a remote signal (time or light level) the mast will extend/low automatically.



A buzzer will indicate that the mast is moving!

4. Switch ON the circuit breaker Q2-Q5.
5. Push the AUTO button and will start or stop remotely
6. Once REMOTE MODE operation is finished, Switch S20 to position 0 (OFF)

Check sticker in the unit.




OPTIONS (4)

1. Photocell.
2. Auto tilt.
3. MSA connector.
4. External power input (230VAC).
 - a. Switch S10 to position 2 (external mains).
 - b. Use X2 socket to feed the light tower.
 - c. Switch ON circuit breakers Q2-Q5.


Note: all lights will ignite at the same time.

For more information check Instructions Manual. Not all options are available for all models.


SET TIMER

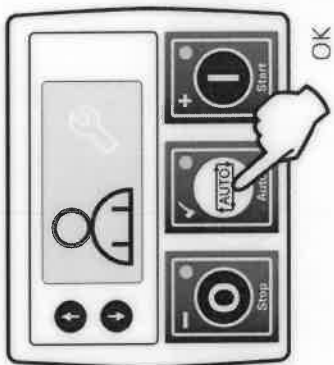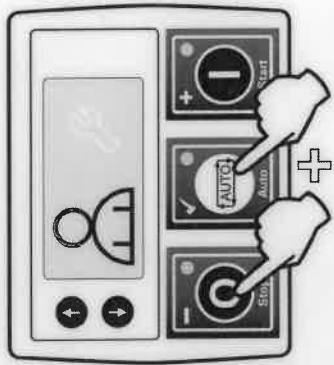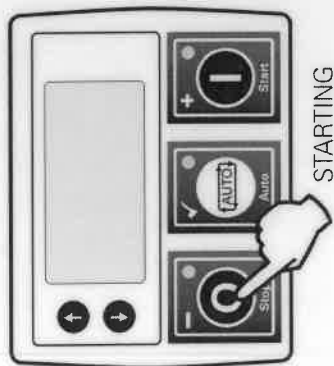


EDIT (1)

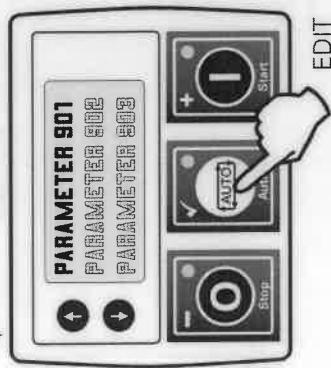


SET (2)

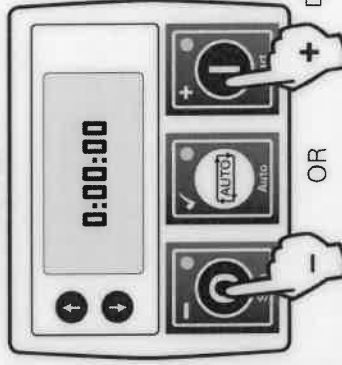

CONFIRM (3)

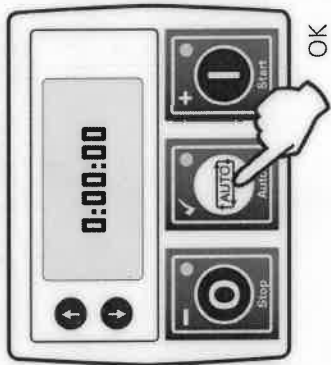

NEXT (4)

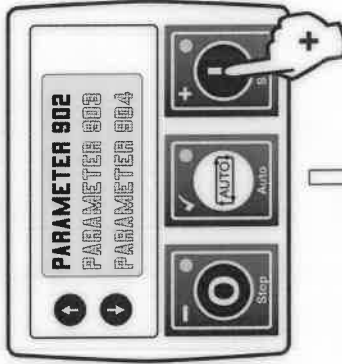

Configuration Parameters-Scheduler	
901	Enable Scheduler On (1) Off (0)
902	Schedule Run On (1) On or Off Load Off (0)
903	Schedule Period Weekly (0) Monthly (1) 0:00:00
904	Scheduler (1) Start Time 0
905	Scheduler (1) Start Day (1=Monday) 1, 2, 3, 4
906	Scheduler (1) Start Week
907	Scheduler (1) Duration 0:00:00
908	Scheduler (2) Start Time 0:00:00
...	



REPEAT STEPS 1 - 4 FOR EVERY PARAMETER AND FINISH SAVING ALWAYS 902=1

IF 903 = 0 → PARAMETERS: 906/910/914/918/922/926/930/934 will be DISABLE

905: 1 = MONDAY, 2 = TUESDAY, 3 = WEDNESDAY, 4 = THURSDAY, 5 = FRIDAY, 6 = SATURDAY, 7 = SUNDAY


8 EVENTS CONFIGURATION: (EVENT1=904-907/EVENT2=908-911/
EVENT3=912-915/EVENT4=916-919/EVENT5=920-923/EVENT6=924-927/
EVENT7=928-931/EVENT8=932-935)

FOR DISABLE EVENT:

ALL 901=0



SINGLE set Scheduler Duration: 907/911/915/919/923/927/931/935 = 00:00:00

SET CLOCK

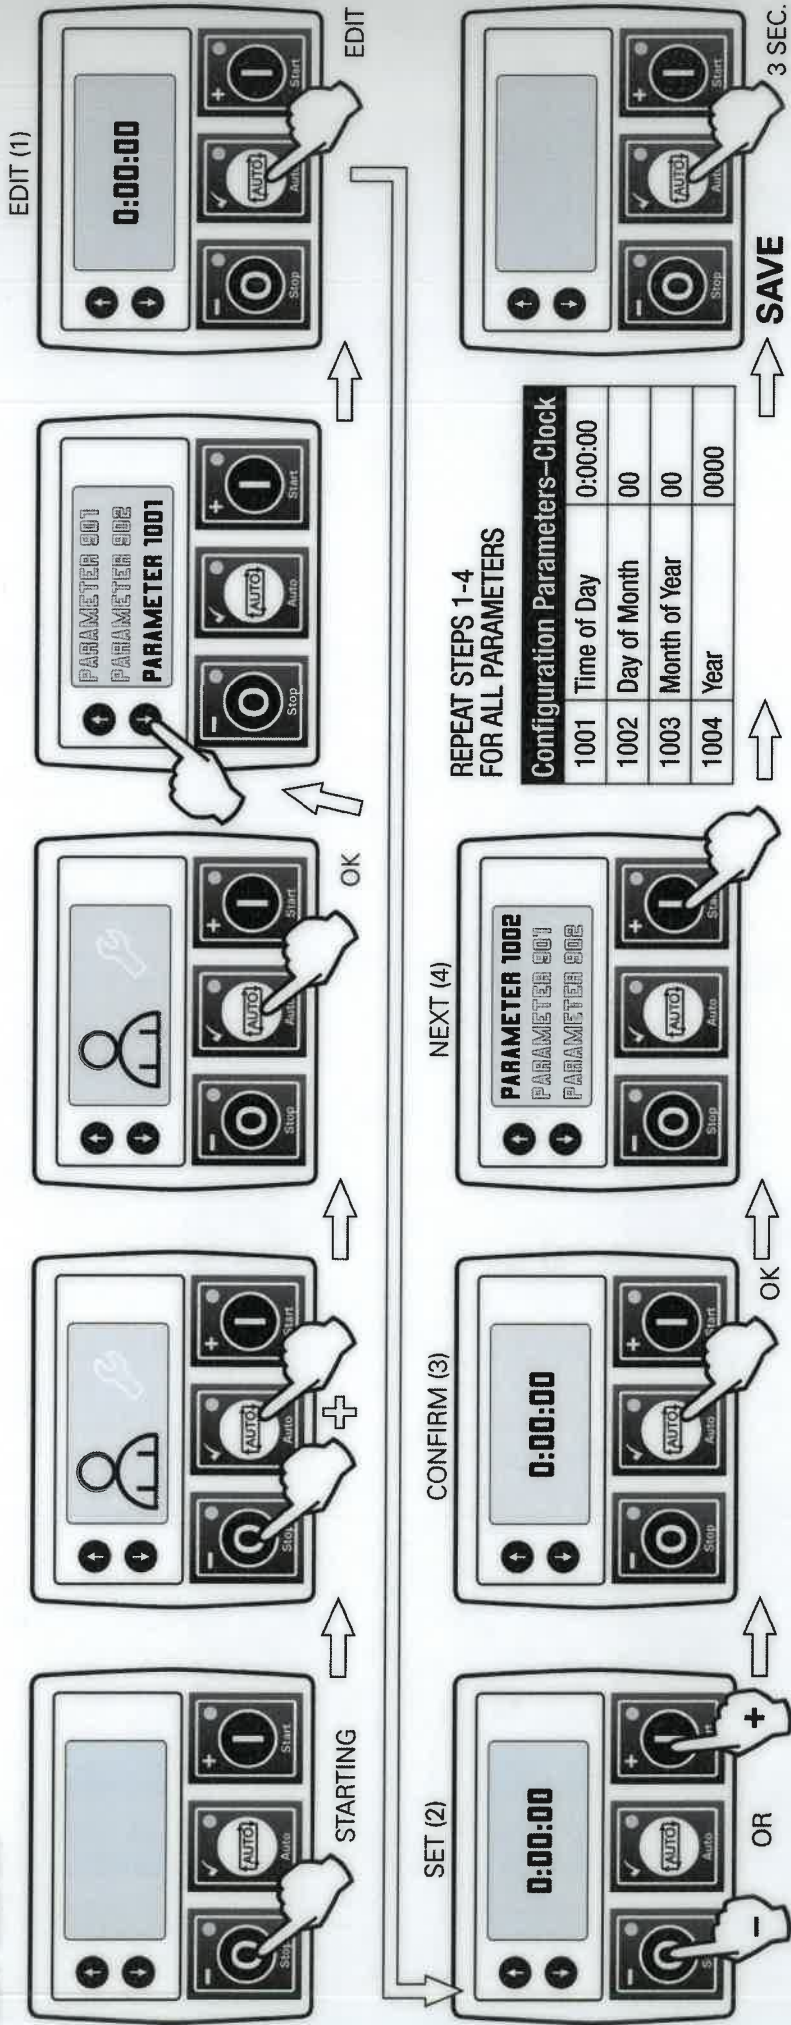

PHOTOCELL SETTING

Recommended level 50 Lux
 HOW TO USE IT: remote start instructions

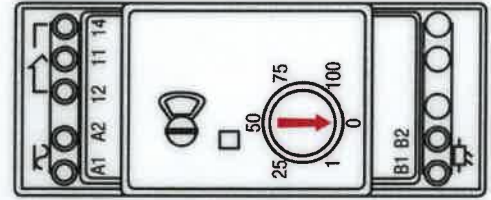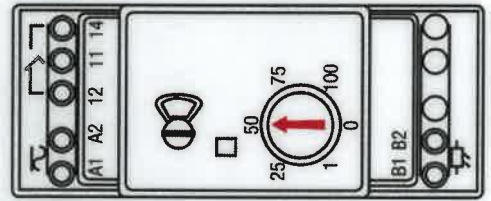

RECOMMENDED BEFORE TRANSPORT

Disable the option → 0 Lux