



HAZARD IDENTIFICATION & RISK ASSESSMENT





#### MANITOU M (-X) 30-50-70

2023-09-14 / revision A

MANITOU AUSTRALIA - 94 - 96 Euston Road Alexandria NSW 2015 Telephone +61 2 9517 3174 - Fax +61 2 9517 3274 Email info.mau@manitou-group.com - Web www.au.manitou.com ABN 42 114 388 591 - ACN 114 388 591



#### HAZARD IDENTIFICATION AND RISK ASSESSMENT OF PLANT

Organisation:	MANITOU GROUP / MANITOU AUSTRALIA Pty. Ltd 94-96 Euston Road, Alexandria, NSW, 2035 - ABN 42 114 388 591
Plant Make & Model:	MANITOU M (-X) 30-50-70
Risk Assessment Method Used:	SAFETY REVIEW
Ref Documents used:	AS4024.1301 – 2006, NSW WHS Regulation 2011 AS/NZS4360 – 2004 (risk management guidelines) & HB436:2004 (Handbook for AS/NZS4360) AS2359.1 – 2015, AS2359.2 – 2013 and all of the AS2359 group where relevant
Date / Version:	2023-09-14 / revision A

This Hazard Identification and Risk Assessment has been prepared to identify reasonably foreseeable hazards to health and safety arising from an end-user / owner operational point of view, including transport, operation and maintenance of the plant.

It is based on information available at the date of publication. It includes suggestions for supplementary risk control measures that can be implemented to avoid injuries and/or fatalities due to these hazards. These suggestions are not exhaustive and can be completed, adapted by the plant's owner and or any other stakeholder.

Although every attempt has been made to identify reasonably foreseeable circumstances, no guarantee as to the completeness of this assessment is implied or provided. It is the responsibility of the plant owner / end-user to carry-out their own risk assessment adapted to their specific work site, application, environment conditions and regulations. To assist, this document can be used as a base and guideline.

Manitou will not be responsible for the actions or inactions of the Plant Owner, Site Management, the Operator and or Other Personnel. It is also the plant owner's responsibility to maintain and use the plant adequately according to the manual's instructions and current laws and guidelines. The plant owner must ensure the operator is competent and holds all relevant qualifications and or licenses to operate the plant as required by Law and or WorkCover.

The assessment must be reviewed by all stakeholders and revised:

(a) Having regard to the options and general arrangement of miscellaneous equipment/facilities that may be provided on the plant according to the end users requirements or specification;

(b) According to the particular circumstances under which the plant is used and maintained;

(c) As new hazards are identified or as risks are reassessed;


(d) As new or revised control measures are implemented;

(e) As and when work procedures are altered.

Any comment on this Risk Assessment, please contact Manitou Australia: info.mau@manitou-group.com

## M-X30 M-X50 M-X70


Lifting         Max. capacity         Lifting height (standard mast)         Max. lifting height         Unladen time (standard mast)         Lifting         Lowering         Tyres         Forward         Backward         Braking         Service brake         Parking brake         Engine         Type         Cubic capacity         Power	3.7 6.0 0.6	oil immersed n	5000 kg at 6 3.74 6.04 0.4 0.4 18-19.5 A224 18 PR TL 10R17.5 G291 134M multi-disc braking on 1 nulti-disc braking on 1	0 m m/s m/s 18 - 22.5 MPT 06 16PR TL (445 / 65 R22.5) 340 / 80 - R18 XMCL TL 143A8 the front axle	7000 kg at 600 mm CDG 4.00 m 4.50 m 0.4 m/s 0.4 m/s 18 R 19.5 XF TL (445 / 65 R19.5) 265 / 70 R19.5 HTR1
Lifting height (standard mast) Max. lifting height Unladen time (standard mast) Lifting Lowering Tyres Forward Backward Braking Service brake Parking brake Engine Type Cubic capacity Power	3.7 6.0 0.6 0.5 14.5 R 20 - MPT80 TL 18 PR 143 G/J 10R17.5 G291	0 m 0 m m/s 16.5 / 85 - 24 SGI 14PR 10.5 / 80 - 18 TG42 TL 10PR oil immersed oil immersed r	3.7/ 6.0/ 0.4 0.4 18-19.5 A224 18 PR TL 10R17.5 G291 134M multi-disc braking on t	0 m 0 m m/s m/s 18 - 22.5 MPT 06 16PR TL (445 / 65 R22.5) 340 / 80 - R18 XMCL TL 143A8 the front axle	4.00 m 4.50 m 0.4 m/s 0.4 m/s 18 R 19.5 XF TL (445 / 65 R19.5) 265 / 70 R19.5
Max. lifting height Unladen time (standard mast) Lifting Lowering Tyres Forward Backward Braking Service brake Parking brake Engine Type Cubic capacity Power	6.0 0.6 0.5 14.5 R 20 - MPT80 TL 18 PR 143 G/J 10R17.5 G291	0 m m/s m/s 16.5 / 85 - 24 SGI 14PR 10.5 / 80 - 18 TG42 TL 10PR oil immersed oil immersed r	6.01 0.4 0.4 18-19.5 A224 18 PR TL 10R17.5 G291 134M multi-disc braking on t	0 m m/s m/s 18 - 22.5 MPT 06 16PR TL (445 / 65 R22.5) 340 / 80 - R18 XMCL TL 143A8 the front axle	4.50 m 0.4 m/s 0.4 m/s 18 R 19.5 XF TL (445 / 65 R19.5) 265 / 70 R19.5
Unladen time (standard mast) Lifting Lowering Tyres Forward Backward Braking Service brake Parking brake Engine Type Cubic capacity Power	0.6 0.5 14.5 R 20 - MPT80 TL 18 PR 143 G/J 10R17.5 G291	m/s m/s 16.5 / 85 - 24 SGI 14PR 10.5 / 80 - 18 TG42 TL 10PR oil immersed oil immersed r	0.4 0.4 18-19.5 A224 18 PR TL 10R17.5 G291 134M multi-disc braking on t	m/s m/s 18 - 22.5 MPT 06 16PR TL (445 / 65 R22.5) 340 / 80 - R18 XMCL TL 143A8 the front axle	0.4 m/s 0.4 m/s 18 R 19.5 XF TL (445 / 65 R19.5) 265 / 70 R19.5
Lifting Lowering Tyres Forward Backward Braking Service brake Parking brake Engine Type Cubic capacity Power	0.5 14.5 R 20 - MPT80 TL 18 PR 143 G/J 10R17.5 G291	m/s 16.5 / 85 - 24 SGI 14PR 10.5 / 80 - 18 TG42 TL 10PR oil immersed oil immersed r	0.4 18-19.5 A224 18 PR TL 10R17.5 G291 134M multi-disc braking on t	18 - 22.5 MPT 06 16PR TL (445 / 65 R22.5) 340 / 80 - R18 XMCL TL 143A8 the front axle	0.4 m/s 18 R 19.5 XF TL (445 / 65 R19.5) 265 / 70 R19.5
Lowering Tyres Forward Backward Braking Service brake Parking brake Engine Type Cubic capacity Power	0.5 14.5 R 20 - MPT80 TL 18 PR 143 G/J 10R17.5 G291	m/s 16.5 / 85 - 24 SGI 14PR 10.5 / 80 - 18 TG42 TL 10PR oil immersed oil immersed r	0.4 18-19.5 A224 18 PR TL 10R17.5 G291 134M multi-disc braking on t	18 - 22.5 MPT 06 16PR TL (445 / 65 R22.5) 340 / 80 - R18 XMCL TL 143A8 the front axle	0.4 m/s 18 R 19.5 XF TL (445 / 65 R19.5) 265 / 70 R19.5
Tyres Forward Backward Braking Service brake Parking brake Engine Type Cubic capacity Power	14.5 R 20 - MPT80 TL 18 PR 143 G/J 10R17.5 G291	16.5 / 85 - 24 SGI 14PR 10.5 / 80 - 18 TG42 TL 10PR oil immersed oil immersed r	18-19.5 A224 18 PR TL 10R17.5 G291 134M multi-disc braking on t	18 - 22.5 MPT 06 16PR TL (445 / 65 R22.5) 340 / 80 - R18 XMCL TL 143A8 the front axle	18 R 19.5 XF TL (445 / 65 R19.5) 265 / 70 R19.5
Forward Backward Braking Service brake Parking brake Engine Type Cubic capacity Power	TL 18 PR 143 G/J 10R17.5 G291	SGI 14PR 10.5 / 80 - 18 TG42 TL 10PR oil immersed oil immersed r	PR TL 10R17.5 G291 134M multi-disc braking on t	TL (445 / 65 R22.5) 340 / 80 - R18 XMCL TL 143A8 the front axle	(445 / 65 R19.5) 265 / 70 R19.5
Forward Backward Braking Service brake Parking brake Engine Type Cubic capacity Power	TL 18 PR 143 G/J 10R17.5 G291	SGI 14PR 10.5 / 80 - 18 TG42 TL 10PR oil immersed oil immersed r	PR TL 10R17.5 G291 134M multi-disc braking on t	TL (445 / 65 R22.5) 340 / 80 - R18 XMCL TL 143A8 the front axle	(445 / 65 R19.5) 265 / 70 R19.5
Braking Service brake Parking brake Engine Type Cubic capacity Power		oil immersed	134M multi-disc braking on t	XMCL TL 143A8	
Service brake Parking brake Engine Type Cubic capacity Power		oil immersed n			
Parking brake Engine Type Cubic capacity Power		oil immersed n			
Engine Type Cubic capacity Power		oil immersed n			
Type Cubic capacity Power		1		the front axle	
Type Cubic capacity Power		1	PERKINS		
Cubic capacity Power			104 D - 44 T - STAGE 3	BA	
Power			4 cyl 4400 cm <sup>3</sup>		
			95 HP / 70 kW		
Max. torque			392 Nm at 1400 rpm		
Injection			direct		
Cooling			water		
Laden drawbar pull	4250 daN	5870 daN	6230 daN	10360 daN	7960 daN
Transmission			torque converter		
Gearbox		mech			Powershift
Reversing shift			electro-hydraulic		
Number of gears (forward/reverse)		4	/4		4/3
Max. travel speed	241 //	,		241	
(may vary according to applicable regulations)	24 km/h	27 km/h	22 km/h	24 k	xm/h
Front axle differential lock	yes	no	yes	no	yes
Control for 2/4 wheel drive	no	yes	no	yes	no
Controls		hydro-prop	portional levers for all n	novements	
Hydraulics	85 l/min	- 185 bar	85 l/min	- 210 bar	85 l/min - 230 bar
Capacities					
Hydraulic oil		64	4		108
Fuel		8	5		115
Unladen weight (with standard mast and forks)	5430 kg	5620 kg	7470 kg	7660 kg	9810 kg
Dimensions					
1. Front wheel centre to carriage	0.81 m	0.81 m	0.76 m	0.76 m	0.80 m
2. Wheelbase	2.10 m	2.10 m	2.12 m	2.12 m	2.49 m
3. Rear wheel centre to rear face	0.74 m	0.74 m	0.86 m	0.86 m	0.86 m
4. Overall length to carriage	3.63 m	3.63 m	3.75 m	3.75 m	4.16 m
<b>5.</b> Ground clearance	0,38 m	0.40 m	0,36 m	0.38 m	0.39 m
<b>6.</b> Inside tyre width	1.67 m	1.67 m	1.62 m	1.62 m	1.70 m
7. Overall width	2.10 m	2.10 m	2.10 m	2.10 m	2.15 m
8. Overall height	2,46 m	2.54 m	2,42 m	2.50 m	2.44 m
Standard forks (length x width x thickness)	1200 x 125 x 40 mm	1200 x 125 x 40 mm	1200 x 150 x 60 mm	1200 x 150 x 60 mm	1200 x 150 x 70 mm
Turning radius	4.10 m	4.10 m	4.16 m	4.16 m	4.21 m
Tilt standard mast (forward/backward)	6° / 12°	6° / 12°		15° / 15°	
Noise and vibration	• , 1L	• , 1L		10 / 10	
Noise at driving position (LpA)	72	dB		76 dB	
Environmental noise (LwA)		ł dB		103 dB	
Vibration to whole hand/arm	104	·	<2.5 m/s <sup>2</sup>	200 00	

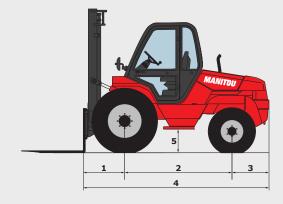



### M-X30 M-X50 M-X70


## Charts without sideshift attachment

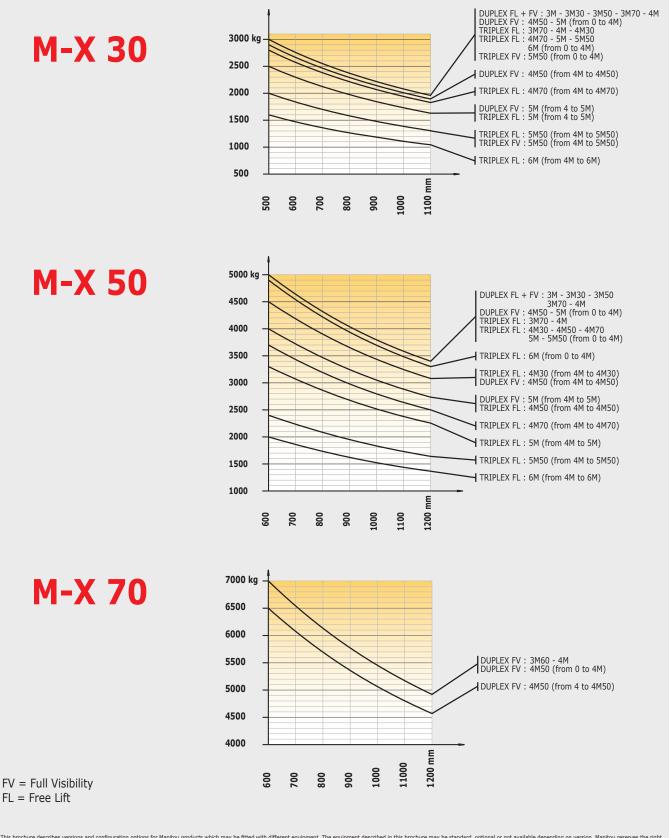

This brochure describes versions and configuration options for Manitou products which may be fitted with different equipment. The equipment described in this brochure may be standard, optional or not available depending on version. Manitou reserves the right to change the specifications ishown and described at any time and without prior warning. The manufacturer is not liable for the specifications given. For more information, contact your Manitou dealer. Non-contractual document. Product descriptions may differ from actual products. List of specifications is not comprehensive. The logos and visual identity of the company are the property of Manitou and may not be used without authorisation. All rights reserved. The photos and diagrams contained in this brochure are provided for information only. MANITOU BFS 4. Limited company with board of directors - Share capital: 39,547,824 euros - 857 802 508 RCS Nantes



### Charts with sideshift attachment

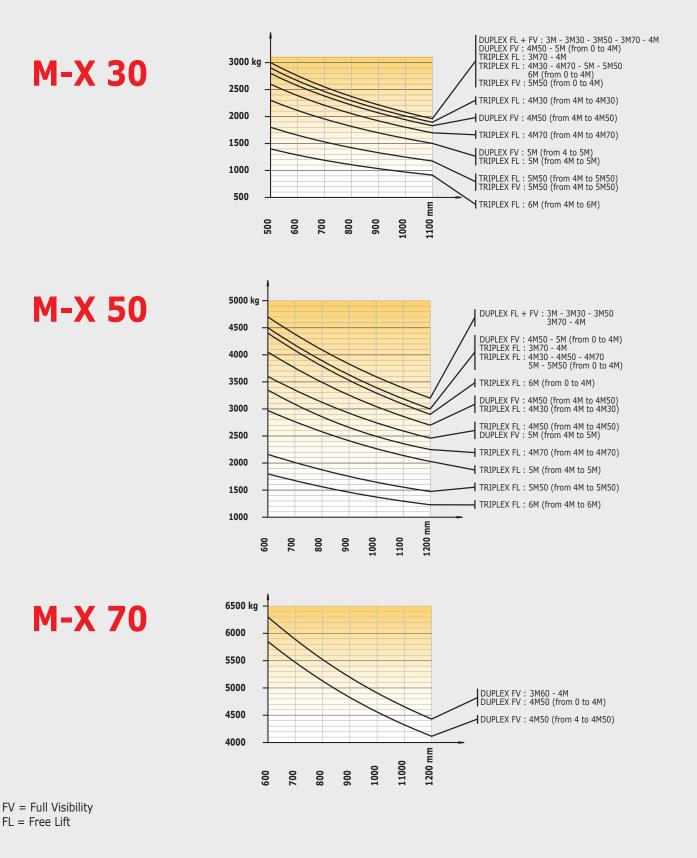

This brochure describes versions and configuration options for Manitou products which may be fitted with different equipment. The equipment described in this brochure may be standard, optional or not available depending on version. Manitou reserves the right to change the specifications ishown and described at any time and without prior warning. The manufacturer is not liable for the specifications given. For more information, contact your Manitou dealer. Non-contractual document. Product descriptions may differ from actual products. List of specifications is not comprehensive. The logos and visual identity of the company are the property of Manitou and may not be used without authorisation. All rights reserved. The photos and diagrams contained in this brochure are provided for information only. MANITOU BFS 4. Limited company with board of directors - Share capital: 39,547,824 euros - 857 802 508 RCS Nantes



### NOTES

#### DEFINITIONS

MGMT: Refers to the person legally responsible for the use of the unit; it generally means the employer, the company or the legal entity that has responsibility under the Health and Safety legislation in the State or Territory in which the unit is being used.

OP: Is the operator, authorized by management and responsible for the operation and preoperational inspection and use of the unit.

OWNER: Is the person or organisation that owns the unit and is responsible for its condition and state of repair.

MEWP: Mobile Elevating Work Platform

#### **GENERAL NOTES**

1. This Risk Assessment has been prepared by MANITOU for the subject plant and is not transferable to other plant or parties.

2. Item Numbers refer to hazards, which can exist if the unit is not adequately maintained – e.g. Guards not fitted, gauges fail to correctly display readings etc. The measures listed to control risks arising from this type of hazard can include reference to operating procedures. Operating Procedures cannot make the operator responsible for inadequate

maintenance/repairs etc. but is only intended to ensure that the procedures include the need for the operator to report any faults detected.

3. This Hazard Identification and Risk Assessment document has been prepared based on information available at the date of publication. In order to ensure this Hazard Identification, Risk Assessment, Risk Control document is both accurate and complete; "Management of the Unit" must review it:

(a) According to the particular circumstances under which the plant and/or process is used and maintained,

(b) As new hazards are identified or as risks are re-assessed,

(c) As new or revised control measures are implemented,

(d) As and when work procedures are altered.

Although every attempt has been made to identify reasonably foreseeable circumstances, no guarantee as to the completeness of this assessment is implied or provided.

4. "Preliminary" is placed in this document to indicate that the Controls listed in Columns C and E are a practicable way of controlling the risks arising out of the Hazards listed in Column
 B. "Preliminary" status remains in place until the "Management of the Unit" agrees that the assessment is complete and that the controls proposed are practicable.

5. Column Y has been provided on the document to allow the "Management of the Unit" to record that their Hazard Identification, Risk Assessment, and Risk Control process has been completed and that all controls are in place and operating. When Column Y is completed, the document becomes a record of the completeness of the process and the documentation (subject to any changes which need to be further reviewed in accordance with Item 3 above).

6. The determination of risk, column D, is a subjective assessment based on the following factors: exposure – the number of times humans are exposed to the risk, the probability of the hazard arising, and the consequence of the hazard – death or serious injury.



#### **RISK MANAGEMENT**

Risk management is a five-step process for controlling exposure to health and safety risks associated with hazards in the workplace. To properly manage exposure to risks, a person must:

(a) Identify hazards;

- (b) Assess risks that may result because of the hazards;
- (c) Decide on appropriate control measures to prevent or minimise the level of the risks;
- (d) Implement control measures; and
- (e) Monitor and review the effectiveness of the measures.

Hazards and risks are NOT the same thing.

A hazard is something with the potential to cause harm. This can include substances, plant, work processes or other aspects of the work environment. **Risk** is the likelihood that death, injury or illness might result because of the hazard.

As examples:

- The hazard is electricity—the risk is the likelihood that a worker might be electrocuted because of exposure to electrical wires that are inadequately insulated.
- The hazard is a 40 kg bag-the risk is the likelihood that a worker might suffer back strain from manually lifting 40 kg bags.
- The hazard is carbon monoxide—the risk is the likelihood that a worker might suffer carbon monoxide poisoning because they are using a petrol-operated pump in a well.

When undertaking risk management:

- (a) Involve workers in the process; (it is legal requirement that all stakeholders are consulted)
- (b) Don't use it to justify a decision that has already been made;
- (c) Consider good industry practice; and be aware of the current State of Knowledge in relation to the hazard
- (d) Record any risk management activities undertaken.

Under the relevant Workplace Health and Safety Acts, to properly manage exposure to risks, a person should consider the appropriateness of control measures in the following order (sometimes referred to as the 'Hierarchy of Control'):

- (a) Eliminating the hazard or preventing the risk; or
- (b) If eliminating the hazard or preventing the risk is not possible, minimising the risk by measures that must be considered n the following order:

(i) Substituting the hazard giving rise to the risk with a hazard giving rise to a lesser risk;

- (ii) Isolating the hazard giving rise to the risk from anyone who may be at risk;
- (iii) Minimising the risk by engineering means;
- (iv) Applying administrative measures; and
- (v) Using personal protective equipment.

Examples of subparagraph (iii)—redesigning work, plant, equipment, components or premises. Examples of subparagraph (iv)—training, reasonable hours of work.

The higher in the hierarchy of control, the better and more reliable the control is. In practice, several control options are often used in combination. Personal protective equipment is usually used in conjunction with other control measures.

Control measures must be implemented before work commences.

# 

#### **RISK RANKING MATRIX**

#### CONSEQUENCE TABLE

Level Descriptor Examples						
1	Insignificant	No injuries, low financial loss				
2 Minor First aid treatment, on-site release immediately contained, medium financial loss						
3	Moderate	Medical treatment required, on-site release contained without assistance, high financial loss				
4	Major	Extensive injuries, loss of production capability, off-site release with no detrimental effects, major financial loss				
5 Catastrophic Death, toxic release off-site with detrimental effect, huge financial loss						

NOTE: Measures used should reflect the needs and nature of the organisation & activity under study, e.g. in high risk industries multiple fatalities and fatalities may be separated into several levels.

#### LIKELIHOOD TABLE

Level	Descriptor	Examples
Α	Very likely	Is expected to occur in most circumstances
в	Will probably occur in most circumstances	
С	Moderate	Might occur at some time
D	Unlikely	Could occur at some time
E	May occur only in exceptional circumstances	

NOTE: Measures used should reflect the needs and nature of the organisation and activity under study.



#### MATRIX TABLE

		CONSEQUENCE									
LIKELIHOOD	Catastrophic (5)	Major (4)	Moderate (3)	Minor (2)	Insignificant (1)						
Almost certain (A)	Extreme	Extreme	Extreme	High	High						
Likely (B)	Extreme	Extreme	High	High	Moderate						
Moderate (C)	Extreme	Extreme	High	Moderate	Low						
Unlikely (D)	Extreme	High	Moderate	Low	Low						
Rare (E)	High	High	Moderate	Low	Low						

The risk level read from the matrix defines the priority for action or the importance for review. Again the actions required for a particular risk level should be customized to the particular circumstances.

Possible actions are:

E= Extreme risk—consider stopping work (who decides which boxes contain E?)

H= High risk—should be reduced as soon as possible.

M= Moderate risk-management responsibility and action dates must be specified

L= Low risk—manage by routine procedures

The matrix suggests four different action levels but could equally be divided into a larger number of priority levels. There is merit in assigning all events that have the potential for a fatality priority 1 unless they are so unlikely that they are not expected ever to occur. This ensures that controls for preventing fatalities receive priority attention even where they are believed to be good.

Notes on using the matrix method

The strengths of this method are:

• The analysis provides a ranking of risk.

• The method encourages the risk analyst or team to understand the hazard in order to rank the significance of the risk.

The major problems involved in applying such a method are:

People guess levels of likelihood and consequence without sufficient analysis of the hazard or existing controls.

• The analysis methodology is applied to a risk where the circumstances of occurrence are rare. For example, suppose a person was exposed to a hazard for a short period of time, once every 10 years. Suppose also that that hazard was almost certain to cause fatality upon each exposure. It would be incorrect to use a simple methodology whereby the likelihood of the consequences was ranked relatively low at once in 10 years. In that particular example the likelihood of fatality is certain once exposure occurs. An amended methodology will be required to deal with those circumstances such as the fine risk score calculator.

• Since judgements of consequences and likelihood are highly subjective the matrix does not work well as a decision tool, particularly concerning the need for action on high consequence low probability risks.

#### WARNING

The risk ratings used in this document are intended to stimulate discussion from the parties affected by the use of the subject machine; they shall not be adopted as the most appropriate risk rating without sufficient consideration by the designer, manufacturer, management or user of the plant.



### **VERSION HISTORY**

Date	Version Number	Note
2023-09-14	А	



	ENT: MANITOU M (-X) 30-50-70				Date	e / Version: 2023-09-14 / revision A	PRELIMINARY	/ (Refer to "Not	es" section)
Α	В	С	D1	D2	D	E	F	Х	Y
Hazard No.	Hazard Description - (the situation or parts of plant which could cause injury or illness)	Is there any risk? Describe the risk control measures ALREADY implemented	Likelihood	Consequence	Risk Level	Proposed SUPPLEMENTARY risk control measure	Are the control measures practicable? Yes/No	For Action by Whom	Confirmation that the necessary action has been completed
This risk assess	ment does not include hazards associated with the us	e of a man basket or platform. Use of Man basket or	platfor	m on	this ty	pe of equipment is prohibited.			
0	General – Device selection and use								
0.1	Persons could be injured when following a poor system of work in relation to the operation of this device.	Operating manual provided which includes maintenance instructions, detailing specifications, limitations and residual hazards associated with the operation of the machine. Warning in operator's manual stating that before operating the machine the operator must read and understand the safety instructions and operating instructions.	D	4	н	Prepare a documented system of work having regard to the operating specification and limitations as detailed in the owners operating manual; Verify that the procedure (including maintenance) covers all modes operation of the machine and is a practicable solution; Instruct and train the operator in its use; Ensure operator's manual is with the machine at all times.			
0.2	Persons could be injured if the device is not suitable for the required task.	Machine specifications are included in operator's manual.	D	4	н	Ensure that the unit is adequately rated in terms of capacity, height and reac rated inclination and mass; having regard to the required task, the si conditions and the environment; Source another machine if the specifications do not match the requirements for the task.	te		
0.3	Persons could be injured or injure others when operating the unit without sufficient information, instruction, training and supervision.	Operating and maintenance manuals provided detailing specifications, limitations and residual hazards associated with the operation of the machine. Warning in operator's manual that the machine is to only be used by personnel who are properly trained and qualified. Warning decal stating that only authorised drivers are permitted to operate lift truck. Warning in operator's manual that the operator's manual is to be in good condition and in the place provided on the lift truck. High risk work license required to operate forklift.	D	4	н	Ensure that all standard work procedures (SWP's) are effectively implementer Ensure that the operator(s) have read and understand the training ar instructions (which must include Manufacturer's and local information); Ensure that only authorised and properly trained personnel operate the machine.	nd		
0.4	Injury as a result of site specific hazards.	General requirements and general list of site-specific hazards located in manual.	С	3	н	Ensure operators are able to identify particular hazards that may be encountered at the site and implement actions to ensure that they are addressed by appropriate means; Ensure operators conduct a site hazard assessment before use; Ensure operators implement appropriate systems to eliminate the hazards adequately control the risks associated with the hazards identified; Ensure operators feedback information relating to new hazards identified s they may be reviewed and measures implemented in a training package; Ensure that if operators are uncertain how to address a particular site hazards that they seek advice from a competent person.	re or so		
0.5	Injury due to unauthorised use.	Ignition key switch is fitted. Shut down procedure in operator's manual includes instructions to remove the ignition key.	D	4	н	Ensure that the ignition key is removed before leaving unattended; Ensure that the machine is not lent or sub-hired to any unauthorized person; Ensure that only authorized personnel use the forklift.			

egt)		A	M/1	Π	U
	HAND	DLING	YOUR	WOF	RLD

RISK ASSESSME	NT: MANITOU M (-X) 30-50-70				Date	/ Version: 2023-09-14 / revision A	PRELIMINARY	(Refer to "Not	es" section)
Α	В	C	D1	D2	D	E	F	х	Y
Hazard No.	Hazard Description - (the situation or parts of plant which could cause injury or illness)	Is there any risk? Describe the risk control measures ALREADY implemented	Likelihood	Consequence	Risk Level	Proposed SUPPLEMENTARY risk control measure	Are the control measures practicable? Yes/No	For Action by Whom	Confirmation that the necessary action has been completed
	Injuries exacerbated as a result of insufficient communication, procedures or equipment following or during an emergency.		D	4	н	Ensure that operators are aware of the emergency procedures specified in the manual; Establish and audit routine emergency procedures; Ensure that all operators are equipped with portable communications equipment where necessary; Establish protocols and procedures to ensure a timely and appropriate response in emergencies; Ensure all operators report in when attending site and on a routine basis thereafter; Periodically verify emergency equipment and supplies.	2		
0.7	Failure due to unauthorized alteration or interference.	Note provided in operator's manual prohibiting unauthorised modification of the machine.	E	4	н	Seek advice for all modifications/repairs considered during life of machine; Ensure that no additions or alterations are performed on the machine withou written approval from the manufacturer.	t		
0.8	Injuries exacerbated as a result of working solo.		D	5	E	Ensure that workers do not work solo; Establish protocols and procedures to ensure a timely and appropriate response in emergencies; Ensure all operators report in when attending site and on a routine basis thereafter.			
0.9	Persons injured due to unrecognized hazard.	Preliminary hazard ID prepared and provided for review.	С	5	Е	Ensure that each party performs their own risk assessment and does not rely on a risk assessment prepared or intended for other parties; Update hazard ID as necessary; Implement risk control measures as necessary having regard to the hierarchy of control measures available.			
	Due to failure to observe or rectify safety upgrades from manufacturer.	Local importer keeps database of customers who purchased this model and attachments from them.	E	3	м	Ensure that the owner of each machine is registered with the manufacturer; Periodically check the status in respect of safety bulletins or upgrades applying to the machine; Ensure that safety upgrades provided by the manufacturer are implemented; Ensure the manufacturer is advised when the machine is disposed of or sold.	,		
	Strains/sprains when performing certain maintenance activities with the unit.	Maintenance instructions provided in operating and maintenance manuals.	С	3	н	Establish appropriate work procedures for all anticipated maintenance issues arising; Periodically review these SWP's.	6		
0.12	Persons may be injured as the result of poor maintenance and/or adjustment procedures.	Maintenance instructions provided in operating and maintenance manuals.	D	4	н	Ensure that the unit is tested by a competent person prior to being returned to normal service after repairs and/or adjustment of critical components o systems.	r		
0.13	Persons injured handling heavy or unsupported items.		D	3	М	Instruct personnel in respect of proper maintenance procedures including the necessity to support items during maintenance.			
	Persons could be injured if sunlight or bright lights in close proximity impair the operator's vision.		D	2	L	Instruct the operator in relation to the sighting of lights; Ensure that operators wear appropriate PPE depending on the site conditions.			

A MA	NITDU
HANDLING	YOUR WORLD

RISK ASSESSMI	ENT: MANITOU M (-X) 30-50-70				Date	/ Version: 2023-09-14 / revision A	PRELIMINARY	(Refer to "Not	es" section)
A	В	C	D1	D2	D	E	F	х	Y
Hazard No.	Hazard Description - (the situation or parts of plant which could cause injury or illness)	Is there any risk? Describe the risk control measures ALREADY implemented	Likelihood	Consequence	Risk Level	Proposed SUPPLEMENTARY risk control measure	Are the control measures practicable? Yes/No	For Action by Whom	Confirmation that the necessary action has been completed
1	Mechanical hazards (due to events that may a	ise during normal operation)							
1.1	Crushing hazard								
1.1.1	Operator is crushed as a result of operation – due to the load being lifted.	Operator's seat located in cabin and fitted with a seat belt. The lifting mechanism cannot be reached from the normal operating position. Cabin affords operator protection from falling objects. FOPS is tested and certified by the cabin manufacturer. Load backrest installed on all carriage attachments. Warning decals fitted which warn of the danger due to crushing by a falling load and not to stand underneath raised forks.	E	4	Н	Ensure that operators, observe the surroundings and move at appropriate speeds; Ensure that ground personnel are available to observe and take corrective action if necessary; Ensure they are familiar with emergency operation procedures detailed in the operators manual; Ensure that operators are trained with respect of load handling operations; Ensure operators wear the seat belt when operating machine; Ensure that the lifting mechanism is only operated from the operator's seat; Ensure that ground personnel keep clear while the forklift is in operation.	2		
1.1.2	Operator is crushed as a result of operation – in the lifting mechanism.	Operator's seat located in cabin and fitted with a seat belt. Interlocks provided on seat belt and seat so that operation is not possible unless the operator is seated in the normal operating position. The lifting mechanism cannot be reached from the normal operating position.	Е	3	м	Ensure operators wear the seat belt when operating machine; Ensure that the lifting mechanism is only operated from the operator's seat.			
1.1.3	Operator is crushed as a result of operation – between forklift and obstacles.	The normal operating position is within the cabin seated in the operator's seat with the seat belt fastened. Warnings in operators manual that the seat belt must be worn and fastened. Interlocks provided on seat belt and seat so that operation is not possible unless the operator is seated in the normal operating position. Warning in manual that the operator is not to exit the forklift without following the proper shutdown procedures, which includes parking on a firm level surface, selecting neutral and applying the park brake.	E	1	L	Ensure that operators, observe the surroundings and move at appropriate speeds; Ensure that ground personnel are available to observe and take corrective action if necessary; Ensure that operators are trained with respect of load handling operations; Ensure operators wear the seat belt when operating machine; Ensure that if the operator must leave the cabin of the forklift that the load is lowered and the handbrake applied.	3		



	<b>B</b>	•				/ Version: 2023-09-14 / revision A	-	v	N N
A Hazard No.	B	C la there are sight?	D1	D2	D	E	F	X	Y
Hazard No.	Hazard Description - (the situation or parts of plant which could cause injury or illness)	Is there any risk? Describe the risk control measures ALREADY implemented	Likelihood	Consequence	Risk Level	Proposed SUPPLEMENTARY risk control measure	Are the control measures practicable? Yes/No	For Action by Whom	Confirmation that the necessary action has been completed
1.1.4	Operator is crushed as a result of operation – between forklift and wheels. Ground personnel crushed whilst machine is operating – in lifting mechanism. Ground personnel crushed whilst machine is operating – between forklift and obstacles.	Controls comply with AS2359.5 Parking brake fitted. Travel selector automatically locks in the neutral position. Normal operating position in the cabin away from hazard. Warning in operator's manual that the seat belt must be worn while operating forklift. Warning decal fitted regarding wearing the seat belt. Safety switch fitted to operator's seat which automatically applies the handbrake if the operator gets out of the seat. Warning signs fitted which warn personnel to keep clear of forklift when it is in use. Optional Flashing light fitted to the cabin roof to increase the visibility of the forklift to bystanders. Horn fitted to enable the operator to warn other personnel of impending collision. Warning signs fitted which warn personnel to keep clear of forklift when it is in use.	D	2	L H	Ensure the controls are maintained as per the maintenance instructions in the manual; Ensure that the operator applies the parking brake when they leave the cabin. Ensure that personnel remain clear of the forklift when in use. Ensure personnel stand clear of the forklift when in operation; Ensure that the windows are maintained in a clean condition; Ensure a traffic management plan is developed in consultation with all stakeholders.			
1.1.7	Ground personnel crushed whilst machine is operating – run over.	Warning in manual regarding precautions for driver to take. Flashing light fitted to the cabin roof to increase the visibility of the forklift to bystanders. Horn fitted to enable the operator to warn other personnel of impending collision. Guards are fitted to the wheels.		4	н	Ensure personnel stand clear of the forklift when in operation; Ensure that the windows are maintained in a clean condition; Ensure a traffic management plan is developed in consultation with all stakeholders.			
1.1.8	Persons exposed to vehicular traffic while operating forklift.	See clause 14.6.1.							
1.1.9	Ground personnel crushed while lifting machine.	Tie down points are provided on the machine and are identified by labels. The unladen mass of the forklift is provided on the manufacturer's plate installed in the cabin. Instructions for lifting are provided in the operator's manual.		4	н	Ensure that operators are aware of the precautions and operational requirements specified in the manual; Ensure persons abide by the instructions Ensure that the crane and lifting slings used to lift the machine has adequate capacity; Ensure that the persons slinging the forklift and operating the crane are competent and hold appropriate certificates of competency.			
1.1.10	Ground personnel crushed when machine is being loaded onto a truck or float via ramps.	Instructions for loading are provided in the operator's manual.	D	4	Н	Ensure that operators are aware of the precautions and operational requirements specified in the manual; Ensure persons abide by the instructions; Ensure that the ramps provided are suited to the vehicle and the gradient is not exceeded.			
1.1.11	Operator's fingers crushed by closing cabin door.	Door seals provide some cushioning effect.	С	1	L	Train operators with respect to this hazard.			
1.2	Shearing hazard								



RISK ASSESSN	1ENT: MANITOU M (-X) 30-50-70				Date	/ Version: 2023-09-14 / revision A	PRELIMINARY	' (Refer to "Not	es" section)
Α	В	С	D1	D2	D	E	F	х	Y
Hazard No.	Hazard Description - (the situation or parts of plant which could cause injury or illness)	Is there any risk? Describe the risk control measures ALREADY implemented	Likelihood	Consequence	Risk Level	Proposed SUPPLEMENTARY risk control measure	Are the control measures practicable? Yes/No	For Action by Whom	Confirmation that the necessary action has been completed
1.2.1	Shearing hazard at mast mechanism.	Warning decals fitted at shear hazard locations. Operator located away from hazard during normal operation.	E	3	м	Ensure personnel are trained and aware of this hazard and keep clear of th forklift when it is in operation.	e		
1.3	Cutting or severing hazard				NS				
1.4	Entanglement hazard			-					
1.4.1	Operator becomes entangled with components in the engine compartment.	All rotating parts are suitably enclosed and guarded against possible entanglement.	D	2	L	Ensure that covers are always in place prior to operation; Ensure that personnel are trained with respect to this hazard and tak appropriate precautions.	e		
1.5	Drawing-in or trapping hazard				NS				
1.6	Impact hazard								
1.6.1	Operator suffers impact injury when the forklift is being driven.	Seat belt provided. Operator's seat provided which offers support to the operator when in the driving position. Fully enclosed operators cabin fitted which provides protection against impacts and collisions. Steering controls are fitted which enable the operator to control the steering direction precisely. Brakes are provided which comply with AS2359.6 with respect to stopping distances and performance. Mud guards are fitted to prevent rocks and debris from being thrown up by the wheels and striking the operator.	D	3	М	Ensure that the seat, seat belts, brakes, steering controls and other system are maintained in accordance with the manufacturers recommendations; Ensure that the operator wears the seat belt whenever driving the forklift.	s		
1.6.2	Impact injuries from falling objects including load being handled.	Operator's seat located in cabin and fitted with a seat belt. Cabin affords operator protection from falling objects. Load backrest installed on all fork carriage attachments.	E	3	м	Ensure that loads are handled at speeds recommended by the manufacturer; Ensure that the load backrest is installed; Ensure that only properly balanced loads are handled; Ensure that the area is free of people before commencing operation.			
1.7	Stabbing or puncture hazard				NS NS				
1.8 1.9	Friction or abrasion hazard High pressure fluid injection hazard				NS				
1.9.1	Injury as a result of a high pressure hydraulic leak while operating the unit.	Operator is located in the cabin away from hydraulic components.	E	2	L	Ensure that personnel are properly trained and aware of the hazard; Ensure that hoses and pipes are replaced with suitably rated items whe required; Ensure that the correct pressure setting is maintained as per the operatio manual instructions.			
1.9.2	Injury as a result of a high pressure hydraulic/fuel leak while maintaining the unit.		D	2	L	Ensure that personnel are trained with respect of this hazard and do not plac hands or other body parts in front of escaping hydraulic fluid.	e		
1.10	Ejection of parts				NS				
1.11	Loss of stability (of machinery and machine parts)	See section 16.1.							
1.12	Slip, trip and fall hazards								



RISK ASSESSM	ENT: MANITOU M (-X) 30-50-70				Date /	Version: 2023-09-14 / revision A	PRELIMINARY	' (Refer to "Not	es" section)
Α	В	C	D1	D2	D	E	F	x	Y
Hazard No.	Hazard Description - (the situation or parts of plant which could cause injury or illness)	Is there any risk? Describe the risk control measures ALREADY implemented	Likelihood	Consequence	Risk Level	Proposed SUPPLEMENTARY risk control measure	Are the control measures practicable? Yes/No	For Action by Whom	Confirmation that the necessary action has been completed
1.12.1	Operator slips and falls while entering or exiting the cabin.	Instructions provided in manual on how to properly access the driver's seat.	С	1	L	Ensure that access points and steps are maintained and free of obstacles, slick surfaces and slip resistant; Ensure that damaged steps are repaired or replaced as required; Ensure that operators use the correct procedure when entering or exiting the cabin.			
1.12.2	Falling whilst performing maintenance checks.	Pre-operational checks able to be performed at ground level.	Е	1	L	Ensure that appropriate equipment is used during maintenance where access at height is required.			
2	Electrical hazards								
2.1	Electrical contact (direct or indirect)								
2.1.1	Persons could be injured due to contact or approach to live overhead electrical apparatus.	Warning in operator's manual regarding maintenance of clearance distances from energized power lines and/or apparatus. Warning in operator's manual regarding keeping safe clearance distances from overhead lines.	E	4	н	Ensure persons observe the limits of approach as specified by regulation and as indicated on the signs attached.			
2.1.2	Due to improper procedures following contact with live conductors.		E	4	н	Ensure that all personnel are trained and aware of the necessary procedures required following the accidental contact with live overhead conductors; Ensure that the unit is withdrawn from service and appropriately assessed by a competent person; Immediately isolate the unit for 24 hours.			
2.1.3	Persons could be injured if struck by lightning		Е	4	н	Ensure forklift is not used during storms.			
2.2	Electrostatic phenomena				NS		•	•	•
2.3	Thermal radiation				NS				
2.4	External influences on electrical equipment								
2.4.1	Control malfunction as a result of external influences.		Е	2	L	Ensure that the forklift is not used in environments which include strong electro magnetic fields.			
3	Thermal hazards								
3.1	Burns and scalds by possible contact of persons w	vith flames or explosions and also with radiation fro	om hea	at soui	ces				
3.1.1	During work in an explosive atmosphere.	Warning in the operator's manual that forklift is not to be used in an explosive environment unless it has been suitably modified by the manufacturer.	E	4	н	Ensure unit is not used in a hazardous environment unless it has been suitably modified by the manufacturer or a competent person.			
3.1.2	During refuelling.	Warning in operator's manual not to smoke and to keep sparks and open flames away while refuelling. Refuelling procedures are included in the manual.	D	3	М	Ensure refuelling procedures listed in manual are followed when refuelling.			
3.1.3	Contact with hot engine components.	Engine is covered; exhaust pipe is out of reach of the operator's position.	С	2	м	Ensure properly trained personnel are the only personnel involved in checking engine components.			
3.1.4	Batteries explode due to sparks induced during maintenance.	Warning in manual regarding the dangers of sparks etc. near batterries. Battery isolation switch fitted.	Е	3	М	Ensure that only trained personnel conduct maintenance on or near batteries.			
3.1.5	Maintenance personnel suffer burns as a result of exposure to hot fluids.	Warning in operator's manual for personnel not to remove the oil/water filler cap unless it is cool enough to touch with a bare hand.	С	2	М	Ensure that personnel are trained and aware of this hazard.			
3.2	Health-damaging effects from hot or cold work env	vironment					•	•	•



RISK ASSESSME	ENT: MANITOU M (-X) 30-50-70				Date	/ Version: 2023-09-14 / revision A	PRELIMINARY	(Refer to "Not	es" section)
Α	В	C	D1	D2	D	E	F	х	Y
Hazard No.	Hazard Description - (the situation or parts of plant which could cause injury or illness)	Is there any risk? Describe the risk control measures ALREADY implemented	Likelihood	Consequence	Risk Level	Proposed SUPPLEMENTARY risk control measure	Are the control measures practicable? Yes/No	For Action by Whom	Confirmation that the necessary action has been completed
3.2.1	Operator injured due to extreme cold temperatures.	Controls are designed so that they may be operated while wearing gloves.	Е	2	L	Ensure operators are provided the appropriate PPE for the workin environment. Ensure that the period of exposure is kept within acceptable levels.	9		
3.2.2	Operator injured due to extreme hot temperatures.		С	2	М	Ensure operators are provided the appropriate PPE for the workin environment. Ensure that the period of exposure is kept within acceptable levels.	g		
4	Hazards generated by noise								
4.1	Hearing loss (deafness), other physiological disord	ders (e.g. loss of balance, loss of awareness, etc.)							
4.1.1	Noise generated by forklift causes hearing loss to operator.	The maximum continuous A-weighted sound pressure level measured inside the machine cabin is 82 dB and is measured in accordance with EN12053.	В	1	м	Ensure that if noise exposure exceeds acceptable levels that either ex protection is worn and/or the operators are removed from the nois environment; Ensure that the exhaust muffler is maintained in good condition.			
4.1.2	Noise generated by forklift causes hearing loss to bystanders.	The maximum guaranteed sound power level is 82 dB (A).	в	1	м	Competent person to assess the noise impact on bystanders taking in consideration the environment and other machines operating nearby; Ensure that the exhaust muffler is maintained in good condition.	o		
4.2	Interference with speech communication, acoustic	signals, etc.							
4.2.1	Injuries exacerbated as a result of insufficient communication procedures or equipment.	The maximum continuous A-weighted sound power level measured on the machine is less than 82 dB (A). This is not sufficient to block the acoustic signals on the machine nor is it sufficient to drown out a shouted warning. Since the Engine, the main source of noise is covered; verbal communication will not be hindered.	D	3	м	Establish and audit routine emergency procedures; Ensure that all operators are equipped with portable communication equipment where necessary; Establish protocols and procedures to ensure a timely and appropriat response in emergencies; Ensure all operators report in when attending site and on a routine bas thereafter.	e		
5	Hazards generated by vibration						·		
5.1	Vibration caused by machinery								
5.1.1	Vibration caused by engine leads to accelerated fatigue of the operator.	The vibration measured at the upper limbs does not exceed 2.5 m/s <sup>2</sup> (RMS) and the vibration exerted on the operator's body does not exceed 0.5 m/s <sup>2</sup> (RMS).	E	2	L	Ensure that use of the machine in continuous shifts is limited to prever operator fatigue which may result from exposure to machine vibration.	ot		
6	Hazards generated by radiation								
6.1	Electrical arcs				NS				
6.2	Lasers				NS				
6.3	Ionizing radiation sources				NS				
6.4	Machines using high-frequency electromagnetic fig	elds		1				1	
6.4.1	Uncontrolled motions in high-frequency electromagnetic fields.	See clause 2.4.1.							<u> </u>
7	Hazards generated by materials and substance	es processed, used or exhausted by machinery	,						
7.1	Hazards resulting from contact with or inhalation of	of harmful fluids, gases, mists, dusts and fumes							



RISK ASSESSMI	ENT: MANITOU M (-X) 30-50-70				Dat	e / Version: 2	2023-09-14 / revision A	PRELIMINARY	' (Refer to "Not	es" section)
Α	В	С	D1	D2	D		E	F	х	Y
Hazard No.	Hazard Description - (the situation or parts of plant which could cause injury or illness)	Is there any risk? Describe the risk control measures ALREADY implemented	Likelihood	Consequence	Risk Level	Pro	oposed SUPPLEMENTARY risk control measure	Are the control measures practicable? Yes/No	For Action by Whom	Confirmation that the necessary action has been completed
7.1.1	Persons could be injured if the unit is operated indoors withou adequate ventilation.	Warning in operators manual regarding ventilation requirements.	D	3	м		he unit is operated only in well-ventilated areas; ventilation filters are maintained as per the manufacturer's			
7.1.2	Persons could be injured by inhaling exhaust gases during norma operation.	Exhaust is directed away from the operator's positions.	E	3	м	requirements;	aust system is maintained in accordance with manufacturer's s; all personnel are aware of the hazard and take appropriate action.			
7.2	Fire or explosion hazard	•				-			•	
7.2.1	During refuelling.	See clause 3.1.2.				-				1
7.2.2	During battery maintenance.	See clause 3.1.4.								ĺ
7.3	Biological and microbiological (viral or bacterial)	nazards			NS	3			•	
8	Hazards generated by neglecting ergonomic p	rinciples in machine design (mismatch of macl	hinery	with	hum	an characte	eristics and abilities)			
8.1	Unhealthy postures or excessive efforts.			r					•	1
8.1.1	Due to operating position.	Seat fitted which provides adequate adjustments to cater for different body dimensions. Controls are positioned to provide comfortable body positions during normal operation.	D	2	L	Ensure that s	shift durations are not too long.			
8.2	Inadequate consideration of human hand-arm or f	oot-leg anatomy.								
8.2.1	Due to pedal and control positions.	Cabin layout designed taking into account ergonomic principles. A variety of different seat options are available from the manufacturer.	D	2	L		if an operator is uncomfortable using the standard operator's seat mative is sourced from the manufacturer which provides better ange.			
8.2.2	Due to effort required to activate loading controls.	Effort required to activate control functions is less than the limits listed in AS1418.1 – 2002 clause 11.4.1(c), i.e. 50N.	L			Ensure that s	shift durations are not too long.			
8.3	Neglected use of personal protection equipment	113ted III AS 1410.1 - 2002 Gause 11.4.1(0), i.e. John.	I			-		L		L
8.3.1	Persons could be injured due to exposure to UV.		в	2	н	Provide UV p	provide specification for appropriate UV protection and its use; protective equipment; ators on the requirements for its use.			
8.3.2	Persons could be injured if equipment is operated while not wearing appropriate PPE.		в	3	н	hard hat and a	cification for appropriate PPE including gloves, safety glasses, safety footwear as appropriate; ators on the requirements for its use. is inspected and certified on a routine basis.			
8.4	Inadequate area lighting	See section 12.1.								
8.5	Mental overload or under load, stress, etc.	1				_			1	
8.5.1	Persons could be injured if the operator's performance was inhibited by excessive fatigue.		D	3	м		<ul> <li>a system to ensure that operators do not work excessive or hifts and manage peak demands.</li> </ul>			l
8.6	Human error								•	
8.6.1	Injury due to "horse play" or inappropriate use.	Note in manual that the machine should be used by properly qualified and trained staff.	E	4	н		ators do not engage in horse play or stunt driving; only properly trained personnel use the forklift.			
8.6.2	Persons could be injured if the unit is operated by persons under the influence of drugs and/or alcohol.		E	4	н		operators do not use the unit while under the influence of alcohol			
8.6.3	Persons could be injured if the operator's performance is inhibited by poor health or medication with side effects.		E	3	м	Instruct the o	operator that he/she must report to the supervisor if suffering poor afe operating performance could be affected.			



RISK ASSESSM	ENT: MANITOU M (-X) 30-50-70				Date	/ Version: 2023-09-14 / revision A	PRELIMINARY	' (Refer to "Not	es" section)
A	В	С	D1	D2	D	E	F	х	Y
Hazard No.	Hazard Description - (the situation or parts of plant which could cause injury or illness)	Is there any risk? Describe the risk control measures ALREADY implemented	Likelihood	Consequence	Risk Level	Proposed SUPPLEMENTARY risk control measure	Are the control measures practicable? Yes/No	For Action by Whom	Confirmation that the necessary action has been completed
8.6.4	Persons could be injured from incorrect control selection.	The direction of movement resulting from each control is clearly marked beside the control and controls are arranged for logical operation as far as possible. Comprehensive instructions are provided in the operator's manual regarding the control functions. Note in manual that the machine should be used by properly qualified and trained staff.	D	2	L	Ensure that only properly trained personnel are permitted to operate the forklif Ensure that only licensed operators are permitted to operate the forklift.	;		
8.6.5	Failure to apply parking brake when leaving the cabin.	Switch fitted to the operator's seat which automatically applies the handbrake if the operator gets out of the seat. Instructions provided in the operator's manual for shut down of the machine. Warning sign fitted which states that handbrake is to be applied before leaving the truck.	С	1	L	Ensure that the safety systems are maintained in accordance with th manufacturer's recommendations. Ensure operator always applies handbrake when leaving the truck.	Đ		
8.6.6	Persons could be injured if a machine that is known to be faulty is operated.		D	3	м	A "Danger – Don't Use" tag should be attached if the forklift or equipment thereon is faulty; Remove forklift from service; Execute repairs;	ıt		
9	Hazard combinations								
9.1		Risks are not increased by the combination of the hazards which are considered in isolation.			NS				
10	Hazards caused by failure of energy supply, b	reakdown of machinery parts, and other functio	nal di	isorde	ers				
10.1	Failure of energy supply (of energy and/or control	circuits)							
10.1.1	Uncontrolled motions due to control system failure.		E	2	L	Ensure that the operators perform the pre-operational checks in accordance with the instructions contained within the operators manual; Ensure that all control system faults are logged and reported to servic personnel; Ensure that the forklift is not operated if any faults exist.			
10.1.2	Uncontrolled travel movement in case of failure of energy supply.		Е	1	L	Ensure that the machine is maintained in accordance with the manufacturer instructions.	s		
10.1.3	Failure of control circuit due to poor design of electrical circuits.	Electrical circuits designed using well tried and tested principles by experienced manufacturer.	Е	2	L	Ensure that all inspections and tests are carried out in accordance with th manual.	e		
10.2	Unexpected ejection of machine parts or fluids	• •					•		•
10.2.1	Mast lowering as a result of hose failure.	Flow restrictor valves fitted to the lift cylinder to slow the rate of descent under hose failure. Preoperational inspection includes a check of the hydraulic hoses.	D	3	М	Ensure that hydraulic system is maintained in accordance with manufacturer instructions.	s		
10.2.2	Injury as a result of accumulated deterioration during long term storage.	A list of checks which should be performed after a long shut down is included in the service manual.	Е	2	L	Ensure that the procedures detailed in the manual are performed befor returning the unit to service.	е		
	• •					-			



RISK ASSESSM	ENT: MANITOU M (-X) 30-50-70				Date	e / Version: 2023-09-14 / revision A	PRELIMINARY	(Refer to "Not	es" section)
А	В	с	D1	D2	D	E	F	х	Y
Hazard No.	Hazard Description - (the situation or parts of plant which could cause injury or illness)	Is there any risk? Describe the risk control measures ALREADY implemented	Likelihood	Consequence	Risk Level	Proposed SUPPLEMENTARY risk control measure	Are the control measures practicable? Yes/No	For Action by Whom	Confirmation that the necessary action has been completed
10.3	Failure/malfunction of control system	Control systems designed in accordance with AS2359.5 & AS2359.6. Preoperational checks include functional testing of all controls.	E	2	L	Ensure that all pre-operational inspections are performed in accordance with the manufacturer's instructions prior to use; Ensure that all control system faults are logged and reported to service personnel; Ensure that the forklift is not operated if any faults exist.			
10.4	Errors of fitting								
10.4.1	Incorrect tyres fitted.	Machine specifications include tyre size and description.	D	4	н	Ensure that only tyres which are approved by the manufacturer are fitted.			
10.5	Overturn, unexpected loss of machine stability	See section 16.1.							<u>I</u>
11		or incorrectly positioned safety- related measure	es/me	ans					
11.1	All kinds of guards								
11.1.1	Guard on engine missing	Catches provided on engine cowl.	D	2	L.	Ensure that guards are not removed, or altered without the written approval of the manufacturer.	of		
11.2	All kinds of safety-related (protection) devices		1						
11.2.1	Due to safety switches being overridden or missing.	Warning in manual not to modify the forklift in any way without	D	4	н	Ensure that safety devices are not tampered with and are in good condition	n		
11.3	Starting and stopping devices	written approval of the manufacturer.				before use of machine.			1
11.3.1	Hazard number not used.						1	I	
11.4	Safety signs and signals		I	-					
11.4.1	Personnel injured due to missing or illegible safety signs.		С	2	М	Maintain signs and replace as necessary.	1		
11.5	All kinds of information or warning devices								
11.5.1	Operations manual missing from machine.	Facility provided in cabin to enable storage for the operator's manual.	С	2	М	Ensure that the operators check that the operations manual is present befor operating forklift.	е		
11.6	Energy supply disconnecting devices				NS				
11.7	Emergency devices								
11.7.1	Hazard number not used.								
11.8	Feeding/removal means of work pieces				NA				
11.9	Essential equipment and accessories for safe adjusting and/or maintaining	Maintenance instructions provided in operators manual.	с	3	н	Ensure that the instructions included in the maintenance manual are followed; Ensure that only genuine spare parts are used for replacement.			
11.10	Equipment evacuating gases, etc.	Exhaust pipe is directed away from the operator cabin.	D	1	L	Ensure that the exhaust system is maintained in accordance with th maintenance instructions provided by the manufacturer.	e		1
12	Inadequate lighting of moving/working area								
12.1	Collision with structures, objects or ground personnel due to inadequate lighting of work site.		с	3	н	Ensure that sufficient lighting is provided; Ensure that operators do not use the machine if the lighting is insufficient of becomes insufficient during the performance of the job.	<b>э</b> г		
13	Hazards due to sudden movement/instability o	during handling							
13.1	Machine tips due to tyre failure.	Tyre inspection required as part of 50 hour inspection.	D	3	м	Ensure that operators perform checks of the tyres as listed in manual; Ensure that the machine is not operated if the tyres are in an unsuitab condition;	e		



RISK ASSESSM	ENT: MANITOU M (-X) 30-50-70				Date	/ Version: 2023-09-14 / revision A	PRELIMINAR	<b>Y</b> (Refer to "Not	es" section)
A	В	C	D1	D2	D	E	F	х	Y
Hazard No.	Hazard Description - (the situation or parts of plant which could cause injury or illness)	Is there any risk? Describe the risk control measures ALREADY implemented	Likelihood	Consequence	Risk Level	Proposed SUPPLEMENTARY risk control measure	Are the control measures practicable? Yes/No	For Action by Whom	Confirmation that the necessary action has been completed
14	Inadequate/non-ergonomic design of driving/o	perating position							
14.1	Hazards due to dangerous environments (contact with moving parts exhaust gases, etc.)	Control position located away from hot parts and exhaust gases. Exhaust outlet points away from operating position. Engine fitted with covers to prevent contact with moving parts and or hot exhaust system.	D	2	L	Ensure that covers are maintained in the original condition; Ensure the machine is not used if the covers are damaged or missing.			
14.2	Inadequate visibility from driver's/operator's position	Operator's position in cabin offers a good position to see all necessary parts of the forklift structure and load. Windscreen wipers provided to clear rain from the front window. Demister provided to clear the fogged front and rear windows. Window provided in roof to aid the visibility of the load in the raised position. Rear vision mirrors provided.	D	4	н	Ensure that wipers and demisters are maintained in accordance with th manufacturer's recommendations; Ensure the machine is kept in a clean condition.	ne		
14.3	Inadequate seat/seating (seat index point)	See clause 8.1.1.							
14.4	Inadequate/non-ergonomic design/positioning of controls	See clause 8.2.1.							
14.5	Starting/moving of self-propelled machinery	Safety system fitted which applies handbrake when the operator leaves the normal driving position (seat). Engine cannot be started unless the gear selector is in neutral.	D	1	L	Ensure the work area is controlled at all times so that other ground personn are not permitted to enter the area around the operation of the forklift unle under emergency conditions; Ensure that the forklift is not started unless the operator is seated in the norm operating position.	55		
14.6	Road traffic of self-propelled machinery						•	•	•
14.6.1	Injury as a result of collision with other vehicular traffic while at work site.	A flashing light is fitted to the cabin roof to increase the visibility of the forklift to surrounding traffic.	в	3	н	Implement a traffic management system; Ensure a traffic management system is enforced.			
14.6.2	Injury when travelling on public roads.	A flashing light is fitted to the cabin roof to increase the visibility of the forklift to surrounding traffic.	С	4	E	Ensure that if the forklift is to be driven on public roads that a traff management plan is developed and implemented.	ic		
14.7	Movement of pedestrian-controlled machinery	Not pedestrian controlled.			NA				
15	Mechanical hazards (due to failure of systems	or devices)				•	-		
15.1	Hazards to exposed persons due to uncontrolled n	novement							
15.1.1	Mast lower due to hose failure.	See clause 10.2.1.							
15.1.2	Personnel exposed to hazards as a result of brake system failure.		Е	3	м	Ensure that the necessary checks are performed on the brake system a described in the manual.	as		
15.2	Hazards due to break-up and/or ejection of parts	· · · · · · · · · · · · · · · · · · ·						•	·
15.2.1	Structural failure due to inappropriate long term storage.	Instructions in service manual as to the requirements which must be completed for long term storage.	D	2	L	Ensure that the machine is stored in accordance with the manufacturer instructions and the necessary checks are performed prior to the machin returning to service.			
15.3	Hazards due to rolling over (roll over protection -	ROP)	•	·					·
15.3.1	Operator injured as a result of forklift roll over.		D	4	Н	Ensure that machine is not driven at high speeds.			
15.3.2	Operator unable to exit from the cabin as a result of damage caused by a roll over.	There are two separate emergency exits provided on the forklift.	Е	2	L	Ensure the operator is trained with respect to the emergency exits availab and the correct operation.	le		
15.4	Hazard due to falling objects (falling object protect	tion – FOP)							



RISK ASSESSM	IENT: MANITOU M (-X) 30-50-70				Date	/ Version: 2023-09-14 / revision A	PRELIMINARY	(Refer to "Not	es" section)
А	В	C	D1	D2	D	E	F	х	Y
Hazard No.	Hazard Description - (the situation or parts of plant which could cause injury or illness)	Is there any risk? Describe the risk control measures ALREADY implemented	Likelihood	Consequence	Risk Level	Proposed SUPPLEMENTARY risk control measure	Are the control measures practicable? Yes/No	For Action by Whom	Confirmation that the necessary action has been completed
15.4.1	Operator struck by falling objects.	The cabin is designed and tested to provide FOPS protection.	D	2	L	Ensure that the FOPS cabin is not altered in any way; Ensure that the FOPS is replaced if it is damaged.			
15.4.2	Ground crew or passerby being struck by falling objects.		D	4	н	Barricade area from public access; Ensure that materials do not exceed the confines of the forks or attachmer and load backrest;	ıt		
15.5	Inadequate means of access	See clause 8.1.1.				Ensure personnel do not enter the area under a raised load.			
15.5	Hazards caused due to towing, coupling, connecting								
15.6.1	Injury from unsecured vehicle whilst transporting.	The down lugs fitted to chassis and are marked. Instructions for transportation included in operator's manual.	D	3	м	Ensure that the unit is secured in accordance with the requirements in th manual	e		
15.6.2	Injury from unsecured vehicle whilst towing.	Tow point fitted to chassis and is marked. Instructions for towing included in operators manual.	D	3	м	Ensure that the instructions provided in the operator's manual are followed.			
15.7	Hazards due to batteries, fire, emissions, etc.								
15.7.1	During battery maintenance.	See section 3.1.4.							
16 16.1	Hazards due to lifting operation								
-									
16.1.1	Lack of stability due to overload.	Stability testing conducted in accordance with AS2359.17. Maximum rated capacity stamped on ID plate.	с	3	н	Ensure that only trained personnel are permitted to operate the forklift; Ensure that only authorised attachments are used; Ensure that the forklift is not used to pull fixed loads which are stuck in th ground, e.g. stumps or posts;	e		
16.1.2	Lack of stability during travelling.	Stability testing conducted in accordance with AS2359.17. Maximum rated capacity stamped on ID plate.	С	3	н	Ensure that only trained personnel are permitted to operate the forklift; Ensure that the forklift is operated in accordance with the instructions provide in the manual.	d		
16.1.3	Lack of stability due to operation on excessive slope.	Slope bubble fitted to indicate the lateral chassis inclination. Instructions provided in the operators manual for operating on transverse slope.	в	4	E	Ensure the operator does not use the forklift to lift loads on slopes whic exceed the maximum permitted slopes as indicated on the level bubble.	h		
16.1.4	Lack of stability due to incorrect tyres being fitted to forklift.	Machine specifications section of the operator's manual includes tyre information.	D	4	н	Ensure that only approved tyres are used on the forklift.			
16.1.5	Lack of stability due to low tyre pressure.	Tyre pressures listed in operator's manual. Tyre pressure to be checked every 50 hours of service as listed in the maintenance section of the operator's manual.	с	3	н	Ensure that the tyre pressures are checked as per the requirements listed i the operator's manual.	n		
16.1.6	Lack of stability due to use of incompatible or unauthorised load attachment.	A manufacturer's plate is fitted in the cabin which lists all of the approved attachments. A list of approved attachments is included in the operators manual.	D	4	н	Instruct operators to only used approved load attachments; To refer to applicable maximum capacity for the corresponding attachment; To ensure the attachment is properly attached to the boom at all times.			



	IENT: MANITOU M (-X) 30-50-70				· · · ·	/ Version: 2023-09-14 / revision A		(Refer to "Not	,
Α	В	С	D1	D2	D	E	F	х	Y
Hazard No.	Hazard Description - (the situation or parts of plant which could cause injury or illness)	Is there any risk? Describe the risk control measures ALREADY implemented	Likelihood	Consequence	Risk Level	Proposed SUPPLEMENTARY risk control measure	Are the control measures practicable? Yes/No	For Action by Whom	Confirmation that th necessary action ha been completed
16.1.7	Instability caused by poor ground conditions.	Note in manual that care must be taken on muddy, sandy or soft ground. The machine mass is listed on the manufacturers plate attached to the cabin. Tyre loads, laden & unladen, listed in the operator's manual.	с	4	E	Ensure the forklift is not used on ground which is unable to support the mas when fully laden.	5		
16.1.8	Instability caused by movement of liquid loads.		E	4	н	Ensure when liquids are carried that they are in a container fitted with baffles o the fluid is otherwise constrained from shifting (by using a full container); Operate machine according to the load and its ability to shift in centre o gravity.			
16.2	Derailment of machinery	Hi-Rail gear not fitted.			NA				
<b>16.3</b> 16.3.1	Loss of mechanical strength of machinery and lifti Structure could collapse as a result of poor structural/mechanical condition due to fatigue/wear.		С	3	н	Inspect the machine in accordance with the instructions outlined in the service manual; Ensure that the machine is taken to an authorized repair centre for repair when it reached the end of its design life.			
16.3.2	Persons could be injured by the unit if operating in poor mechanical or hydraulic condition.	Service manuals provided which detail repair and inspection procedures.	с	3	н	Ensure that the unit is checked, repaired and maintained by a competen person in accordance with the checklists contained in the operation manual; Modify maintenance program according to use; Instruct the operator/competent person to report all faults to management; Ensure all inspections, servicing, replacement of parts and modifications are entered into logbook; Use genuine replacement parts; Log replacement.			
16.3.3	Persons could be injured as a result of fatigue failure – Road Transport.	Tie-down points are provided at the front and rear of the forklift. Instructions for tying down the forklift for road transport are provided in the operators manual.	D	2	L	Ensure the operators are instructed to properly restrain unit prior transportation.	D		
16.3.4	Structural failure due to collision between mast and buildings, vehicles etc.	Control position provides the operator with visual contact with the resulting travel and extending structure movements.	D	3	М	Use a spotter if required; Ensure that all collisions and/or damage are reported and any damage i rectified before further use.			
16.3.5	Structural failure due to corrosion.	All ferrous metal components are painted.	D	4	н	Ensure that the forklift and attachments are inspected on a regular basis for evidence of corrosion by a competent person.	r		
16.3.6	Structural failure of fork arms due to wear.	Fork arms are sourced from reputable manufacturer. Fork wear to be checked every 500 hours as detailed in the maintenance section of the manual.	D	3	м	Ensure that only approved fork arms are fitted to machine as listed on load charts. Ensure that wear is checked as per the instructions provided by the manufacturer.			
16.3.7	Structural failure of attachment.	All authorized attachments have been load tested to 2.5 times the maximum rated capacity in accordance with AS2359.1 clause 6.7.2.	D	3	М	Ensure that only authorised attachments are used with the forklift.			
16.3.8	Due to inadequate structural design	Forklift designed and manufactured by reputable company to meet all applicable design standards. Structural calculations have been prepared using load combinations specified in AS2359.1 to confirm compliance.	E	2	L	Ensure that all specified inspections are performed in accordance with the manual and any faults/defects are logged and those not attributable to norma wear and tear are reported to the manufacturer.			



RISK ASSESSM	ENT: MANITOU M (-X) 30-50-70				Date	e / Version: 2023-09-14 / revision A	PRELIMINARY	(Refer to "Not	es" section)
Α	В	С	D1	D2	D	E	F	х	Y
Hazard No.	Hazard Description - (the situation or parts of plant which could cause injury or illness)	Is there any risk? Describe the risk control measures ALREADY implemented	Likelihood	Consequence	Risk Level	Proposed SUPPLEMENTARY risk control measure	Are the control measures practicable? Yes/No	For Action by Whom	Confirmation that the necessary action has been completed
16.4	Uncontrolled movements								
16.4.1	Mast lowers as a result of hose failure.	See clause 10.2.1.							
17	Inadequate view of trajectories of the moving	parts							
17.1	Ground personnel crushed by moving loads.	Control position provides the operator with visual contact with the resulting travel and mast structure movements. Warning signs fitted which warn personnel to keep clear of forklift when it is in use.	D	4	н	Ensure that personnel do not enter the area in which the forklift is operating unless in emergencies.	9		
18	Hazards caused by lightning								
18.1	Persons could be injured if the unit is operated during storms.	See clause 2.1.3.							
19	Hazards due to loading/overloading								
19.1	Maximum rated capacity is exceeded.	Maximum rated capacity stamped on ID plate fitted in cabin.	с	3	н	Verify expected loading and confirm it is less than rated capacity. Ensure that operator does not attempt to lift loads in excess of the rated capacity.	ł		
20	Controls								
20.1	Safe travel control	Travel speeds listed in the specifications section of the operator's manual.	С	3	н	Ensure the system speeds are maintained as per the manufacturer's instructions.	6		
21	Markings				_				
21.1	Safety decals/labels are incomplete.		С	2	М	Ensure that the operator carries out the pre-operational check of safety decals before use and replaces any illegible or missing decals.	6		



This brockure dearbies versions and categories on the Ventice products which may be fitted with different. The exponent: dearbid in this brockure may be standard, optional or not weakers dearbid at the ventices and electronic dearbid at the brockure may be standard, optional or not weakers dearbid at the territy to change the specifications show and dearbid at the territy to change the specifications show and dearbid at the territy to the specifications show and dearbid at the territy of territory dearbid to the specifications and dearbid at the territy of territory and territory and