MODELS | SJ 46A SJ 46AJ

1105



# Operating Manual Articulating Boom Series (ANSI/CSA)

SKYJACK.

143896AC-A June 2011

#### Skyjack Service Center 3451 Swenson Ave. St. Charles, Illinois, 60174 USA

Phone: 630-262-0005 Toll Free: 1-800-275-9522 Fax: 630-262-0006 Email: service@skyjack.com

#### Parts (North America)

Toll Free: 1-800-965-4626 Toll Free Fax: 1-888-782-4825 Email: parts@skyjack.com

#### Parts & Service (Europe) Unit 1 Maes Y Clawdd, Maesbury Road Industrial Estate

Oswestry, Shropshire SY10 8NN UK Phone: +44-1691-676-235 Fax: +44-1691-676-238 Email: info@skyjackeurope.co.uk

#### **Skyjack Asia Pacific**

Singapore Phone: +65-6449-3710 Fax: +65-6449-7690 Email: skyjack@singnet.com.sg The Safety Alert Symbol identifies important safety messages on aerial platform, safety signs in manuals or elsewhere. When you see this symbol, be alert to the possibility of personal injury or death. Follow the instructions in the safety message.



This Safety Alert Symbol means attention!

Become alert! Your safety is involved.

### 1 DANGER

DANGER indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.

### 

WARNING indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.



CAUTION indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury. It may also be used to alert against unsafe practices.

#### IMPORTANT

IMPORTANT indicates a procedure essential for safe operation and which, if not followed, may result in a malfunction or damage to the aerial platform.



#### Table of Contents

#### Section 1 - About Your Aerial Platform

#### **Read and Heed**

Aerial Platform Definition	
Purpose of Equipment	7
Use of Equipment	7
Manual	7
Operator	7
Service Policy and Warranty	7
Optional Accessories	7
Optional Accessories Scope of this Manual	7

#### **Safety Rules**

Operator Safety Reminders	8
Electrocution Hazard	
Safety Precautions	

#### Section 2 - Operation

2.1	Genera	I	13
	2.1-1	Operator Qualifications	13
	2.1-2	Operator's Responsibility for Maintenance	13
	2.1-3	Maintenance and Inspection Schedule	13
	2.1-4	Owner's Inspections	13
2.2	Major C	Components	14
2.3	Major A	ssemblies	15
	2.3-1	Base	15
	2.3-2	Turret	15
	2.3-3	Boom Assembly	15
	2.3-4	Platform	15
2.4	Serial N	lumber Nameplate	15
2.5	Compo	nent Identification	
	2.5-1	Main Power Disconnect Switch	16
	2.5-2	Tilt Sensor	16
	2.5-3	Drive Bypass Valve	16
	2.5-4	Brake System	
	2.5-5	Differential Lock Switch	17
	2.5-6	All Motion Alarm	
	2.5-7	AC Outlet on Platform (If Equipped)	17
	2.5-8	Turret Transportation Lock	17
	2.5-9	Footswitch	17
	2.5-10	Manual Storage Box	17
	2.5-11	Base Control Console	
	2.5-12	Platform Control Console	20
2.6	Specia	Options	22
	2.6-1	Cold Weather Start (If Equipped)	22
	2.6-2	Work Light (If Equipped)	22
	2.6-3	Flashing Amber Light (If Equipped)	
	2.6-4	Tire Sealant Light (If Equipped)	23
	2.6-5	Hydraulic Generator (If Equipped)	23
2.7	Operat	pr's Responsibility	24
2.8	Visual 8	& Daily Maintenance Inspections	25

### **Table of Contents**

#### Section 2 - Operation (Continued)

2.9	Function Tests	33
2.10	Start Operation	
	2.10-1 To Activate Base Control Console	
	2.10-2 To Rotate Platform Using Base Control Console	
	2.10-3 To Rotate Turret Using Base Control Console	
	2.10-4 To Move Jib Up and Down Using Base Control Console	45
	2.10-5 To Move Riser Up and Down Using Base Control Console	
	2.10-6 To Raise or Lower Main Boom Using Base Control Console	45
	2.10-7 To Extend or Retract Fly Boom Using Base Control Console	45
	2.10-8 To Level Platform Manually Using Base Control Console	
	2.10-9 To Operate Using Emergency Power Switch at Base Control Console	46
	2.10-10 To Activate Platform Control Console	46
	2.10-11 To Drive Forward or Reverse	46
	2.10-12 To Steer	47
	2.10-13 To Move Jib Up and Down Using Platform Control Console	47
	2.10-14 To Move Riser Up and Down Using Platform Control Console	47
	2.10-15 To Extend or Retract Fly Boom Using Platform Control Console	47
	2.10-16 To Rotate Platform Using Platform Control Console	
	2.10-17 To Level Platform Manually Using Platform Control Console	
	2.10-18 To Raise or Lower Main Boom Using Platform Control Console	48
	2.10-19 To Sound Horn	
	2.10-20 To Rotate Turret Using Platform Control Console	48
	2.10-21 To Operate Using Emergency Power Switch at Platform Control Console	
	2.10-22 Shutdown Procedure	48
2.11	Refueling Procedures	49
	2.11-1 Regular Fuel	49
	2.11-2 Propane	50
2.12	Loading/Unloading	
	2.12-1 Loading and Tie-down	
	2.12-2 Locking the Turret	
	2.12-3 Lifting	
2.13	Winching and Towing Procedure	
	2.13-1 To Release Brakes Manually	
2.14	Emergency Lowering Procedures	
2.15	Chassis Tilt	
2.16	Diagrams	
2.17	Tables	
2.18	Labels	68

#### **List of Tables**

2.1	Standard and Optional Features	60
2.2	Specifications and Features	61
	Owner's Annual Inspection Record	
2.4	Tire/Wheel Specifications	64
	Maximum Platform Capacities	
2.6	Floor Loading Pressure	65
	Maintenance and Inspection Schedule	
2.8	Operator's Checklist	67



**SKYJACK** is continuously improving and expanding product features on its equipment, therefore, specifications and dimensions are subject to change without notice.

#### **Aerial Platform Definition**

A mobile device that has an adjustable position platform supported from ground level by a structure.

#### **Purpose of Equipment**

The SKYJACK Articulating Boom Series (Models SJ 46A & SJ 46AJ) aerial platform is designed to transport and raise personnel, tools and materials to overhead work areas.

#### **Use of Equipment**

The aerial platform is a highly maneuverable, mobile work station. Lifting and driving must be on a flat, level, compacted surface. It can be driven over uneven terrain only when the platform is fully lowered.

#### Manual

The operating manual is considered a fundamental part of the aerial platform. It is a very important way to communicate necessary safety information to users and operators. A complete and legible copy of this manual must be kept in the provided weather-resistant storage compartment on the aerial platform at all times.

#### **Operator**

The operator must read and completely understand both this operating manual and the safety panel label located on the platform and all other warnings in this manual and on the aerial platform. Compare the labels on the aerial platform with the labels found within this manual. If any labels are damaged or missing, replace them immediately.

#### **Service Policy and Warranty**

SKYJACK warrants each new articulating series work platform to be free of defective parts and workmanship for the first 24 months. Any defective part will be replaced or repaired by your local SKYJACK dealer at no charge for parts or labor. Contact the SKYJACK Service Department for warranty statement extensions or exclusions.

#### **Optional Accessories**

The SKYJACK aerial platform is designed to accept a variety of optional accessories. These are listed under "Standard and Optional Features" in Table 2.1. Operating instructions for these options (if equipped) are located in Section 2 of this manual.

For non-standard components or systems, contact the SKYJACK Service Department at

🖀 : 800 275-9522

島 : 630 262-0006

Include the model and serial number for each applicable aerial platform.

#### **Scope of this Manual**

- a. This manual applies to the ANSI/SIA and CSA versions of the Articulating Boom aerial platform models listed on Table 2.1.
  - Equipment identified with "ANSI" meets the ANSI/SIA A92.5-2006 standard.
  - **Equipment identified** with "CSA" meets the CSA B354.4-02 standard.

#### b. CSA (Canada)

Operators are required to conform to national, territorial/provincial and local health and safety regulations applicable to the operation of this aerial platform.

#### c. ANSI/SIA (United States)

Operators are required by the current ANSI/SIA A92.5 standards to read and understand their responsibilities in the manual of responsibilities before they use or operate this aerial platform.

SKYIACK

### N WARNING

# Failure to comply with your required responsibilities in the use and operation of the aerial platform could result in death or serious injury!

#### **Operator Safety Reminders**

A study conducted by St. Paul Travelers showed that most accidents are caused by the failure of the operator to follow simple and fundamental safety rules and precautions.

You, as a careful operator, are the best insurance against an accident. Therefore, proper usage of this aerial platform is mandatory. The following pages of this manual should be read and understood completely before operating the aerial platform.

Common sense dictates the use of protective clothing when working on or near machinery. Use appropriate safety devices to protect your eyes, ears, hands, feet and body.

Any modifications from the original design are strictly forbidden without written permission from SKYJACK.

SKYJACK

#### **Electrocution Hazard**

This aerial platform is not electrically insulated. Maintain a Minimum Safe Approach Distance (MSAD) from energized power lines and parts as listed below. The operator must allow for the platform to sway, rock or sag. This aerial platform does not provide protection from contact with or proximity to an electrically charged conductor.

#### Per ANSI A92.5-2006 8.10(7)

"The operator shall perform only the work for which he or she is qualified, in compliance with all applicable safety related work practices intended to prevent electric shock covered by the Code of Federal Regulations (CFR) 1910.333. The operator's level of competence shall be established only by persons qualified to do so. Operators shall maintain the appropriate minimum approach distance (MAD) from energized power lines and parts covered by CFR 1910.333 (c)."

Unqualified persons must maintain a minimum approach distance of 10 feet from any energized power line up to 50 kV. Energized power lines over 50 kV require a greater minimum approach distance to be maintained. Refer to CFR 1910.333.

#### As per CSA B354.4-02

"The operator shall maintain the minimum safe approach distance **(MSAD)** from energized conductors at all times in accordance with the authority having jurisdiction."

Refer to CFR 1910.333 or the authority having jurisdiction.

#### DO NOT USE AERIAL PLATFORM AS A GROUND FOR WELDING. DO NOT OPERATE AERIAL PLATFORM DURING LIGHTNING OR STORMS.





#### **Safety Precautions**

Know and understand the safety precautions before going on to next section.

# <u> warning</u>

Failure to heed the following safety precautions could result in tip over, falling, crushing, or other hazards leading to death or serious injury.

- KNOW all national, state or territorial/provincial and local rules which apply to your aerial platform and jobsite.
- **TURN** main power disconnects witch "O" off when leaving the aerial platform unattended. Remove the key to prevent unauthorized use of the aerial platform.
- **WEAR** all the protective clothing and personal safety devices issued to you or called for by job conditions.
- **DO NOT** wear loose clothing, dangling neckties, scarves, rings, wristwatches or other jewelry while operating this aerial platform .



• **AVOID** entanglement with ropes, cords or hoses.



- **AVOID** falling. Stay within the boundaries of the guardrails.
- **DO NOT** raise the platform in windy or gusty conditions. Do not increase the lateral surface area of the platform. Increasing the area exposed to the wind will decrease aerial platform stability.



• **DO NOT** operate aerial platform during lightning or storms.



- DO NOT drive elevated near depressions or holes of any type, loading docks, debris, drop-offs and surfaces that may affect the stability of the aerial platform.
- DO NOT drive or elevate the aerial platform if it is not on a firm level surface.



- **Elevated driving** must only be done on a firm level surface.
- If operation in areas with holes or drop-offs is absolutely necessary, elevated driving shall not be allowed. Position the aerial

platform horizontally only with the platform fully lowered. After ensuring that all 4 wheels or



outriggers (if equipped) have contact with level firm surface, the aerial platform can be elevated. After elevation, the drive function must not be activated.

• **AVOID** soft, uneven surfaces.



 DO NOT ascend or descend a grade steeper than 45% (2WD & 4WD). Boom elevated driving must only be done on firm level surfaces.





#### Safety Precautions (Continued)

Know and understand the safety precautions before going on to next section.

• **DO NOT** operate an aerial platform that has ladders, scaffolding or other devices mounted on it to increase its size or work height.



• **DO NOT** exert side forces on aerial platform while elevated.



• **DO NOT** use the aerial platform as a crane. It is prohibited.



• **DO NOT** sit, stand or climb on the guardrails. It is prohibited.



 BE AWARE of overhead obstructions or other possible hazards around the aerial platform when driving or lifting.



 BE AWARE of crushing hazards. Keep all body parts inside platform guardrail.



• **BE AWARE** of blind spots when operating the aerial platform.



• **ENSURE** that there are no personnel or obstructions in the path of travel, including blind spots.



 DO NOT lower the platform unless the area below is clear of personnel and obstructions.





• **DO NOT** use boom to push, pull other objects or to lift the chassis.



 DO NOT raise the aerial platform while it is on a truck, forklift or other device or vehicle.



- **STUNT** driving and horseplay are prohibited.
- **ENSURE ALL** tires are in good condition and lug nuts are properly tightened.
- **DO NOT** alter or disable limit switches or other safety devices.
- **DO NOT** use the aerial platform without guardrails, locking pins and the entry gate in place.
- **DO NOT** exceed the rated capacity of the aerial platform. Do make sure the load is evenly distributed on the platform.



#### **Safety Precautions (Continued)**

Know and understand the safety precautions before going on to next section.

- DO NOT attempt to free a snagged platform with lower controls until personnel are removed from the platform.
- **DO NOT** position the aerial platform against another object to steady the platform.
- DO NOT place materials on the guardrails or materials that exceed the confines of the guardrails unless approved by Skyjack.

#### **Fall Protection**

All occupants of this aerial platform must wear personal fall protection equipment.

As per the ANSI A92.5-2006 standard, "Principal fall protection is provided by the guardrail system. The user shall direct and monitor the operator to ensure that all components of the guardrail system are in place. The user shall direct and monitor the occupants of the work platform to ensure that they wear a personal fall arrest system to protect against the potential effects of ejection or a fall restraint system to prevent a free fall."

Fall restraint and fall arrest systems are defined within the ANSI A92.5 Manual of Responsibilities shipped with this aerial platform.

Skyjack recommends the use of a fall restraint system to keep an occupant within the confines of the platform, and thus not expose the occupant to any fall hazard requiring a fall arrest.

CSA B354.4-02 requires the use of a fall arrest system, therefore Canadian users must use personal fall arrest protection as opposed to fall restraint.

All personal fall protection equipment must comply with applicable governmental regulations and must be inspected and used in accordance with the manufacturer's recommendations.

All personal fall protection equipment must be attached only to approved anchorage points within the platform of the aerial platform.



Entering and exiting the aerial platform should only be done using the three points of contact.

- Use only equipped access openings.
- Enter and exit only when the aerial platform is in the fully retracted position.
- Do use three points of contact to enter and exit the platform. Enter and exit the platform from the ground only. Face the aerial platform when entering or exiting the platform.
- Three points of contact means that two hands and one foot or one hand and two feet are in contact with the aerial platform or the ground at all times during entering and exiting.

### 

An operator should not use any aerial platform that:

- does not appear to be working properly.
- has been damaged or appears to have worn or missing parts.
- has alterations or modifications not approved by the manufacturer.
- has safety devices which have been altered or disabled.
- has been tagged or locked out for non-use or repair.

# Failure to avoid these hazards could result in death or serious injury.

#### Jobsite Inspection

- Do not use in hazardous locations.
- Perform a thorough jobsite inspection prior to operating the aerial platform, to identify potential hazards in your work area.
- Be aware of moving equipment in the area. Take appropriate actions to avoid collision.



#### 2.0 Operation

This section provides the necessary information needed to operate the aerial platform. It is important that the user reads and understands this section before operating the aerial platform.

#### 2.1 General

In order for this aerial platform to be in good working condition, it is important that the operator meets the necessary qualifications and follow the maintenance and inspection schedule referred to in this section.

#### 2.1-1 Operator Qualifications

- Only trained and authorized personnel shall be permitted to operate an aerial platform.
- Safe use of this aerial platform requires the operator to understand the limitations and warnings, operating procedures and operator's responsibility for maintenance. Accordingly, the operator must understand and be familiar with this operating manual, its warnings and instructions, and all warnings and instructions on the aerial platform.
- The operator must be familiar with employer's work rules and related government regulations and be able to demonstrate the ability to understand and operate this make and model of aerial platform in the presence of a qualified person.

#### 2.1-2 Operator's Responsibility for Maintenance

# N WARNING

Maintenance must be performed by trained and competent personnel who are familiar with mechanical procedures.

Death or serious injury could result from the use of an aerial platform that is not properly maintained or kept in good working condition.

- The operator must be sure that the aerial platform has been properly maintained and inspected before using it.
- The operator must perform all the daily inspections and function tests found in Table 2.7, even if the operator is not directly responsible for the maintenance of this aerial platform.

#### 2.1-3 Maintenance and Inspection Schedule

- The inspection points covered in Table 2.7 indicate the areas of the aerial platform to be maintained or inspected and at what intervals the maintenance and inspections are to be performed.
- The actual operating environment of the aerial platform may affect the maintenance schedule.

# 

Use original or manufacturer-approved parts and components for the aerial platform.

#### 2.1-4 Owner's Inspections


It is the responsibility of the owner to arrange daily, quarterly (or 150 hours) and annual inspections of the aerial platform. Refer to Table 2.7 for recommended maintenance and inspection areas and intervals. A record of annual inspection is kept on a label located close to the base control console on the cowling. Refer to Table 2.3 in this manual.

#### NOTE

Inspection scheduling requirements may vary. Owners must comply with local standards and regulations.



#### 2.2 Major Components

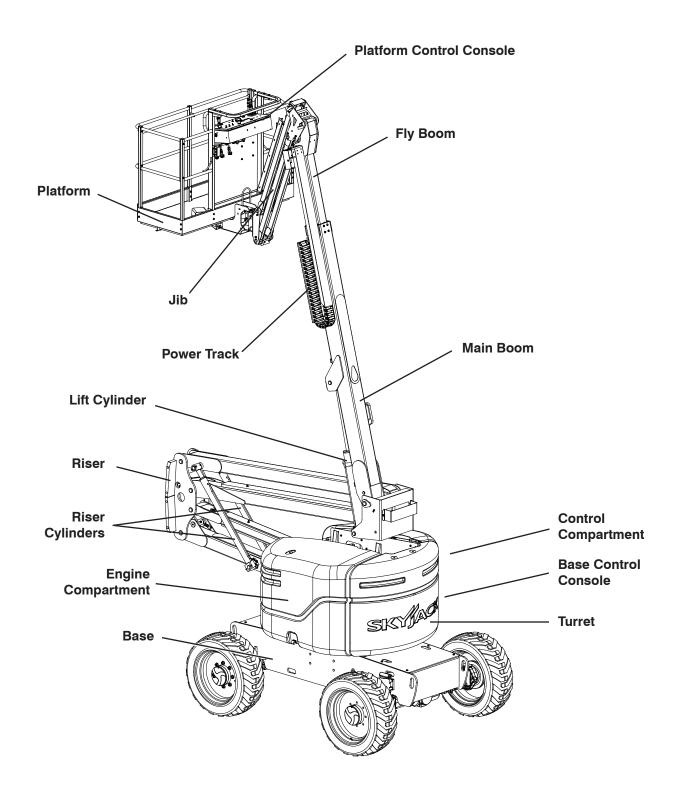

SKYJACK Articulating Boom



#### 2.3 Major Assemblies

The aerial platform consists of four major assemblies: the base, turret, boom assembly and platform.

#### 2.3-1 Base

The base is a rigid one-piece weldment. Models equipped with dual-fuel engine have mounting straps for propane tank on each side. The rear axle is hydraulic motor-driven and has a spring-applied, hydraulically released brakes. The front axle is steerable by a hydraulic cylinder. The rear axle is coupled to the front axle by a drive shaft.

#### 2.3-2 Turret

The turret rotates 360 degrees continuously. Upon the turret are two compartments. One compartment contains the engine, hydraulic pumps and battery. The swing drive is in the center of the turret underneath the main boom. The other compartment contains the base control console, main hydraulic manifold, function valves, the hydraulic and fuel tanks.

#### 2.3-3 Boom Assembly

The boom assembly consists of the riser, telescoping fly and main boom assembly. The riser is mounted on the turret with the main boom attached to the riser. The riser mechanism uses two double-acting hydraulic cylinders with holding valves to control vertical movement. AJ models are equipped with a 60 in. (152 cm) jib, controlled by a double-acting hydraulic cylinder.

#### 2.3-4 Platform

The platform is constructed of a skid-resistant deck surface allowing visibility through the deck and a 43 in. (110 cm) high tubular steel railing system with mid rails and 6 in. (15 cm) toe boards. The platform can be entered through a swing gate at the side of the railing system. The platform can be rotated in either direction. An optional AC outlet is also located on the platform.

#### 2.4 Serial Number Nameplate

The serial number nameplate, located at the rear of the aerial platform, lists the following:

Model number Serial number Maximum capacities Maximum number of persons permissible on the platform Maximum manual force Aerial platform weight Maximum drivable height Maximum platform height System pressure Lift pressure Maximum wheel load Model year Voltage



#### 2.5 Component Identification

The following descriptions are for identification, explanation and locating purposes only.

#### 2.5-1 Main Power Disconnect Switch

This main power disconnect switch is located in the engine compartment near the battery.

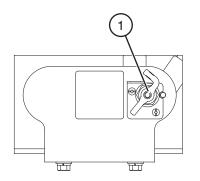


Figure 2-1. Main Power Disconnect Switch

1. Main Power Disconnect Switch - This switch, when in "O" off position, disconnects power to all circuits. Switch must be in "I" on position to operate any circuit. Turn switch "O" off when transporting aerial platform.

#### 2.5-2 Tilt Sensor

The tilt sensor is located inside the base control console. It is designed to prevent driving when aerial platform is on a slope greater than a predetermined limit.

### <u> (</u> warning

If aerial platform becomes tilted causing alarm to sound, the platform must be fully lowered immediately. Ensure that aerial platform is on a firm level surface before operating the aerial platform. Refer to Section 2.15 for instructions regarding recovery from an inclined position.

#### 2.5-3 Drive Bypass Valve

This valve is located on the inboard side of the drive pump and can be identified with a yellow paint mark on it.

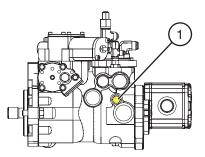


Figure 2-2. Drive Bypass Valve

1. Drive Bypass Valve with Override Stems - This valve, when loosened two revolutions counterclockwise, is used to override drive relief valves so that the aerial platform can be loaded or unloaded from a trailer using a winch line.

#### 2.5-4 Brake System

The brake system is located in the control compartment. The brakes must be manually disengaged before pushing, winching or towing. Refer to Section 2.13-1 for procedure on how to release brakes manually. The system contains the following controls:

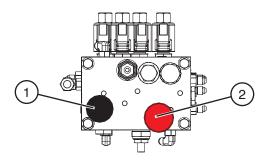


Figure 2-3. Brake System

- 1. Brake Auto Reset Valve Plunger
- 2. Brake Hand Pump



#### 2.5-5 Differential Lock Switch

This switch is located on the platform control console. The differential locking system provides more traction by providing equal drive to each wheel regardless of traction. Differential locks are used to prevent from getting stuck when driving on loose, muddy, or rocky terrrain. Refer to Section 2.9-3 for instruction regarding testing differential lock switch.

# 

#### Before engaging differential lock, ensure drive/steer controller is in neutral position.

#### 2.5-6 All Motion Alarm

This alarm produces an audible sound when any aerial platform function is activated. On aerial platforms with certain options, a flashing amber light will accompany this alarm.

#### 2.5-7 AC Outlet on Platform (If Equipped)

This outlet is a source of AC power on the platform. The outlet is located on the right side of platform control console and the plug is located at the middle rear section of the turret.

#### 2.5-8 Turret Transportation Lock

This locking device is located in the turret.

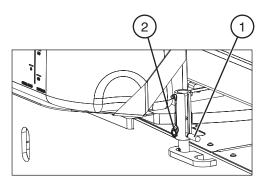


Figure 2-4. Turret Transportation Lock

- 1. **Turret Transportation Lock** This locking device is used to lock turret in place during shipping only.
- 2. **Turret Transportation Lock Retaining Pin** This retaining pin is used to hold transportation lock in either locked or unlocked position.

Refer to Section 2.12-2 for procedure on how to lock the turret.

#### 2.5-9 Footswitch

The footswitch is located on the floor of the platform. When depressed and held, it enables controls on platform control console.

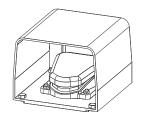


Figure 2-5. Footswitch

#### NOTE

The footswitch is equipped with a 15-second anti-tiedown feature that deactivates footswitch when operator depresses it for 15 seconds without activating any function.

#### 2.5-10 Manual Storage Box

This weather-resistant box is mounted under the control console on the platform. It contains operating manual and other important documents. The operating manual for this make and model of aerial platform must remain with the aerial platform and should be stored in this box.





#### 2.5-11 Base Control Console

This control console is located in the panel mounted in the control compartment.

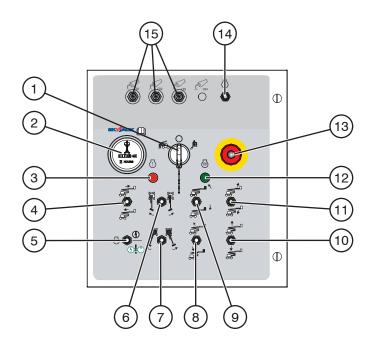


Figure 2-6. Base Control Console

- Base/Off/Platform Key Switch This three-way selector switch allows operator to "O" turn off power to aerial platform or to activate either "N" base or " " platform control console.
- 2. **Hourmeter** This gauge records accumulated operating time of engine.
- **3.** Engine Fault This light indicates failure in engine control system.
- 4. Fly Boom Extend/Retract Switch This switch controls " , extension or " , retraction of fly boom.

- 6. Platform Rotation Switch This switch controls
  "" left or "" right rotation of platform.
- **Turret Rotation Switch** This switch controls
   " y " left or " y " right rotation of turret.
- Main Boom Raise/Lower Switch This switch controls " raising or " lowering of main boom.
- 9. Platform Leveling Override Switch This switch overrides automatic leveling of platform and controls "S" tilting up or "S" tilting down of platform.
- **10. Riser Raise/Lower Switch** This switch controls """ raising or """ lowering of riser.
- Jib Up/Down Switch This switch controls
   " , up or " , or " , own movement of jib.



#### 2.5-11 Base Control Console (Continued)

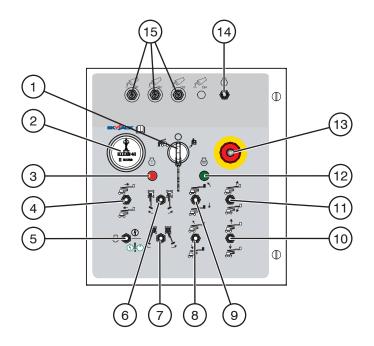


Figure 2-6. Base Control Console

- 12. Glow Plug (Diesel) This light illuminates until glow plugs have completed their timed cycle. When the lamp goes out, the engine is ready to be started..
- **13.** Emergency Stop Button This red "mushroom-head" "
  "
  pushbutton disconnects power to control circuit and shuts engine off.
- 14. Engine Diagnosis Switch When held in either direction, this switch "[]" enables an error blink code for engine control unit (ECU).
- **15. Circuit Breakers** In the event of a power overload or positive circuit grounding, the circuit breaker pops out. Push breaker back in to reset.



#### 2.5-12 Platform Control Console

This metal control console is mounted at front guardrail of the platform. It has the following controls:


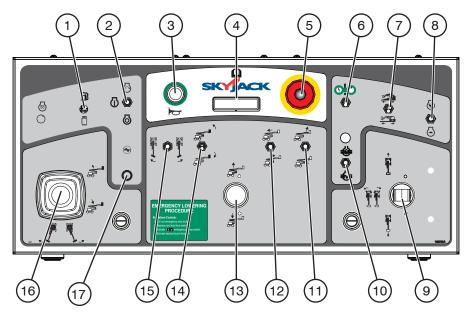


Figure 2-7. Platform Control Console

- 1. Dual Fuel Switch (If Equipped) This switch selects between "D" gasoline or "D" liquid propane gas.
- Engine Start/On/Off Switch This switch, when held momentarily in "O" start position, starts engine. Once started, the switch returns to "O" on position. When in "O" off position, it turns engine off.
- **3.** Horn Pushbutton This "C" pushbutton sounds an automotive-type horn.
- 4. Status Indicator Pilot Lights These lights indicate operational status and errors in any function in the controls/engine.



A. Footswitch - This light illuminates when footswitch is depressed. A 15-second antitiedown feature deactivates footswitch when operator depresses it for 15 seconds without activating any function.

- **B.** Chassis Tilt This light illuminates when the aerial platform chassis is at an inclination that activates the tilt sensor. At this inclination, an audible alarm will sound at the platform. Refer to Section 2.15 for instructions regarding recovery from an inclined position.
- **C. Engine** This light indicates failure in engine control system.
- D. Fuel This light indicates low fuel level.
- E. Glow Plug (Diesel) This light illuminates until glow plugs have completed their timed cycle. When the lamp goes out, the engine is ready to be started.
- Emergency Stop Button This red "mushroomhead" "
   "
   " pushbutton disconnects power to control circuit and shuts engine off.
- 6. Emergency Power Unit This switch "()" enables emergency power unit.
- 7. Torque Switch This switch selects "
  low or "
  nigh torque.
- 8. Low/High Throttle Switch This rotary switch allows selection between " , low and " , high engine throttle speeds.

#### 2.5-12 Platform Control Console (Continued)

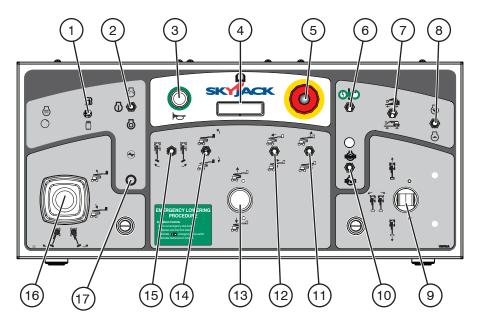


Figure 2-7. Platform Control Console

9. Drive/Steer Controller - This one-hand lever controls driving "1" forward or "1" backward.

The rocker switch controls steering " ]" left or

" ] " right. Internal springs return it to neutral when stick is released.

- Differential Lock Switch This momentary switch, when pushed forward and then released, engages
   " differential lock and turns differential light on. When pulled backward and then released, disengages " differential lock and turns differential light off.
- **11.** Jib Up/Down Switch This switch controls
   " , up or " , or " , own movement of jib.
- 12. Fly Boom Extend/Retract Switch This switch controls ", extension or ", retraction of fly boom.

- **13. Riser Raise/Lower Switch** This switch controls
- **Platform Rotation Switch** This switch controls
  "" " left or " " right rotation of platform.
- 16 Boom/Turret Controller This dual-axis lever controls " " raising or " " lowering of main boom or rotating " " left or " " right of turret.
- Generator On/Off Switch (If Equipped) This switch turns the hydraulic generator "O" on or "O" off.



#### 2.6 Special Options

The following descriptions are for identification, explanation and locating purposes only.

#### 2.6-1 Cold Weather Start (If Equipped)

The battery warmer/hydraulic oil heater cord is located on the engine compartment near the battery. This cord is plugged into the AC outlet at least 4 hours before starting engine when temperature gets below  $-11^{\circ}C$ (+11°F).

#### 2.6-2 Work Light (If Equipped)

The work light assembly is mounted on the railings of the platform.

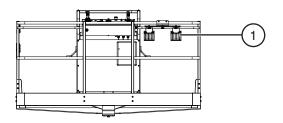


Figure 2-8. Work Light

1. **Work Light** - This light turns on when plugged into the AC outlet on the platform.



Work lights are not intended to replace the ambient lighting required to navigate and operate this aerial platform.

#### 2.6-3 Flashing Amber Light (If Equipped)

The flashing amber light is located on top of the turret of the aerial platform. This light flashes when boom function is activated. This works in conjunction with all motion alarm.

#### NOTE

The combined weight of attachment, panels, occupants and tools should not exceed platform rated capacity.



#### 2.6-4 Tire Sealant (If Equipped)

This option is identified with a tire sealant label located at the rim of the wheel.

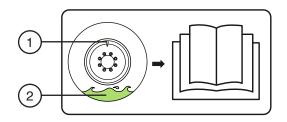


Figure 2-9. Tire Sealant Label

**Tire Sealant Label** - This label indicates that tire sealant is present inside the tires.

- 1. **Tire Valve Stem Cap** This green valve stem cap is substituted onto air tires to indicate sealant has been installed.
- 2. **Sealant** This symbol signifies that the tire is equipped with sealant.



The operator **MUST** properly handle tires with sealant.

- When depressurizing, inflating or checking tire pressure, ensure that the valve stem is at the top to prevent sealant from entering the stem (refer to Figure 2-9).
- If the tire no longer holds pressure, replace the tire.

### N WARNING

The sealant contains propylene glycol. Do not ingest, inhale or get into eyes. If it gets into your eyes, flush with water for 15 minutes. Consult physician.

#### 3.6-5 Hydraulic Generator (If Equipped)

#### To start the hydraulic generator:

- 1. Ensure that engine is running.
- 2. On platform control console, turn generator on/ off switch to " on position.

#### To restore normal operation:

1. On platform control console, turn generator on/ off switch to "O" off position.

#### NOTE

An engine shut down will turn the generator off. Normal boom functions are disabled while the generator is on.



#### **Operator's Responsibility**

#### 2.7 Operator's Responsibility

It is the responsibility of the operator, prior to each work shift, to perform the following:

#### 1. Visual and Daily Maintenance Inspections

- are designed to discover any damage of components before the aerial platform is put into service.
- are done before the operator performs the function tests.



Failure to locate and repair damage, and discover loose or missing parts may result in an unsafe operating condition.

#### 2. Function Tests

• are designed to discover any malfunctions before the aerial platform is put into service.

#### **IMPORTANT**

The operator must understand and follow the step-by-step instructions to test all aerial platform functions.

The operator should make a copy of the Operator's Checklist (see Table 2.8) and fill out the visual and daily maintenance inspections and the function tests sections while performing the items outlined in Section 2.8 and Section 2.9.

#### IMPORTANT

If aerial platform is damaged or any unauthorized variation from factorydelivered condition is discovered, aerial platform must be tagged and removed from service.

Repairs to the aerial platform may only be made by a qualified service technician. After repairs are completed, the operator must perform visual and daily maintenance inspections & function tests again.

Scheduled maintenance inspections shall only be performed by qualified service technician (see Table 2.7).

3. Cold Weather Hydraulic System Warm Up

### N WARNING

Caution must be exercised when operating aerial platform in cold temperature. Cold temperature can affect the performance of the aerial platform. Braking response and other functions may delay.

# CAUTION

Ensure hydraulic oil throughout system is warmed before operating aerial platform in low temperatures. Failure to heed this warning can lead to unexpected movements, product damage, death or serious injury.

#### **Boom Functions:**

### 

#### Be aware of overhead obstructions or other possible hazards around the aerial platform when lifting.

- Run engine at low throttle.
- Raise, lower, extend and retract boom slowly several times until boom functions are at acceptable operating performance.


#### **Drive Functions:**

### 🚺 WARNING

#### Ensure that there are no personnel or obstructions in the path of travel, including blind spots.

- Run engine (if applicable) in low throttle.
- Drive aerial platform forward and backward slowly several times until braking response is in safe operating performance.

SKYJACK

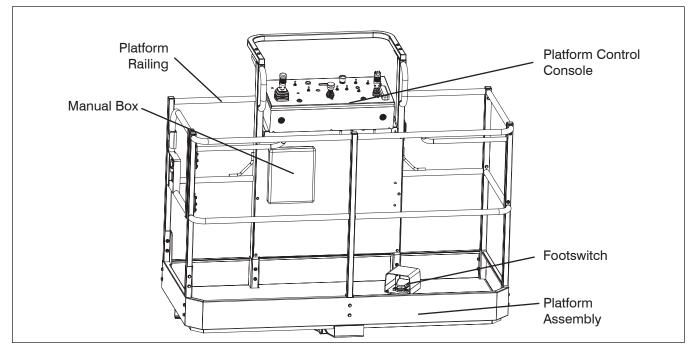

#### 2.8 Visual & Daily Maintenance Inspections

Begin the visual and daily maintenance inspections by checking each item in sequence for the conditions listed in this section.

# 

To avoid injury, do not operate an aerial platform until all malfunctions have been corrected.

# <u> (</u>WARNING

To avoid possible injury, ensure aerial platform power is off during your visual and daily maintenance inspections.

#### NOTE

While doing visual and daily inspections in different areas, be aware to also inspect limit switches, electrical and hydraulic components.

#### 2.8-1 Labels

Refer to the labels section in this manual and determine that all labels are in place and are legible.

#### 2.8-2 Electrical

Maintaining the electrical components is essential to good performance and service life of the aerial platform.

Inspect the following areas for chafed, corroded and loose wires:

- boom to platform cable harness
- engine compartment electrical panel
- engine wiring harness
- rotary manifold wiring

#### 2.8-3 Limit Switches

Ensure limit switches are properly secured with no signs of visible damage and movement is not obstructed.


#### 2.8-4 Hydraulic

Maintaining the hydraulic components is essential to good performance and service life of the aerial platform.

Perform a visual inspection around the following areas:

- hydraulic tank filter, fittings, hoses, emergency power unit and turret/base surface
- engine compartment fittings, hoses, main pump, filter and turret/base surface
- all hydraulic cylinders
- all hydraulic manifolds
- underside of the turret
- underside of the base
- ground area under the aerial platform



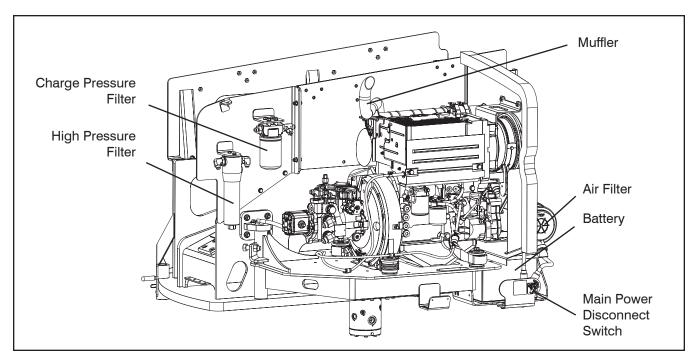

#### 2.8-5 Engine Compartment

- Ensure all compartment latches are secure and in proper working order.
- Main Power Disconnect Switch
  - Turn main power disconnect switch to "O" off position.
  - Ensure there are no loose or missing parts and there is no visible damage.
  - Ensure all cables are secure and switch is in proper working condition.

#### Battery

Proper battery condition is essential to good engine performance and operational safety. Improper fluid levels or damaged cables and connections can result in engine component damage and hazardous conditions.

# N WARNING

Explosion hazard. Keep flames and sparks away. Do not smoke near batteries.




### N WARNING

Battery acid is extremely corrosive -Wear proper eye and facial protection as well as appropriate protective clothing. If contact occurs, immediately flush with cold water and seek medical attention.

- 1. Check battery cases for damage.
- 2. Clean battery terminals and cable ends thoroughly with a terminal cleaning tool or wire brush.
- 3. Ensure all battery connections are tight.
- If applicable, check battery fluid level. If plates are not covered by at least 1/2" (13 mm) of solution, add distilled or demineralized water.
- 5. Replace battery if damaged or incapable of holding a lasting charge.

### 

Use original or manufacturer-approved parts and components for the aerial platform.

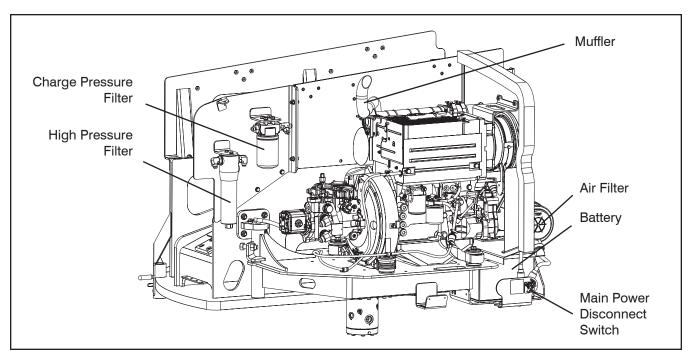

#### • High Pressure Filter

- Ensure housing is secure and shows no visible damage or leakage.
- Hydraulic Pumps
  - Ensure there are no loose or missing parts and there is no visible damage.
  - Ensure all bolts are properly tightened.
  - Ensure all fittings and hoses are properly tightened and there is no evidence of hydraulic leakage.
- Muffler and Exhaust
  - Ensure muffler and exhaust system are properly secured, with no evidence of damage.
- Engine Pivot Tray
  - Ensure there are no loose or missing parts and no visible damage to the engine pivot tray. Ensure that tray-securing bolt is in place.
- Engine Oil Level
  - Maintaining the engine components is essential to good performance and service life of the aerial platform.



Beware of hot engine components.

#### Check oil level on dipstick


- Oil level should be in the "safe" zone. Add oil as needed. Refer to Table 2.2b for recommended oil type.
- Engine Air Filter
  - Ensure there are no loose or missing parts and there is no visible damage.
- Fuel Leaks
  - Ensure that there no fuel leaks.

# <u> Danger</u>

Engine fuels are combustible. Inspect the aerial platform in an open, wellventilated area away from heaters, sparks and flames. Always have an approved fire extinguisher within easy reach.

- Ensure fuel tank, hoses and fittings show no visible damage and no evidence of fuel leakage.



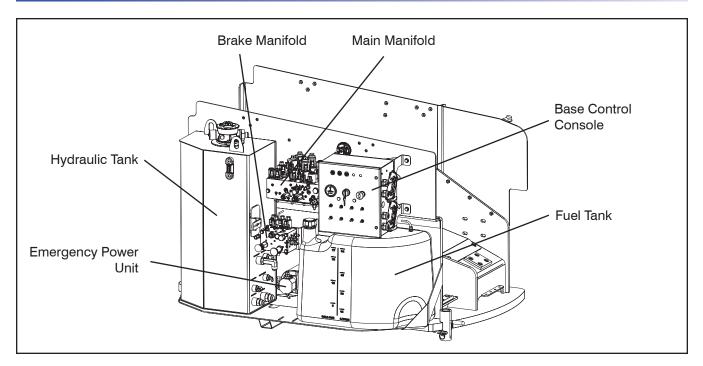

#### 2.8-6 Control Compartment

- Ensure all compartment latches are secure and in proper working order.
- Base Control Console
  - Ensure all switches are returned to their neutral positions.
  - Ensure there are no loose or missing parts and there is no visible damage.
- Hydraulic Tank
  - Ensure hydraulic filler cap is secure.
  - Ensure tank shows no visible damage and no evidence of hydraulic leakage.
- Hydraulic Oil
  - Be sure that the boom is in the stowed position, and then visually inspect the sight gauge located on the side of the hydraulic oil tank.
  - The hydraulic oil level should be between the minimum and maximum marks on the sight glass. Add oil as needed. Refer to Table 2.2b for recommended oil type.

#### • Brake and Main Manifolds


- Ensure all fittings and hoses are properly tightened and there is no evidence of hydraulic leakage.
- Ensure there are no loose wires or missing fasteners.
- Emergency Power Unit
  - Ensure there are no loose or missing parts and there is no visible damage.
  - Ensure there are no loose wires or missing fasteners.
  - Ensure all fittings and hoses are properly tightened and there is no evidence of hydraulic leakage.
- Fuel Tank

#### IMPORTANT

Before using your aerial platform ensure there is enough fuel for expected use.

- Ensure fuel filler cap is secure.
- Ensure tank shows no visible damage and no evidence of fuel leakage.



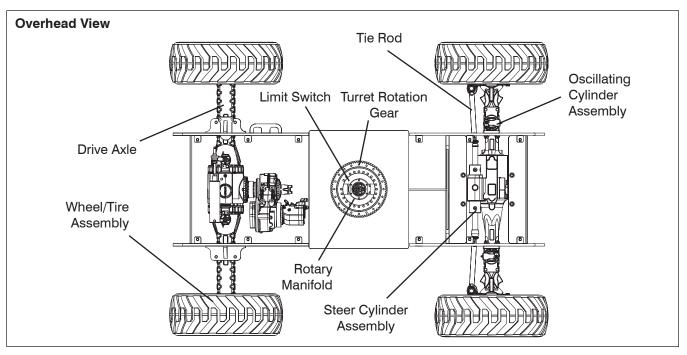

- Fuel Leaks
  - Ensure that there no fuel leaks.



Engine fuels are combustible. Inspect the aerial platform in an open, wellventilated area away from heaters, sparks and flames. Always have an approved fire extinguisher within easy reach.

- Ensure fuel tank, shutoff valve, hoses and fittings show no visible damage and no evidence of fuel leakage.

#### 2.8-7 Base

- Turret Transportation Lock
  - Ensure turret transportation lock is unlocked, there are no loose or missing parts and there is no visible damage.
- Drive Axle
  - Ensure drive axle is properly secured, there are no loose or missing parts, all fittings and hoses are properly tightened and there is no evidence of hydraulic leakage.

#### Oscillating Cylinder Assembly

- Ensure oscillating cylinder assembly is properly secured, there are no loose or missing parts, all fittings and hoses are properly tightened and there is no evidence of hydraulic leakage.

#### NOTE

Oscillating axle is locked when aerial platform is in work mode. Refer to Diagram 2.3. Axle Oscillation Diagram.


#### Steer Cylinder Assembly

- Ensure steer cylinder assembly is properly secured, there are no loose or missing parts, all fittings and hoses are properly tightened and there is no evidence of hydraulic leakage.

#### Tie Rod

- Ensure there are no loose or missing parts, tie rod end studs are locked and there is no visible damage.



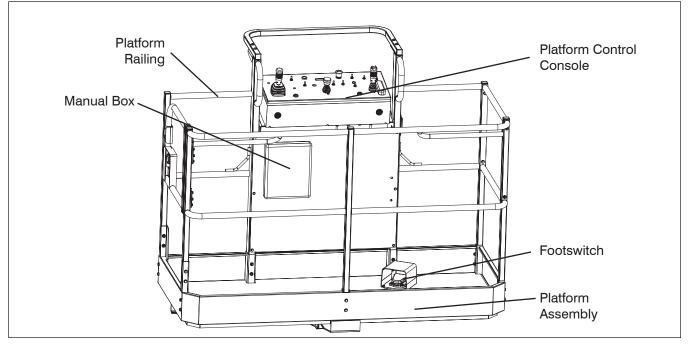

#### Wheel/Tire Assembly

The aerial platform is either equipped with air tires or foam-filled tires. Tire and/or wheel failure could result in an aerial platform tip over. Component damage may also result if problems are not discovered and repaired in a timely fashion.



# An over-inflated tire can explode and may cause death or serious injury.

- Check all tire treads and sidewalls for cuts, cracks, punctures and unusual wear.
- Check each wheel for damage and cracked welds.
- Check each lug nut for proper torque to ensure none are loose.

To maximize stability, it is essential to maintain proper pressure in all air-filled tires.

- Check each tire with an air pressure gauge and add air as needed.

Refer to Table 2.4 for tire/wheel specifications.

#### 2.8-8 Manuals

Ensure a copy of operating manual, and other important documents are enclosed in manual storage box.

- Check to be sure manual storage box is present and in good condition.
- Ensure manuals are legible and in good condition.
- Always return manuals to the manual storage box after use.


#### 2.8-9 Platform Assembly

- Ensure there are no loose or missing parts and there is no visible damage.
- Ensure all fasteners are securely in place.
- Ensure all railings are properly positioned and secured.
- Ensure gate is in good working order.
- Ensure footswitch is in good working order and has not been modified, disabled or blocked.

#### **2.8-10 Platform Control Console**

- Ensure all switches/controllers are returned to neutral and are properly secured.
- Ensure there are no loose or missing parts and there is no visible damage.



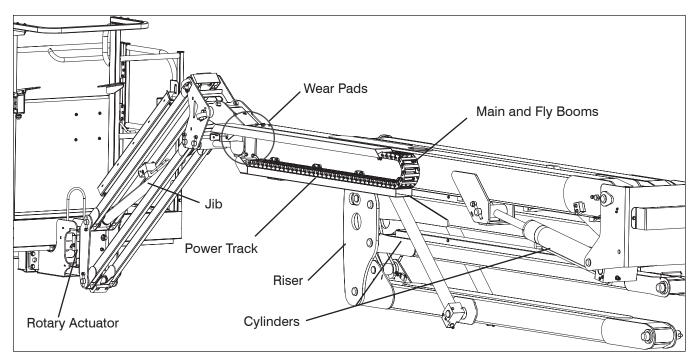

#### 2.8-11 Rotary Actuator

- Ensure there are no loose or missing parts and there is no visible damage.
- Ensure all bolts and pins are properly tightened.
- Ensure all hoses are properly tightened and there is no evidence of hydraulic leakage.

#### 2.8-12 Jib (If Equipped)

- Ensure there are no loose or missing parts and there is no visible damage.
- Ensure all bolts and pins are properly tightened.
- Ensure all hoses are properly tightened and there is no evidence of hydraulic leakage.


#### 2.8-13 Boom

- Ensure there are no loose or missing parts and there is no visible damage.
- Ensure all bolts and pins are properly tightened.
- Ensure there are no visible cracks in welds or structure and there are no signs of deformation.
- Ensure all hoses are properly tightened and there is no evidence of hydraulic leakage.

#### Cylinders

- Ensure all cylinders are properly secured and there is no evidence of leakage.
- Wear Pads
  - Ensure all bolts are tight, there is no visible damage to the wear pads and that no parts are missing.
- Hoses
  - Ensure all hoses are properly tightened and there is no evidence of hydraulic leakage.
- Power Track
  - Ensure there are no loose or missing parts and there is no visible damage.




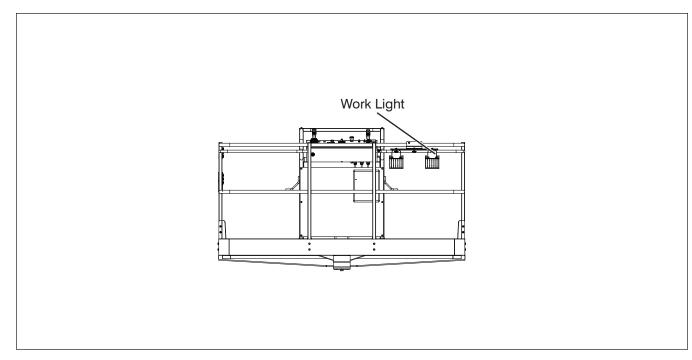

#### 2.8-14 Special Options

- Battery Warmer/Hydraulic Oil Heater (If Equipped)
  - Ensure battery warmer/hydraulic oil heater cord is properly secured with no signs of visible damage and hydraulic leakage.
- Work Light (If Equipped)
  - Ensure lamps are properly secured with no signs of visible damage.
  - Ensure mounting bracket is properly secured.
  - Ensure there are no loose wires or missing fasteners.
- Flashing Amber Light (If Equipped)
  - Ensure lamp is properly secured with no signs of visible damage.



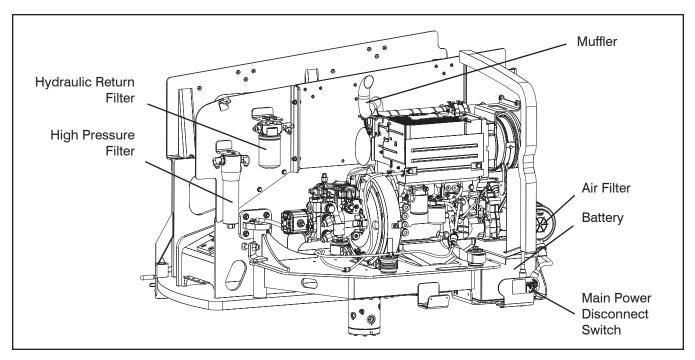

#### 2.9 Function Tests

Function tests are designed to discover any malfunctions before aerial platform is put into service. The operator must understand and follow step-by-step instructions to test all aerial platform functions.

#### IMPORTANT

Never use a malfunctioning aerial platform. If malfunctions are discovered, aerial platform must be tagged and placed out of service. Repairs to aerial platform may only be made by a qualified service technician.

After repairs are completed, operator must perform a pre-operation inspection and a series of function tests again before putting aerial platform into service.

Prior to performing function tests, be sure to read and understand Section 2.10 - Start Operation.

# 

Allow engine to warm up for a few minutes at low speed before applying any load.


### 

**Cold Weather** - Caution must be exercised when operating aerial platform in cold temperature. Cold temperature can affect the performance of the aerial platform. Braking response and other functions may delay. Throughout the following procedures, test all functions several times until they are at acceptable operating performance.

#### NOTE

All-function motion alarm should sound while operating any boom and drive function.



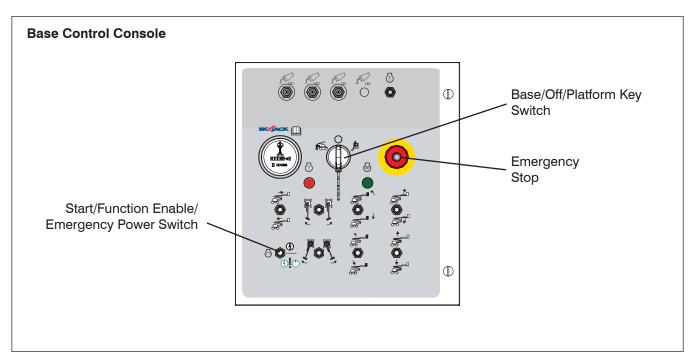

2.9-1 Test Main Power Disconnect Switch

- In engine compartment, turn main power disconnect switch to "O" off position.
   Result: Aerial platform functions should not operate.
- 2. In engine compartment, turn main power disconnect switch to "" on position.

#### NOTE

Close all cowlings before proceeding to next item.

#### 2.9-2 Base Control Console

- On platform control console, pull out "
   emergency stop button.
- 2. For dual fuel engine, select fuel supply by moving fuel switch to either " gasoline or " " liquid propane gas position.

# N WARNING

Ensure that you maintain three points of contact to mount/dismount platform.


#### Test Base Emergency Stop Light

- On base control console, pull out "
   "
   " emergency stop button.
   Result: Emergency stop light should continuously illuminate.
- 2. Turn base/off/platform key switch to "**1**5" base position.
- 3. Start engine by selecting "O" start position from start/function enable/ emergency power switch.

#### Test Base Emergency Stop

- Push in "O" emergency stop button. **Result:** Engine should shut down and aerial platform functions should not operate.
- 2. Pull out " emergency stop button and restart engine.

SKYIACK

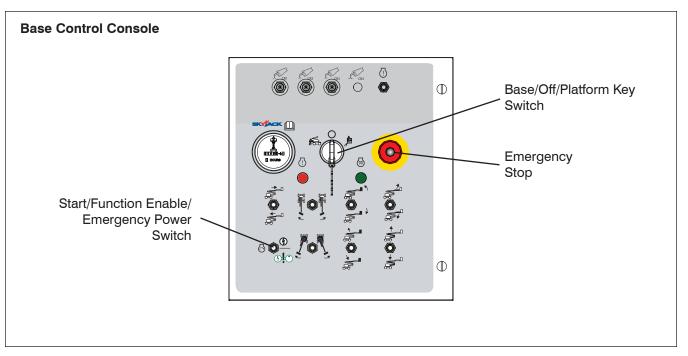

Test Function Enable Switch and All Boom Functions



Ensure that there are no personnel or obstructions in test area and there is sufficient room for boom to swing.

 Do not hold "O" function enable switch. Attempt to activate each boom and platform switch.
 Result: All boom and platform functions

should not operate.

2. Hold "" function enable switch and activate each boom and platform function.

**Result:** All boom and platform functions should operate as selected.

#### Test Platform Self-leveling

- 1. Lower boom to stowed position.
- 2. Adjust platform to a level position using platform leveling switch.
- Raise " and lower " main boom through a full cycle.
   Result: Platform should remain level at all time.


#### Test Emergency Power

- On base control console, push in "
   "
   " emergency stop button to turn engine off.
- 2. On platform control console, push in "emergency stop button.

### 

When operating on auxiliary power, do not operate more than one function at a time to avoid overloading 12-Volt auxiliary pump motor. Do not use emergency power unit continuously for more than two minutes.



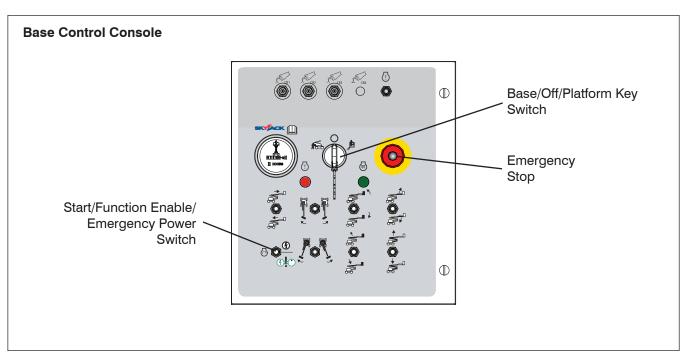

#### NOTE

- To conserve battery power, test each function through a partial cycle.
- 3. On base control console, pull out "emergency stop button.
- On base control console, turn base/off/platform key switch to ", "," platform position.
- 5. Select "① ①" emergency power position from start/function enable/emergency power switch and activate each boom function.

**Result:** All selected functions should operate.

- 6. Turn base/off/platform key switch to "**1**5" base position.
- 7. Select "① ①" emergency power position from start/function enable/emergency power switch and activate each boom function.

**Result:** All selected functions should operate.

#### NOTE

The emergency power unit has two-minute duty cycle.


#### Test Base/Off/Platform Switch

- 1. Ensure both " ( )" emergency stop buttons are pulled out.
- 2. Start engine.
- On base control console, turn base/off/ platform key switch to "O" off position. Result: Engine should shut down and aerial platform functions should not operate.
- On base control console, turn base/off/ platform key switch to ", platform position.

### 

Ensure that you maintain three points of contact to mount/dismount platform.

- 5. Enter platform and close gate.
- 6. On platform control console, select "**()**" on position from engine enable switch.

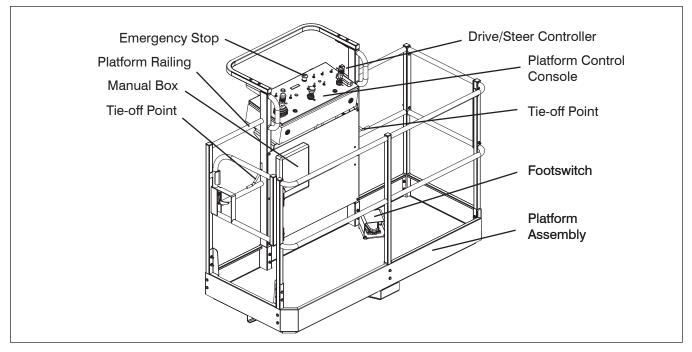

- 7. Select "O" start position from engine start/on/off switch to start engine.
- 8. Dismount from platform.
- On base control console, attempt to activate each boom and platform switch while holding function enable switch.
   **Result:** All boom and platform functions should not operate while holding function enable switch.
- 10. Push in "O" emergency stop button to turn engine off.
- 11. Pull out "O" emergency stop button.

2.9-3 Platform Control Console



Ensure that you maintain three points of contact to mount/dismount platform.

1. Enter platform and close gate.

# 


**DO NOT** operate any control on platform control console without proper fall protection secured to designated location in platform. Failure to avoid this hazard could result in death or serious injury!

# N WARNING

Ensure that there are no personnel or obstructions in test area and that there is sufficient room for boom to swing.

- Test Platform Emergency Stop Light
  - On platform control console, pull out "
     emergency stop button.
     Result: Emergency stop light should continuously illuminate.



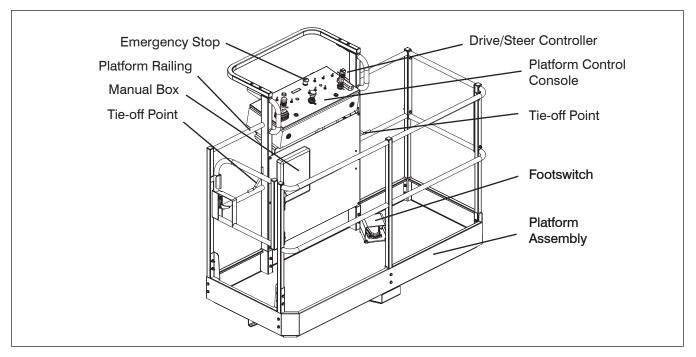

#### Test Platform Emergency Stop

- Start engine by selecting "O" start position from engine start/on/off switch.
   Result: Engine should start.
- Push in "
   emergency stop button.
   Result: Engine should shut down and aerial platform functions should not operate.
- Test Footswitch
  - 1. Ensure engine enable switch is in "**U**" on position.
  - 2. Do not start engine.
  - 3. Select generator on/off switch to off position (if equipped).
  - Depress and hold footswitch and attempt to start engine by selecting "O" start position from engine start/on/off switch.
     Result: Engine should not start.
  - Without depressing footswitch, try to start engine.
     Result: Engine should start.

 With engine running and without depressing footswitch, test each boom and platform function.
 Result: Aerial platform functions should not operate.


#### NOTE

A 15-second anti-tiedown feature deactivates footswitch when operator depresses it for 15 seconds without activating any function.

#### Test Engine Enable Switch

- 1. Ensure engine is running.
- Select "O" off position from engine enable switch.
   Result: Engine should shut down and platform control console is disabled.
- Select "①" on position from engine enable switch.
   Result: Platform control console is enabled.
- 4. Start engine by selecting "O" start position from engine start/on/off switch.



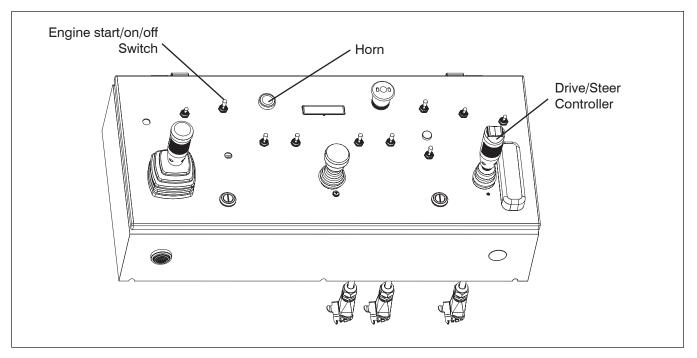

#### Test Steering

- 1. Restart engine.
- 2. Depress and hold footswitch.
- 3. Press rocker switch on top of drive/steer

controller to " 🛓 " left and " 🛓 " right. **Result:** Steer wheels should turn left and right.

Test Driving Function

## 

Ensure that there are no personnel or obstructions in the path of travel, including blind spots.

- 1. Ensure path of intended motion is clear.
- 2. Ensure boom is in stowed position and fly boom fully retracted.
- 3. Depress and hold footswitch.

Slowly move drive/steer controller in

 <sup>↑</sup>
 <sup>↑</sup>

until aerial platform begins to move, and then return handle to center position. **Result:** Aerial platform should move in forward or reverse direction, and then come to a stop.


### **WARNING** DRIVING ON A SLOPE

• When driving on a slope greater than 30%, the platform capacity is limited to 300 lb. (136 kg).



- The platform must be between the non-steer wheels and must be on the downside of the hill.
- When slope increases to above 45%, the forward drive is disabled but reverse drive remains active.




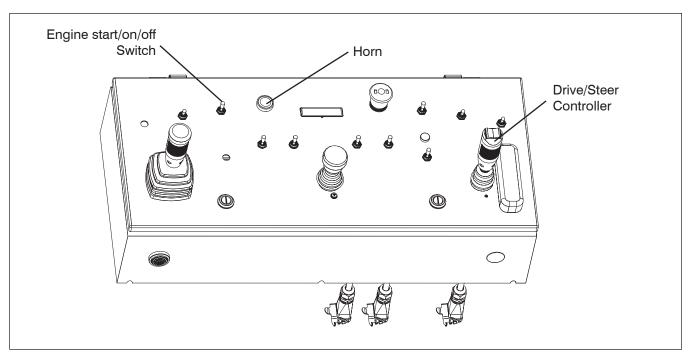

#### Test Driving Speed

- 1. Depress and hold footswitch.
- Raise " main boom 4 ft. (1.2 m) above ground and then slowly move drive/ steer controller to full drive position.
   Result: The maximum achievable drive speed should be significantly less than stowed drive speed.
- 3. Lower boom to stowed position.
- 4. Extend " " " fly boom approximately 12 in. (30 cm) and then slowly move drive/ steer controller to full drive position.
  Result: The maximum achievable drive speed should be significantly less than stowed drive speed.
- 5. Retract fly boom.
- Raise riser approximately 4 ft. (1.2 m) above ground.
   Result: The maximum achievable drive speed should be significantly less than stowed drive speed.



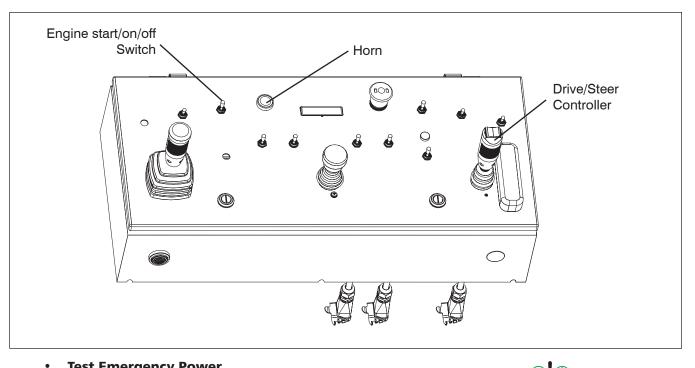

**Test Emergency Power** 



When operating on auxiliary power, do not operate more than one function at a time to avoid overloading 12-Volt auxiliary pump motor. Do not use emergency power unit continuously for more than two minutes.

#### NOTE

- To conserve battery power, test each function through a partial cycle.
- 1. On platform control console, push in "emergency stop button to turn engine off.
- 2. Pull out "• emergency stop button.
- 3. Select "(1)" on position from engine enable switch.
- 4. Depress and hold footswitch.


5. Push and hold "(1) \* " emergency power switch and activate each function control handle or switch. Result: All boom and steer functions should operate. Drive functions should not operate.

#### NOTE

The emergency power unit has two-minute duty cycle.

- **Test Horn** 
  - 1. Push "<sup>\*</sup> horn pushbutton. Result: Horn should sound.



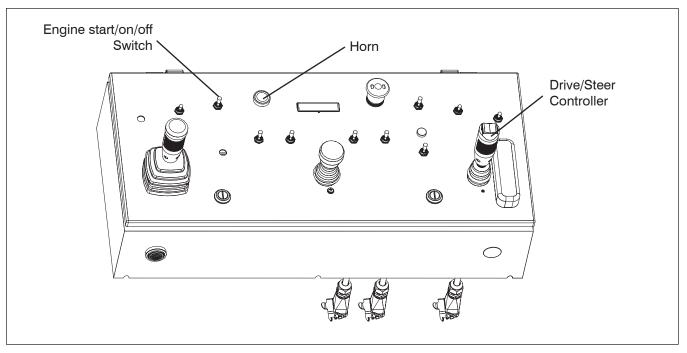

Test Brakes

## N WARNING

#### Brakes will engage instantly when you release footswitch, causing aerial platform to stop immediately.


- 1. Restart engine.
- 2. Move aerial platform to a firm level surface to ensure similar traction on left and right.
- 3. Ensure boom is in stowed position.
- Depress and hold footswitch and drive aerial platform first "⊥" forward then "↓" reverse.
- 5. Remove your foot from footswitch. **Result:** Aerial platform should come to an abrupt stop. If aerial platform does not stop immediately, or if aerial platform pulls to one side while stopping, do not operate aerial platform until brake adjustments have been checked.

#### Test Manual Platform Leveling

- 1. Depress and hold footswitch.
- On platform leveling override switch, select
   " up position to tilt platform up or " on " odwn position to tilt platform down.

**Result:** Platform should tilt up or down.



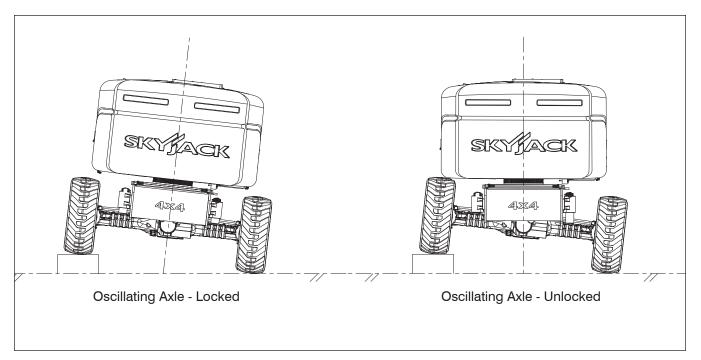

Test Differential Lock Switch



#### Before engaging differential lock, ensure drive/steer controller is in neutral position.

**Result:** Differential lock is engaged and differential light should turn on.

Pull differential lock switch backward
 ""to the unlocked position and then release.

**Result:** Differential lock is disengaged and differential differential light should turn off.

**Test Oscillating Axles** 



**DO NOT** operate any control on platform control console without proper fall protection secured to designated location in platform. Failure to avoid this hazard could result in death or serious injury!

- Extend fly boom 12 in. (30 cm) while on a firm level ground.
   Result: The steer axle should be locked.
- Drive one of the steer tires up onto a 6 in. (15 cm) block or curb.
   Result: An appropriate tilt of the aerial platform chassis should occur.
- 3. Retract fly boom while in tilt position. **Result:** The steer axle should unlock and the aerial platform chassis should level itself to ground.



#### 2.10 Start Operation

Carefully read and completely understand the Operating Manual and all warnings and instruction labels (refer to labels section) on the aerial platform.

### <u> (</u>WARNING

**DO NOT** operate this aerial platform without proper authorization and training. Failure to avoid this hazard could result in death or serious injury.

Before operating this aerial platform, perform the following steps:

- 1. Visual and daily maintenance inspections (see Section 2.8)
- 2. Function tests (see Section 2.9)
- 3. Jobsite inspection

It is the responsibility of the operator to perform a jobsite inspection and avoid the following hazardous situations:

- holes or drop-offs
- ditches or soft fills
- floor obstructions, bumps or debris
- overhead obstructions
- electrical cords, hoses and high voltage conductors
- hazardous locations
- inadequate surface support to withstand all load forces imposed by the aerial platform
- wind and weather conditions
- the presence of unauthorized personnel
- other possible unsafe conditions

## 🕂 WARNING

# An operator should not use any aerial platform that:

- does not appear to be working properly.
- has been damaged or appears to have worn or missing parts.
- has alterations or modifications not approved by the manufacturer.
- has safety devices which have been altered or disabled.
- has been tagged or locked out for non-use or repair.

Failure to avoid these hazards could result in death or serious injury.

#### 2.10-1 To Activate Base Control Console

### N WARNING

Ensure that you maintain three points of contact to mount/dismount the platform.

- 1. Enter platform and close gate.
- On platform control console, pull out "
   emergency stop button.
- 3. For dual fuel engine, select fuel supply by moving fuel switch to either " ," gasoline or " ," liquid propane gas position.
- 4. In engine compartment, turn main power disconnect switch to "" on position.
- 5. On base control console, turn base/off/platform key switch to "
- 6. Pull out "O" emergency stop button.
- Select "O" start position from start/function enable/emergency power switch until engine starts.

**DO NOT** over crank the starter. If engine fails to start after multiple attempts, consult "Troubleshooting Information," in the Service and Maintenance Manual.

Allow engine to warm up for a few minutes at low speed before applying any load.

#### 2.10-2 To Rotate Platform Using Base Control Console

- 1. Activate and hold function enable switch "��" by pushing it to the right.
- 2. Push platform rotation switch to either "L" left or
  - "<sup>4</sup>" right position. Release switch to stop.



Page 44

#### 2.10-3 To Rotate Turret Using Base Control Console

### 

When rotating the turret, ensure that there are no personnel or obstructions in the path of rotation, including blind spots.

- 1. Activate and hold function enable switch "④" by pushing it to the right.
- 2. Push turret rotation switch to either "L"

clockwise or "  $\sum$  " counterclockwise position. Release switch to stop.

#### NOTE

Turret can be rotated continuously 360 degrees.

#### 2.10-4 To Move Jib (If Equipped) Up and Down Using Base Control Console

- 1. Activate and hold function enable switch " (4)" by pushing it to the right.
- Push jib up/down switch to either " " up or " down position. Release switch to stop.

#### 2.10-5 To Move Riser Up and Down Using Base Control Console

- 1. Activate and hold function enable switch "④" by pushing it to the right.
- Push riser up/down switch to either " " up or " up or "
   down position. Release switch to stop.

#### 2.10-6 To Raise or Lower Main Boom Using Base Control Console

- 1. Activate and hold function enable switch "④" by pushing it to the right.
- 2. Push main boom raise/lower switch to either "
  "
  "
  raise or "
  "
  "
  lower position. Release switch to stop.

#### 2.10-7 To Extend or Retract Fly Boom Using Base Control Console

- 1. Activate and hold function enable switch "(4)" by pushing it to the right.
- Push fly boom extend/retract switch to either
   "extend or "extend or "retract position. Release switch to stop.

#### 2.10-8 To Level Platform Manually Using Base Control Console

- 1. Activate and hold function enable switch "④" by pushing it to the right.
- Push platform leveling override switch to either
   """" up or """" down position.
   Release switch to stop.



#### 2.10-9 To Operate Using Emergency Power Switch at Base Control Console

This is a momentary-type switch. This switch allows all functions except the drive function to operate in the event of engine malfunction. Refer to Section 2.13 for the emergency lowering procedure.

#### NOTE

The emergency power unit has two-minute duty cycle.

#### Do not use emergency power unit continuously for more than two minutes.

#### 2.10-10 To Activate Platform Control Console

- 1. In engine compartment, turn main power disconnect switch to "" on position.
- On base control console, turn base/off/platform key switch to "<sup>\*</sup>, platform position.
- 3. On base control console, pull out "●" emergency stop button.

### N WARNING

Ensure that you maintain three points of contact to mount/dismount the platform.

### N WARNING

**DO NOT** operate any control on operator's control console without proper fall protection secured to the designated location in the platform. Failure to avoid this hazard could result in death or serious injury.

- 4. Enter platform and close gate.
- 5. Attach body harness lanyards of each occupant to platform lanyard rings.
- On platform control console, pull out "
   emergency stop button.

 Push and hold "O" start position from start/on/off switch until engine starts.



**DO NOT** over crank the starter. If engine fails to start after multiple attempts, consult "Troubleshooting Information," in the Service and Maintenance Manual.

#### NOTE

Engine will not start if you are pressing down on the footswitch.

Select desired engine RPM using throttle switch:
 "
 <sup>w</sup> high or "
 <sup>w</sup> low.

### N WARNING

**DO NOT** drive or steer the aerial platform when the platform position does not allow you a clear view of the base. Your area of operation should be cordoned from other personnel or equipment.

2.10-11 To Drive Forward or Reverse

### 

- Refrain from climbing hills with slope greater than 20%.
- When climbing high grades:
  - all booms must be fully stowed.
  - restrict platform capacity to 300 lb. (136 kg).

### CAUTION

When you are in the platform and positioned over an axle, the direction you are facing will be forward.

- 1. Depress and hold footswitch.
- 2. On platform control console, push and hold

drive/steer controller in this direction """ to drive forward or """ to drive backward.

3. Release controller handle to stop.



### DANGER

The drive orientation can change when the turret is swung 90 degrees off center of the normal driving position (roughly when boom is swung past the rear tire). Drive re-orientation will not occur while driving and rotating until the joystick is released for 6 seconds or when the footswitch is released.

### WARNING **G ON A SLOPE**

- When driving on a slope greater than 30%, the platform capacity is limited to 300 lb. (136 kg).
- The platform must be between the non-steer wheels and must be on the downside of the hill.
- When slope increases to above 45%, the forward drive is disabled but reverse drive remains active.

#### 2.10-12 To Steer

- Depress and hold footswitch. 1.
- 2. On platform control console, press rocker on top

of drive/steer controller in this direction " ] " to

steer left or " ] " to steer right.

#### NOTE

Driving and steering may be active at the same time.

#### 2.10-13 To Move Jib (If Equipped) Up and **Down Using Platform Control Console**

- 1. Depress and hold footswitch.
- On jib up/down switch, select " 2. up or " a to move jib down. Release switch to stop.

#### 2.10-14 To Move Riser Up and Down Using **Platform Control Console**

- 1. Depress and hold footswitch.
- On riser up/down switch, select " 2. riser up or " " to move riser down. Release switch to stop.

#### 2.10-15 To Extend or Retract Fly Boom Using **Platform Control Console**

- Depress and hold footswitch. 1.
- On fly boom extend/retract switch, select " 2. to extend fly boom or ", to retract fly boom. Release switch to stop.

#### 2.10-16 To Rotate Platform Using Platform **Control Console**

- 1. Depress and hold footswitch.
- On platform rotation switch, select "\*" to rotate 2. platform left or " $\frac{1}{2}$ " to rotate platform right.

#### 2.10-17 To Level Platform Manually Using **Platform Control Console**

- 1. Depress and hold footswitch.
- 2. On platform leveling override switch, select " " up position to tilt platform up or \* down position to tilt platform down.



#### 2.10-18 To Raise or Lower Main Boom Using Platform Control Console

- 1. Depress and hold footswitch.
- 2. Push and hold boom/turret controller in this direction " a to raise main boom or " a " to lower main boom.
- 3. Release controller handle to stop.

#### 2.10-19 To Sound Horn

1. Press "born pushbutton to sound horn. Release pushbutton to stop sounding horn.

#### 2.10-20 To Rotate Turret Using Platform Control Console

### N WARNING

When rotating the turret, ensure that there are no personnel or obstructions in the path of rotation, including blind spots.

- 1. Depress and hold footswitch.
- 2. Push and hold boom/turret controller in this direction "2" to rotate clockwise or "2" to rotate counterclockwise.
- 3. Release controller handle to stop.

#### NOTE

Turret can be rotated continuously 360 degrees.

#### 2.10-21 To Operate Using Emergency Power Switch at Platform Control Console

This is a momentary-type switch. This switch allows all functions except drive function to operate in the event of engine malfunction. Refer to Section 2.14 for the emergency lowering procedure.

#### NOTE

The emergency power unit has two-minute duty cycle.

# 

#### Do not use emergency power unit continuously for more than two minutes.

#### 2.10-22 Shutdown Procedure

1. Completely retract boom and lower platform.

### 

# Ensure that you maintain three points of contact to mount/dismount the platform.

- 2. Push in "O" emergency stop button on platform control console and on base control console.
- 3. Turn base/off/platform key switch to "O" off position. Remove key.
- 4. Turn main power disconnect switch to "O" off position.

For aerial platform with cold weather start option:

#### NOTE

When temperature gets below -11°C (+11°F), ensure aerial platform is parked close to AC outlet.

5. Plug in battery warmer/hydraulic oil heater into AC outlet at least 4 hours before starting engine.



#### 2.11 Refueling Procedure

This section provides the operator with the procedure on how to refuel the engine with regular fuel and install the propane cylinder.

#### IMPORTANT

Before using the aerial platform ensure there is enough fuel to finish the job.

### 🕂 WARNING

Follow all local and national regulations for propane handling.

### 🕂 WARNING

Failure to heed the following safety precautions could result in death or serious injury:

- Use extreme caution while refueling aerial platforms.
- Ensure engine and all systems are turned off before refueling.
- Refuel aerial platform only in a well ventilated area away from open flame and other sources of ignition, authorized by your employer and supervisor.
- Liquid propane gas fuel is a gas that is heavier than air. It settles in low spots. Any flame or spark could cause a fire that could cause serious injury.
- When changing liquid propane gas cylinder, check all connections for damage or missing parts. Never try to start an aerial platform if you smell gas.
- For gasoline engine models, use only unleaded gasoline with an octane rating 87 or higher.

### <u> (</u>WARNING

Do not smoke in an area where aerial platforms are stored or refueled.

#### 2.11-1 Regular Fuel

- 1. Ensure engine and all systems are turned off and emergency stop buttons are depressed.
- 2. Open fuel compartment door and remove fuel cap.
- 3. Carefully pour fuel into tank ensuring that no spillage occurs.
- 4. Securely replace fuel cap.
- 5. Ensure there are no leaks in the fuel system.
- 6. Wipe up any spilled fuel.
- 7. Dispose of rags in an approved container.

# Protection of Environment from Chemical Dangers

## 

Gasoline, diesel fuel, engine oil and hydraulic fluid are chemicals, which can contaminate the environment. If they are spilled during filling and reach the water, they can cause damage to the environment, e.g., death of fish. For such damage, the party responsible is liable! Therefore, gasoline, diesel fuel, engine oil or hydraulic fluid must not get into the sewage system, streams, rivers or other surface water. For that reason, immediately remove the dripped off or spilled gasoline, diesel fuel, engine oil or hydraulic fluid with appropriate means and dispose of these means according to the regulations.



#### 2.11-2 Propane

## MARNING

Follow all local and federal regulations for propane handling.

#### To remove a propane cylinder:

- 1. Ensure engine and all systems are turned off and emergency stop button is depressed.
- 2. Turn propane cylinder's main valve clockwise to shut off fuel supply to engine.
- 3. Start engine and allow it to stop naturally. Restart engine to ensure fuel lines are empty.
- 4. Disconnect hose from empty propane cylinder by detaching the coupling. Turn fitting counterclockwise.
- 5. Loosen two propane cylinder straps by pulling up on the metal clips. Disconnect straps from hooks.
- 6. Remove the propane cylinder.

#### To install a propane cylinder:

- 1. Ensure engine and all systems are turned off and emergency stop button is depressed.
- 2. Place propane cylinder on bracket or in compartment.
- 3. Ensure metal peg on bracket or compartment is inserted into propane cylinder rim.
- 4. Reconnect propane cylinder straps to hooks and fasten tightly.
- 5. Attach coupler to propane cylinder and turn clockwise to tighten fitting.
- 6. Apply soap water or neutral detergent to pipe connection and cylinder.
- 7. Open valve 1/4 turn counterclockwise and check for any gas leaks.
- 8. Wipe off soap water or detergent after inspection is completed.
- 9. Open main valve fully if there are no leaks.

#### NOTE

The aerial platform is now ready for use by an authorized, qualified operator who has read and completely understands all of Section 2 operations in this manual.

SKYIACK

### **Section 2 - Operation**

### Loading/Unloading

#### 2.12 Loading/Unloading

Know and heed all national, state/provincial and local rules which apply to transporting of aerial platforms.

Only qualified personnel shall operate machinery during loading/unloading.

Be sure vehicle capacity and loading equipment hoists, chains, straps, etc., are sufficient to withstand maximum aerial platform weight.

The transport vehicle must be parked on a level surface and must be secured to prevent rolling while aerial platform is being loaded or unloaded.

#### 2.12-1 Loading and Tie-down

- 1. Lock turret using turret transportation lock (refer to Section 2.12-2).
- 2. Turn key switch to "〇" off position and remove key before transporting.
- 3. Turn main power disconnect switch to "○" off position.
- 4. Chock aerial platform wheels (if necessary).
- 5. Remove all loose items.
- 6. Anchor down aerial platform to transport surface using tie-down points (refer to Figure 2-10).

7. Secure boom from side-to-side movement using lower platform mount between boom end and platform. Do not use excessive downward force when securing boom section.



# Inspect aerial platform for loose or unsecured items.

#### NOTE

For loading and unloading using a winch line, refer to Section 2.13.



 When driving on a slope greater than 30%, the platform capacity is limited to 300 lb. (136 kg).



- The platform must be between the non-steer wheels and must be on the downside of the hill.
- When slope increases to above 45%, the forward drive is disabled but reverse drive remains active.

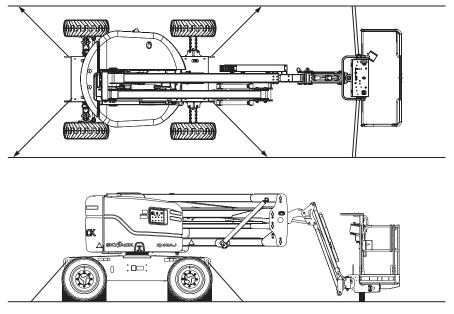


Figure 2-10. Tie-down Points

SKY

#### 2.12-2 Locking the Turret

- 1. Ensure that turret is positioned so that turret transportation lock tube (item 1 Figure 2-11) is aligned into one of two turret locking points in the turret rotation lock plate.
- 2. Pull out turret lock retaining pin (item 2 Figure 2-11). Lower turret lock into locked position and reinsert turret lock retaining pin.

#### 2.12-3 Lifting

#### NOTE

When it becomes necessary to lift aerial platform, it is very important that lifting devices are attached only to designated lifting points (refer to Figure 2-12).

### 

Use chains of ample load capacity sufficient to withstand aerial platform weight.

- 1. Place boom in stowed position centered between drive wheels. Lock turret using turret transportation locking pin (refer to Section 2.12-2) into the transport point (refer to Figure 2-11).
- 2. Turn main power disconnect switch to "O" off position.
- 3. Remove all loose items from aerial platform.
- 4. Properly adjust rigging to prevent damage to aerial platform and so aerial platform remains level.

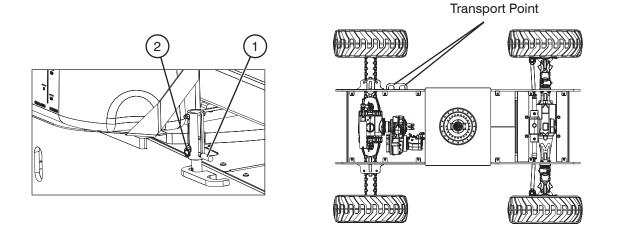


Figure 2-11. Turret Transportation Lock & Locking Points

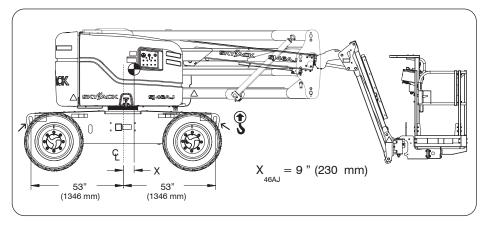


Figure 2-12. Lifting Points NOTE: Center of gravity varies with different options.



Page 52

#### 2.13 Winching and Towing Procedure

This section provides the operator with procedure about winching and towing and on how to manually release brakes.

### N WARNING

Ensure boom is in stowed position before winching or towing. Sudden motion could cause aerial platform to become unstable. Death or serious injury could result.

### <u> (</u>WARNING

In emergency situations where aerial platform functions are not available and lowering is impeded by an obstacle, utmost care must be taken to move aerial platform far enough to clear obstacle. In such cases, operation must be extremely smooth with no sudden movements and must not exceed a speed of 2 in./sec (50 mm/sec).

### <u> (</u>WARNING

When pushing, winching or towing, do not exceed 2 mph (3.2 km/h).

### N WARNING

Do not winch or tow aerial platform on grade steeper than 45% (4WD).

### N WARNING

Do not winch or tow aerial platform onto a slope, or brake the towing vehicle rapidly. Do not pull aerial platform down an incline towards a winch.

- 1. Before winching or towing aerial platform, fully retract, lower and position boom over rear drive wheels in line with direction of travel.
- 2. Manually release brakes (refer to Section 2.13-1).
- 3. Remove wheel chocks or blocks, and then winch or tow aerial platform to desired location.

- 4. Position aerial platform on a firm and level surface.
- 5. Chock or block wheels to prevent aerial platform from rolling.
- 6. Apply brakes by pulling out black brake auto reset valve.

#### NOTE

Brakes automatically apply when platform controls are engaged.

### <u> warning</u>

Brakes must be applied immediately after reaching desired location.



#### 2.13-1 To Release Brakes Manually

Brakes must be manually disengaged for winching or towing.

### 

# Do not manually disengage brakes if aerial platform is on a slope.

- 1. Ensure aerial platform is on level ground. Chock or block wheels to keep aerial platform from rolling.
- 2. Turn main power disconnect switch to "O" off position.



# Do not use hydraulic power with brake disengaged.

3. Locate the bypass valve on the inboard side of the drive pump. Bypass the drive pump by loosening the valve stem (item 1 - marked with yellow paint) two revolutions counterclockwise.

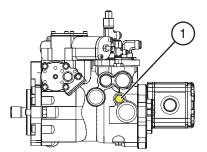


Figure 2-13. Drive Bypass Valve



# Do not release brakes before disengaging drive motor!

4. Push in black brake valve plunger (item 2).

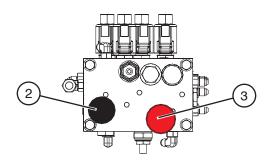


Figure 2-14. Brake Manifold

5. Actuate red hand pump (item 3) slowly by moving knob in and out until firm resistance is felt. Brake is now released.



Brakes must be applied immediately after reaching desired location. Refer to Section 2.13 on how to reengage brakes.



#### Section 2 - Operation

#### 2.14 Emergency Lowering Procedures

This section guides the operator on how to use emergency lowering system. This system allows platform lowering in the event of an emergency or engine malfunction.

#### NOTE

The emergency power unit has two-minute duty cycle.

### I CAUTION

#### Do not use emergency power unit continuously for more than two minutes.

#### At Base Control Console:

- 1. Ensure engine is off.
- 2. Pull out "O" emergency stop button.
- 3. Select either "<sup>1</sup>/<sup>2</sup>" base position or "<sup>1</sup>/<sup>2</sup>" platform position from key switch.
- 4. Select "① ①" emergency power position from start/function enable/emergency power switch and activate desired boom function.

#### At Platform Control Console:

- 1. Ensure engine is off.
- 2. Pull out "O" emergency stop button.
- 3. Select "①" on position from engine enable switch.
- 4. Depress and hold footswitch.
- 5. Select "① ①" emergency power position from start/function enable/emergency power switch and activate desired boom function.

#### NOTE

When platform is overloaded in work mode, emergency lowering is only available from base controls.



#### 2.15 Chassis Tilt

This section guides the operator with regard to recovering from an inclined position.

#### IMPORTANT

When the boom is raised or extended, the aerial platform must only be operated on firm level surfaces.

### N WARNING

When the aerial platform becomes tilted causing the alarm to sound, the platform must be fully lowered and retracted immediately. Drive functions are not available when the tilt alarm is active.

#### 2.15-1 Platform Uphill

If the aerial platform becomes tilted with the platform uphill (refer to Figure 2-15) follow the steps below to return to a lowered and retracted position.

- 1. Lower main boom completely.
- 2. Lower riser completely.
- 3. Retract fly boom completely.
- 4. Drive to a firm level surface.

#### 2.15-2 Platform Downhill

If the aerial platform becomes tilted with the platform downhill (refer to Figure 2-16) follow the steps below to return to a lowered and retracted position.

- 1. Retract fly boom completely.
- 2. Lower riser completely.
- 3. Lower main boom completely.

Figure 2-16. Platform Downhill

4. Drive to a firm level surface.

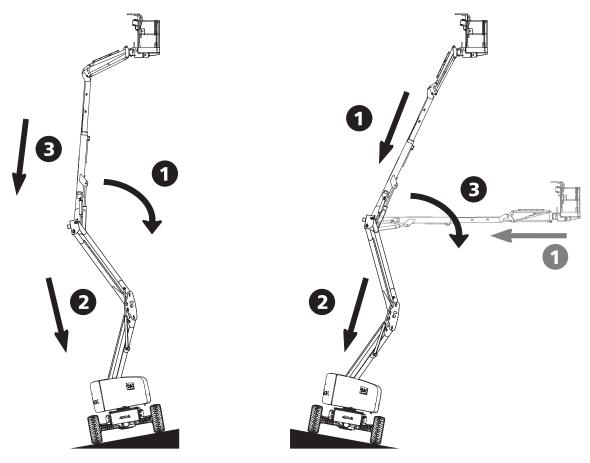


Figure 2-15. Platform Uphill





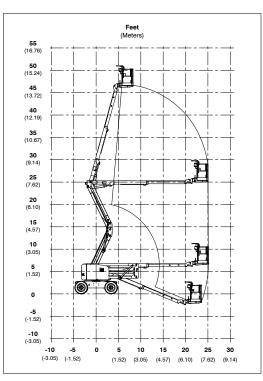


Diagram 2.1 Dimension and Reach Diagram - SJ 46A





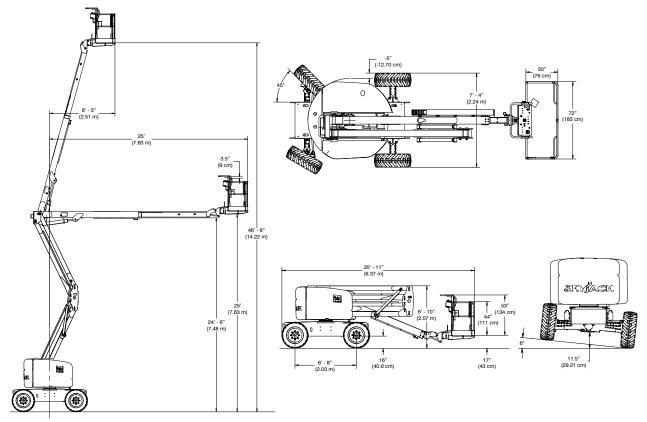

SKYJACK


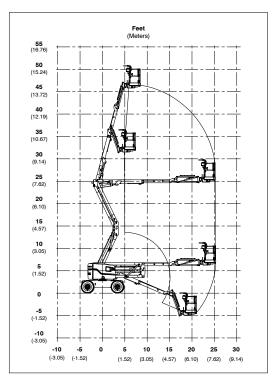


Diagram 2.2 Dimension and Reach Diagram - SJ 46AJ








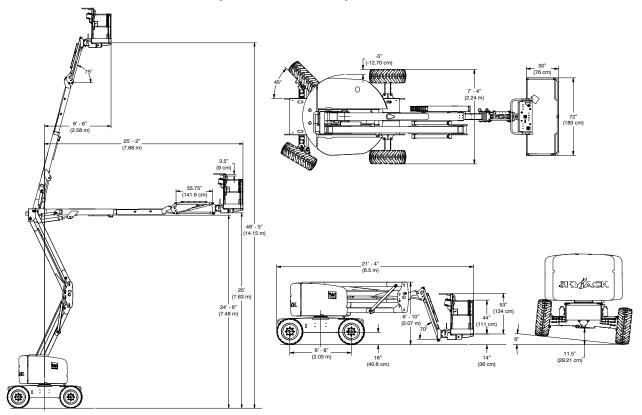

#### **Diagram 2.3 Axle Oscillation Diagrams**




Do not raise the platform in work mode if it is not on a firm level surface.

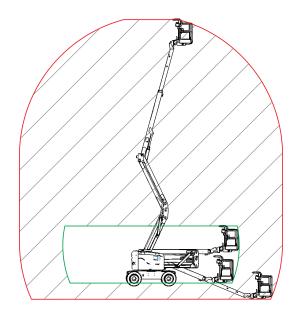

Axle oscillation free (travel mode) - drive speed 4.8 mph (7.7 km/h) max.

Axle oscillation locked (work mode) - drive speed 0.5 mph (0.8 km/h) max.

Figure 2-21. Axle Oscillation - SJ 46A

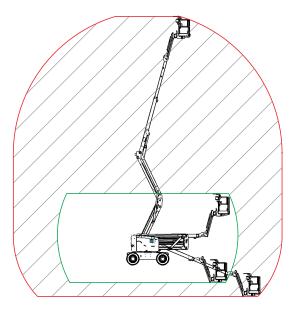



Axle oscillation free (travel mode) - drive speed 4.8 mph (7.7 km/h) max. Axle oscillation locked (work mode) - drive speed 0.5 mph (0.8 km/h) max.

Figure 2-22. Axle Oscillation - SJ 46AJ

MODEL	SJ 46A	SJ 46AJ
STANDARD EQU	JIPMENT	
12-Volt DC emergency power	√	✓
5-foot jib	Not Available	✓
Base controls	✓	✓
Platform controls	✓	✓
Continuous drive and steer directional sensing	✓	✓
Diesel engine	✓	✓
Engine anti-restart protection	✓	✓
Four-wheel drive	✓	✓
Oscillating axle (steer)	✓	✓
Glow plug heaters	✓	✓
Manual brake release	✓	✓
Operator horn	✓	✓
72 x 30 in. (183 X 76 cm) platform (side gate)	✓	✓
Rear entry spring hinged gate	✓	✓
Spring-applied hydraulically released brake	✓	✓
Variable speed drive and function controls	✓	✓
OPTIONAL EQU	IPMENT	
3500KW hydraulic generator	✓	✓
Receptacle outlet cable on platform	✓	✓
Air line or hydraulic line to platform	✓	$\checkmark$
60 x 30 in. (152 x 76 cm) platform (side gate)	✓	$\checkmark$
All function motion alarm	✓	✓
Foam-filled tires	✓	✓
Catalytic Muffler (Level 1)	✓	$\checkmark$
Catalytic Muffler (Level 2)	√	✓
Cold weather start kit (diesel)	✓	✓
Flashing amber light	1	✓
Platform work light	√	✓

60635AB-ANSI

SKYJACK -

	1	10DEL	SJ 46A	SJ 46AJ		
orm :e	Total	platform length (outside)	72 in. (183 cm)	72 in. (183 cm)		
Platform Size	Total	platform depth (outside)	30 in. (76 cm)	30 in. (76 cm)		
		Working	50 ft. 8 in. (15.44 m)	50 ft. 5 in. (15.37 m)		
Ħ		Platform elevated	46 ft. 8 in. (14.22 m)	46 ft. 5 in. (14.15 m)		
Height		Drive	Driveable at all Heights	Driveable at all Heights		
		Turret	6 ft. 10 in. (2.08 m)	6 ft. 10 in. (2.08 m)		
ţţ	Overall with platform		20 ft. 11 in. (6.37 m)	21 ft. 4 in. (6.5 m)		
Length		Base and tires	9 ft. 6 in. (2.9 m)	9 ft. 6 in. (2.9 m)		
		Outside std. tires	7 ft. 4 in. (2.2 m)	7 ft. 4 in. (2.2 m)		
Width		Turret	6 ft. (1.8 m)	6 ft. (1.8 m)		
Ĭ	v	/eight (with air tires)	14,558 lb. (6,603 kg)	14,730 lb. (6,681 kg)		
Weight	Weig	ht (with foam-filled tires)	15,158 lb. (6,875 kg)	15,330 lb. (6,954 kg)		
	Plat	orm rotation	180 degrees	180 degrees		
	Hori	zontal reach	25 ft. 0 in. (7.63 m)	25 ft. 2 in. (7.68 m)		
I	Horizontal rea	ch @ maximum height	8 ft. 3 in. (2.51 m)	8 ft. 6 in. (2.58 m)		
	v	/heelbase	6 ft. 8 in. (2.03 m)	6 ft. 8 in. (2.03 m)		
Turret rotation		ret rotation	360 degrees continous	360 degrees continous		
Turret tailswing		ret tailswing	-5 in. (-12.7 cm)	-5 in. (-12.7 cm)		
Gradeability		radeability	45%	45%		
	Ground clear	ance between wheels	16 in. (40.6 cm)	16 in. (40.6 cm)		
		Differential lock engaged	12 ft. 6 in. (3.83 m)	12 ft. 6 in. (3.83 m)		
Turning	Inside	Differential lock disengaged	8 ft. 2 in. (2.48 m)	8 ft. 2 in. (2.48 m)		
Radius		Differential lock engaged	21 ft. 2 in. (6.45 m)	21 ft. 2 in. (6.45 m)		
	Outside	Differential lock disengaged	16 ft. 11 in. (5.15 m)	16 ft. 11 in. (5.15 m)		
ļ	Sys	tem Voltage	12V DC	12V DC		
Σ.		Туре	Lead/Acid	Lead/Acid		
Battery	Co	old cranking amperes	800A	800A		
		Main boom up	26 sec (minimum)	26 sec (minimum)		
		Main boom down	26 sec (minimum)	26 sec (minimum)		
		Riser boom up	26 sec (minimum)	26 sec (minimum)		
es		Riser boom down	26 sec (minimum)	26 sec (minimum)		
Operating Times		Fly boom extend	11 sec	11 sec		
ating		Fly boom retract	19 sec	19 sec		
Oper		Jib up	N/A	39 sec		
J		Jib down	N/A	23 sec		
	Turret ro	tate - counterclockwise 360° (fully stowed)	90 sec	90 sec		
		Platform rotate - full	20 sec	20 sec		
Driving Speeds		speed (maximum-stowed)	4.8 mph (7.7 km/h)	4.8 mph (7.7 km/h)		

Table 2.2a	<b>Specifications</b>	and	Features
	specifications		Caralco

122AA-ANSI


SKYJACK

		MODEL		SJ 46A	SJ 46AJ	
		Engine Ty	/pe	Deutz D201	1L03i	
		RPM Setti	ngs	1300 Low/1650/2	2000 High	
		Gross Intermit	tent HP	48 hp (35.8	kW)	
	Horse	power @ 2000 rp	om (intermittent)	38.8 hp (28.	9 kW)	
	Fuel Type			Diesel		
Engine - Deutz	Fuel Tank Capacity			17 gal. (64	4 L)	
	Standard Oil Factory Fill		0°F to 115°F (- 18°C to +45°C)	SAE 15W-40 API CF/CG/CH-4		
Engin	Cold Lube Oil Option	Ambient	- 20°F to 90°F (- 29°C to +32°C)	SAE 5W-30 API	CF/CG/CH-4	
	Arctic Lube Oil Option	Temperature Limits	- 40°F to 115°F (- 40°C to +45°C)	SAE 0W-40 API 0	CF/CG/CH-4	
	Apporved Alternates		-	See Engine M	lanual	
		Lube Oil Sump	Capacity	1.45 gal. (5.5 L)		
		Engine Ty	/ре	3.0L GM Dual Fuel		
	RPM Settings		900 Low/1650/2000 High			
Engine - GM		Gross Intermittent HP		70 hp (52.2 kW)		
	Horse	Horsepower @ 2000 rpm (intermittent)		54.8 hp (40.8 kW)		
	Fuel Type - Dual		Dual	Gasoline/Pro	opane	
	Fuel Tank Capacity		pacity	17 gal. (64	4 L)	
	Standard Oil Factory Fill	Ambient Temperature Limits	- 40°F to 115°F (- 40°C to +45°C)	SAE 5W-30	API SL	
Engine	Apporved Alternates		-	See Engine M	lanual	
		Lube Oil Ca	pacity	1.19 gal. (4.5 L)		
	Standard Coolant	Ambient	- 20°F to 115°F (- 29°C to +45°C)	GM 50/50 Extended	l Life Coolant	
	Arctic Coolant Option	Temperature Limits	- 40°F to 115°F (- 40°C to +45°C)	GM 60/40 Extended	l Life Coolant	
		Coolant Capacity		3.0 gal. (11.4 L)		
			Туре	Shell Tellus	5 T46	
	Recommended	Operating and	Cold Start	Down to 11°F	(-11°C)	
Ī	Oil	Oil Temperature	Ambient Operation	113°F (+4	5°C)	
Hydraulic Oil		Limits Max. Oil Temp.		200°F(+93°C)		
ydra		Approved Alternates (Note: Cold weather starting temperatures can be improved with Skyjack options. Please consult your nearest Skyjack service center.)		Chevron Ryk	on MV	
Í				Mobilfluid 424		
				Esso Univis N46		
		Hydraulic Tank	Capacity	24 gal. (9 <sup>.</sup>	1 L)	

### Table 2.2b Specifications and Features



#### Table 2.3 Owner's Annual Inspection Record

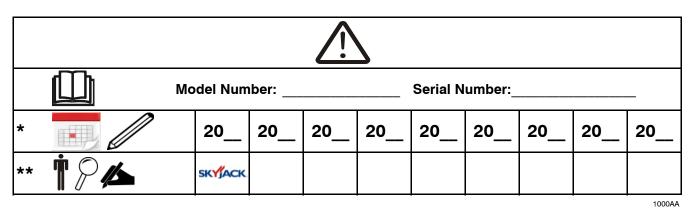

As described earlier in this section, this decal is located on the scissor assembly. It must be completed after an annual inspection has been completed. Do not use the aerial platform if an inspection has not been recorded in the last 13 months.

	Pictorial	Description
*		Inspection Date
**	<b>†?</b> 1	Inspector Signature



#### Table 2.4 Tire/Wheel Specifications

	SJ 46A	SJ 46AJ
Tire Size	315/55 D20	315/55 D20
Туре	Air/Foam-filled	Air/Foam-filled
Tire Ply Rating	12	12
Wheel Nuts Torque	290 ft-lb (393.2 Nm)	290 ft-Ib (393.2 Nm)

60639AA-ANSI

#### **IMPORTANT**

For proper function of each axle differential, all four wheels must have same tire size installed at all times. Failure to comply with this requirement will reduce the life of the differentials and reduce overall mobility of aerial platform.

#### **Table 2.5 Maximum Platform Capacities**

	SJ 46A	SJ 46AJ
Total Capacity *	500 lb. (227 kg)	500 lb. (227 kg)
	2 Persons	2 Persons
Maximum Wind	28 mph (12.5 m/s)	28 mph (12.5 m/s)
Maximum Side Force	90 lbf (400 N)	90 lbf (400 N)

60640AA-ANSI



\*

**WARNING** DRIVING ON A SLOPE

- When driving on a slope greater than 30%, the platform capacity is limited to 300 lb. (136 kg).
- The platform must be between the non-steer wheels and must be on the downside of the hill.
- When slope increases to above 45%, the forward drive is disabled but reverse drive remains active.

SKYJACK

60641AA-ANSI

MODEL	Gross Aerial Platform Weight		Total Aerial Platform Load					
			Wheel		LCP		OUP	
	lb.	kg	lb.	kg	psi	kPa	psf	kPa
SJ 46A (Standard configuration)	14,960	6,786	7,775	3,527	108	745	219	10.5
SJ 46AJ (Standard configuration)	15,230	6,908	7,775	3,527	108	745	219	10.5

#### Table 2.6 Floor Loading Pressure

Standard Configuration = 4WD + Oscillating Axle + 315/55 D20 Air Tires

Gross Aerial Platform Weight = Weight + platform capacity

• LCP – Locally Concentrated Pressure – is a measure of how hard the aerial platform tire tread presses on the area in direct contact with the floor. The floor covering (tile, carpet, etc.) must be able to withstand more than the indicated values above.

- OUP Overall Uniform Pressure is a measure of the average load the aerial platform imparts on the whole surface projected directly underneath it. The structure of the operating surface (beams, etc.) must be able to withstand more than the indicated val
- Foam tires option will add approximately 600 lb. (272 kg) to total aerial platform weight and 150 lb. (68 kg) to max wheel load. OUP will increase by 4% and LCP will increase by approx 11%.

#### NOTE:

LCP =

The LCP or OUP that an individual surface can withstand varies from structure to structure and is generally determined by the engineer or architect for that particular structure.

#### Locally Concentrated Pressure (LCP):

Foot Print Area = Tread Contact Area

Maximum Wheel Load


Foot Print Area


#### **Overall Uniform Pressure (OUP):**


Base Area = Length x Width


OUP = Aerial Platform Weight + Capacity

Base Area

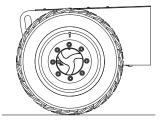



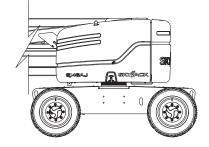





Intermixing tires of different types or using tires of types other than those originally supplied with this equipment can adversely affect stability. Therefore, replace tires only with the exact original Skyjack-approved type. Failure to operate with matched approved tires in good condition may result in death or serious injury.



#### **General Maintenance**

Before attempting any repair work, disconnect battery by turning main power disconnect switch to "O" off position. Preventive maintenance is the easiest and least expensive type of maintenance.

Frequency	Daily	3 months or 150 hours Yearly	Frequency	Daily	3 months or 150 hours	Yearly
Visual and Daily Maintenance Inspection	5		Boom			
Labels	А		Cylinders	А		
Electrical	А		Wear Pads	А		
Limit Switches	А		Hoses	А		
Hydraulic	А		Power Track	А	B*†	
Engine Compartment			Special Options			
Main Power Disconnect Switch	А		Battery Warmer/Hydraulic Oil Heater (If Equipped)	А		
Battery	А		Work Light (If Equipped)	А		
High Pressure Filter	А		Flashing Amber Light (If Equipped)	А		
Hydraulic Pumps	А		Function Tests			
Muffler and Exhaust	А		Test Main Power Disconnect Switch	A		
Engine Pivot Tray	А		Base Control Console			
Engine Oil Level	А		Test Base Emergency Stop Light	А		
Engine Air Filter	А		Test Base Emergency Stop	А		
Fuel Leaks	А		Test Function Enable Switch & All Boom Functions	А		
Control Compartment			Test Platform Self-leveling	А		
Base Control Console	А		Test Emergency Power	А		
Hydraulic Tank	А	D*+	Test Base/Off/Platform Switch	А		
Hydraulic Oil	А	B*†	Platform Control Console			
Brake and Main Manifolds	А		Test Platform Emergency Stop Light	А		
Emergency Power Unit	А		Test Platform Emergency Stop	А	<b>D</b> *1	
Fuel Tank	А		Test Footswitch	А	B*†	
Fuel Leaks	А		Test Engine Enable Switch	А		
Base			Test Steering	А		
Turret Transportation Lock	А		Test Driving Function	А		
Drive Axle	А		Test Driving Speed	А		
Oscillating Cylinder Assembly	А		Test Emergency Power	А		
Steer Cylinder Assembly	А		Test Horn	А		
Tie Rod	А	1	Test Brakes	А		
Wheel/Tire Assembly	А	1	Test Manual Platform Leveling	А		
Manuals	A	1	Test Differential Lock Switch	А		
Platform Assembly	А	1	Test Oscillating Axles	А		
Platform Control Console	A	1			6064	12AC-ANSI
Rotary Actuator	A					
Jib (If Equipped)	A	1				

A - Perform Visual and Daily Maintenance Inspections & Functions Test. Refer to Section 2.8 and Section 2.9 of this manual.

**B** - Perform Scheduled Maintenance Inspection. Refer to Service & Maintenance manual.

\* - Maintenance must be performed only by trained and competent personnel who are familiar with mechanical procedures.

+ - Refer to Skyjack's website @ www.skyjack.com for latest service bulletins prior to performing quarterly or yearly inspection.



Use original or manufacturer-approved parts and components for aerial platform.



Page 66

#### **Table 2.8 Operator's Checklist**

**OPERATOR'S CHECKLIST** 

Model:

Hourmeter Reading:

Date:

Time:

Operator's Name (Printed):

**INSPECTION FREQUENCY** 

FREQUENTLY

ANNUALLY BI-ANNUALLY

Operator's Signature:

DAILY

Each item shall be inspected using the the appropriate section of the Skyjack operating manual. As each item is inspected, check the appropriate box.

\_\_\_\_\_

Р-	PASS
----	------

F - FAIL

R - REPAIRED


NA - NOT APPLICABLE

Visual and Daily Maintenance Inspections	Boom
Labels	Cylinders
Electrical	Wear Pads
Limit Switches	Hoses
Hydraulic	Power Track
Engine Compartment	Special Options
Main Power Disconnect Switch	Battery Warmer/Hydraulic O
Battery	Work Light (If Equipped)
High Pressure Filter	Flashing Amber Light (If Equ
Hydraulic Pumps	Function Tests
Muffler and Exhaust	Test Main Power Disconne
Engine Pivot Tray	Base Control Console
Engine Oil Level	Test Base Emergency Stop L
Engine Air Filter	Test Base Emergency Stop
Fuel Leaks	Test Function Enable Switch
Control Compartment	Test Platform Self-leveling
Base Control Console	Test Emergency Power
Hydraulic Tank	Test Base/Off/Platform Swite
Hydraulic Oil	Platform Control Console
Brake and Main Manifolds	Test Platform Emergency Sto
Emergency Power Unit	Test Platform Emergency Sto
Fuel Tank	Test Footswitch
Fuel Leaks	Test Engine Enable Switch
Base	Test Steering
Turret Transportation Lock	Test Driving Function
Drive Axle	Test Driving Speed
Oscillating Cylinder Assembly	Test Emergency Power
Steer Cylinder Assembly	Test Horn
Tie Rod	Test Brakes
Wheel/Tire Assembly	Test Brakes
Manuals	Test Manual Platform Levelir
Platform Assembly	Test Differential Lock Switch
Platform Control Console	Test Oscillating Axles
Rotary Actuator	
Jib (If Equipped)	Note:

BoomImage: second s

Make a copy of this page or visit the Skyjack web site: www.skyjack.com for a printable copy.




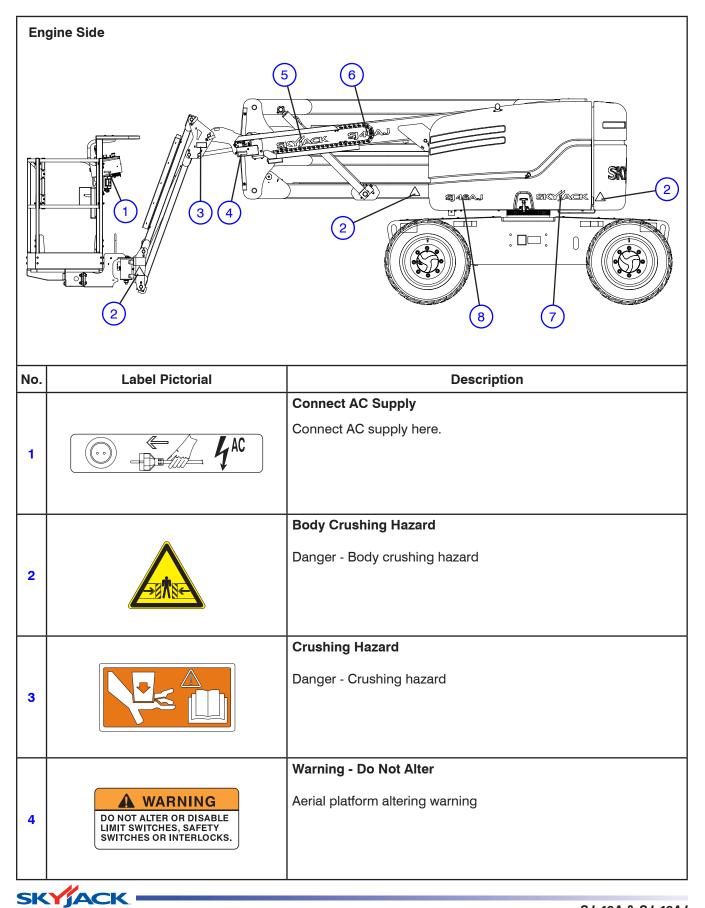






Eng	Engine Side (Continued)		
No.	Label Pictorial	Description	
5	SKYJACK	<b>Skyjack Logo</b> Skyjack logo - grey	
6	SJ46AJ	<b>Model Number*</b> Product Identifier - grey *Model number will vary, may not be as shown.	
7	SKYJACK	Skyjack Logo Small Skyjack logo - blue and red	
8	<b>SJ46AJ</b>	<b>Model Number*</b> Product Identifier - blue *Model number will vary, may not be as shown.	



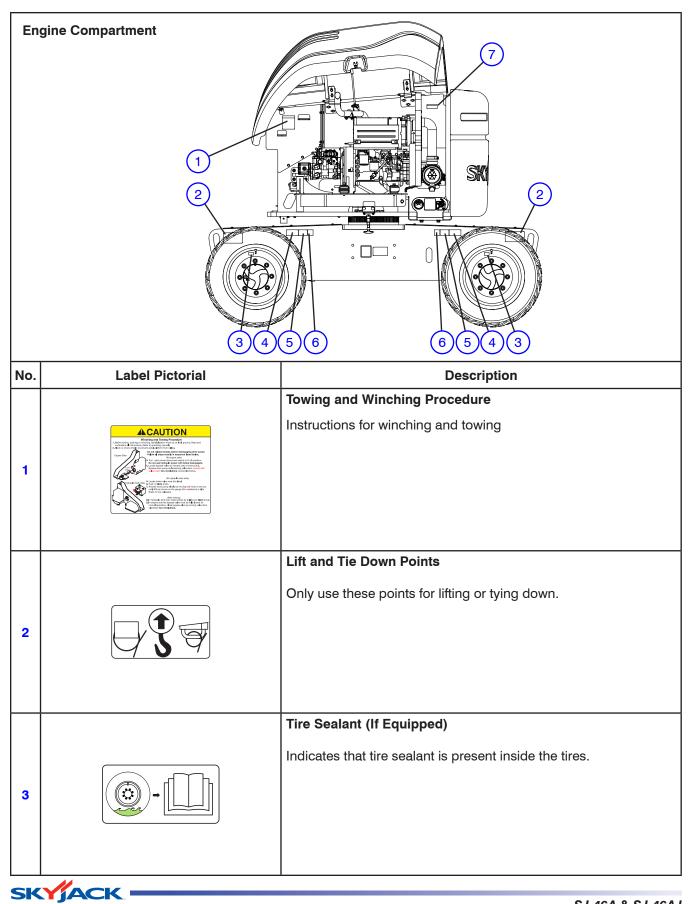


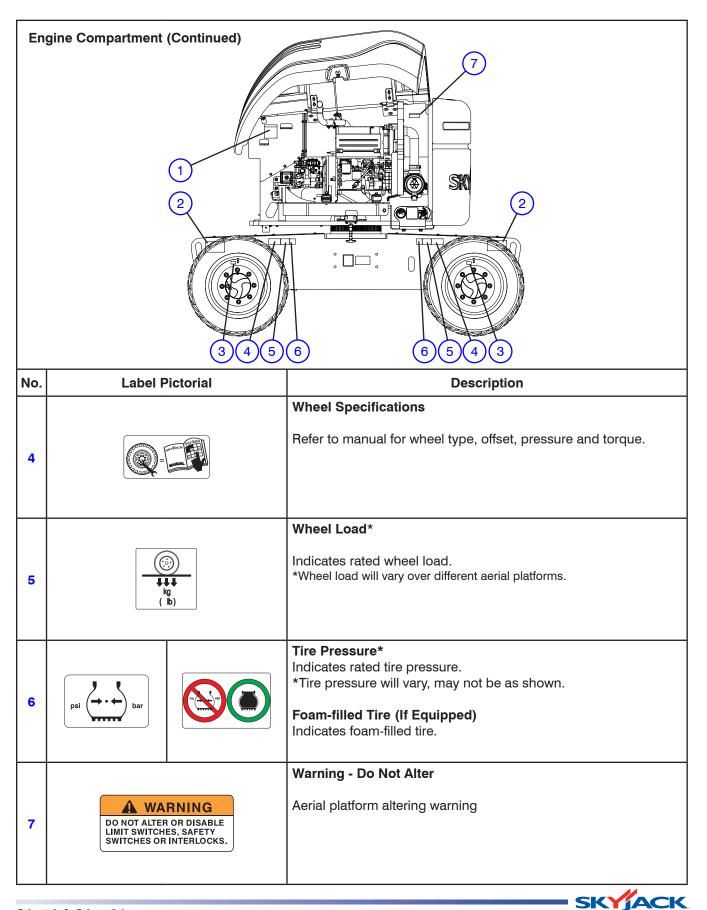


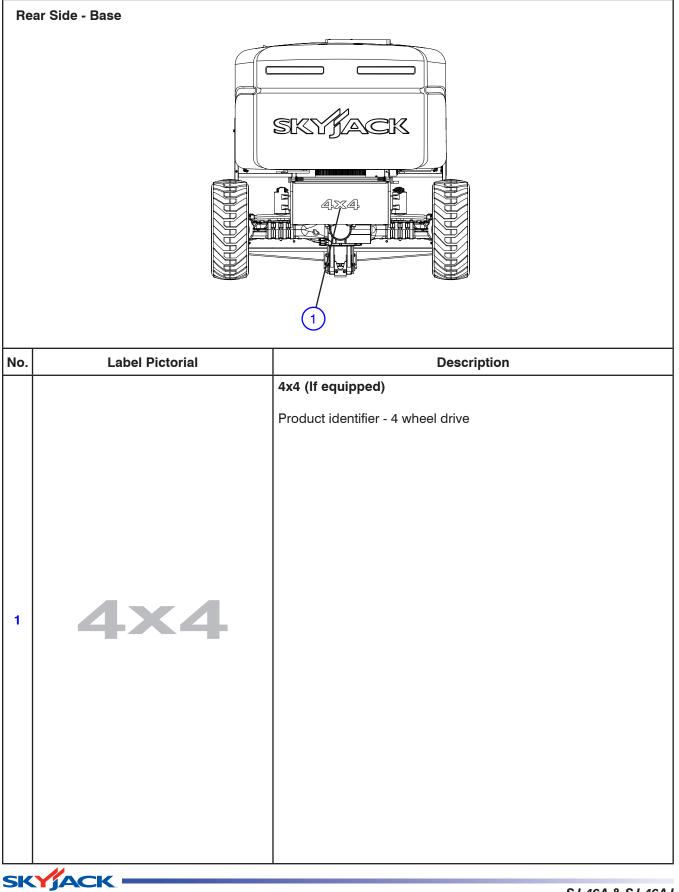


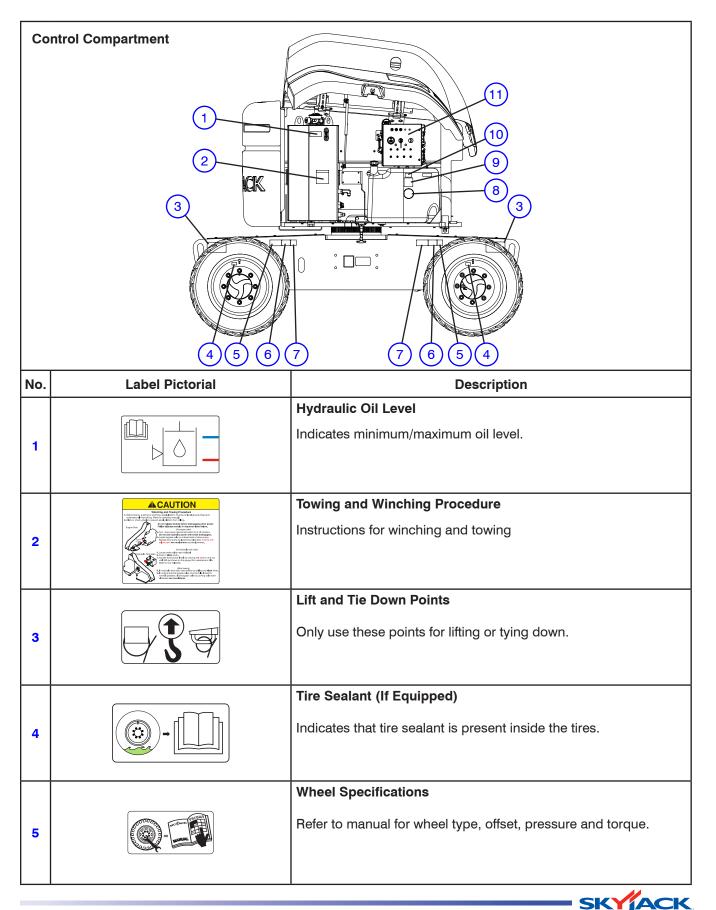




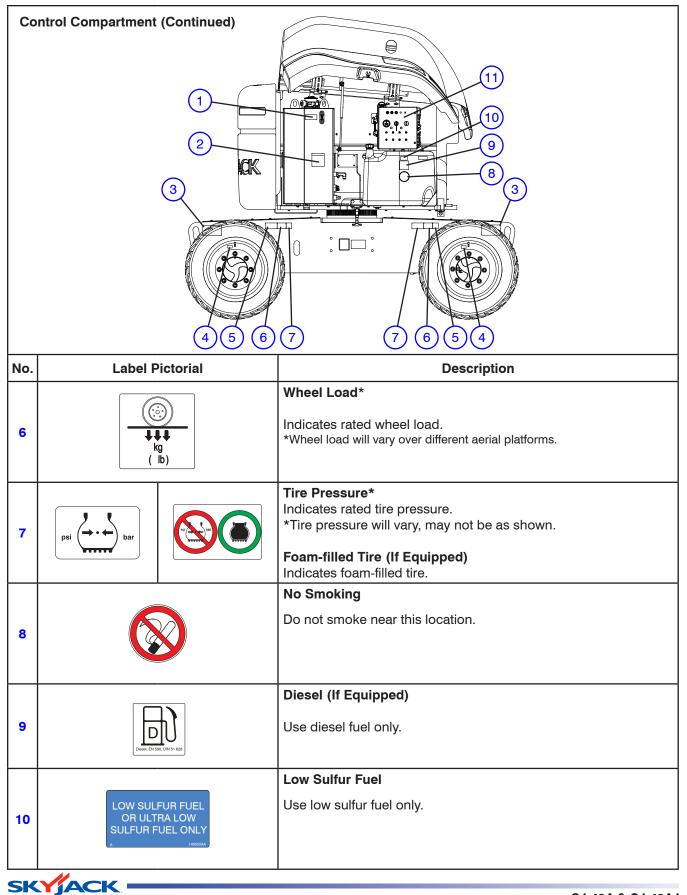


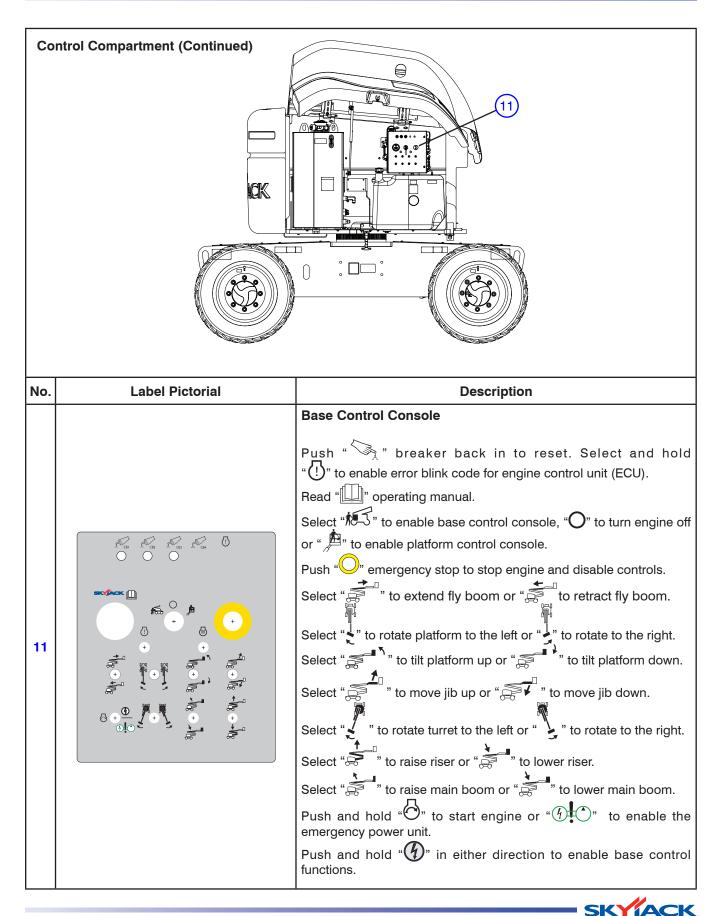


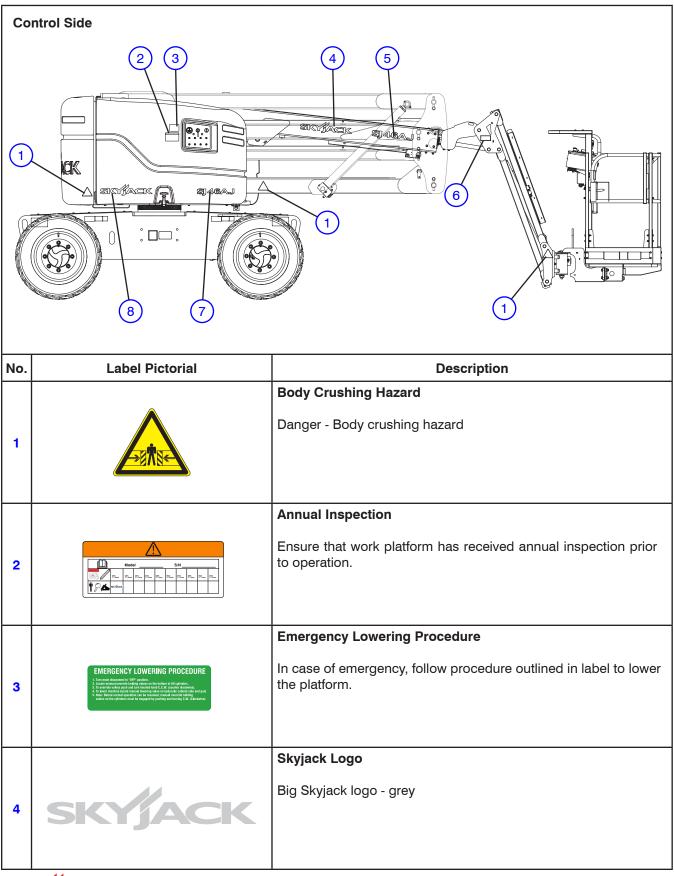





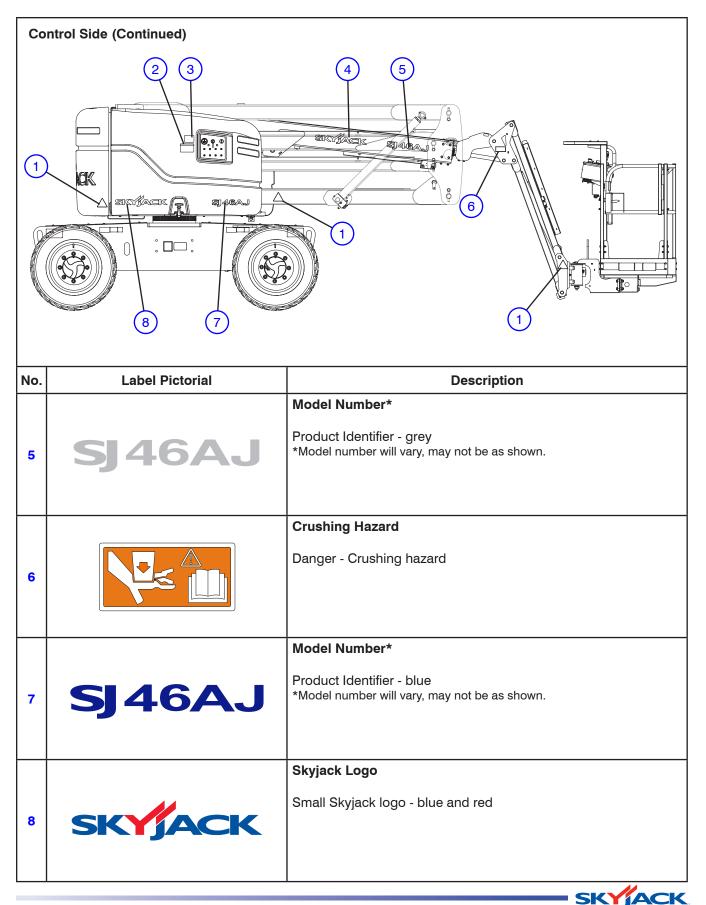


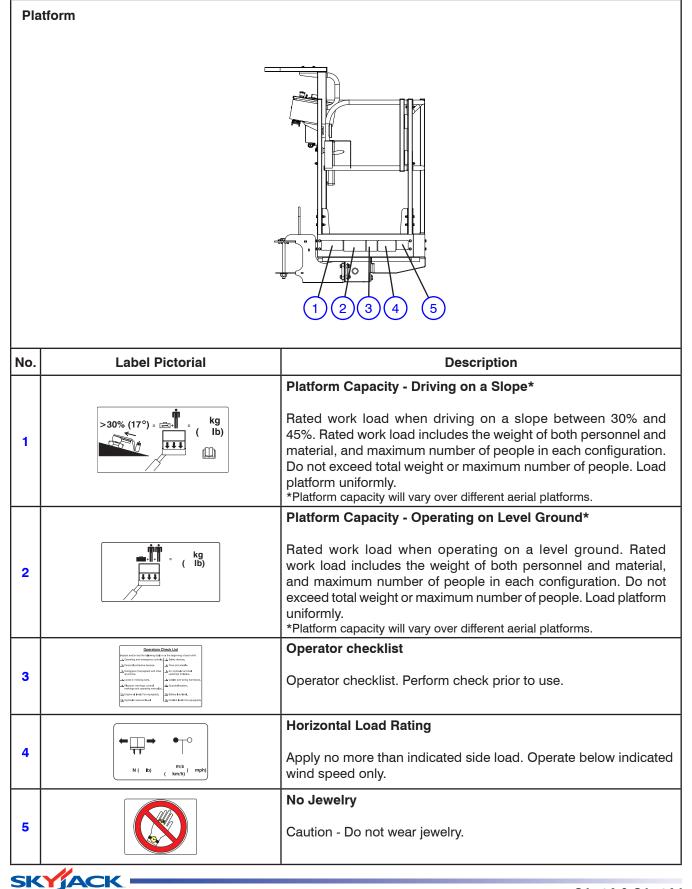


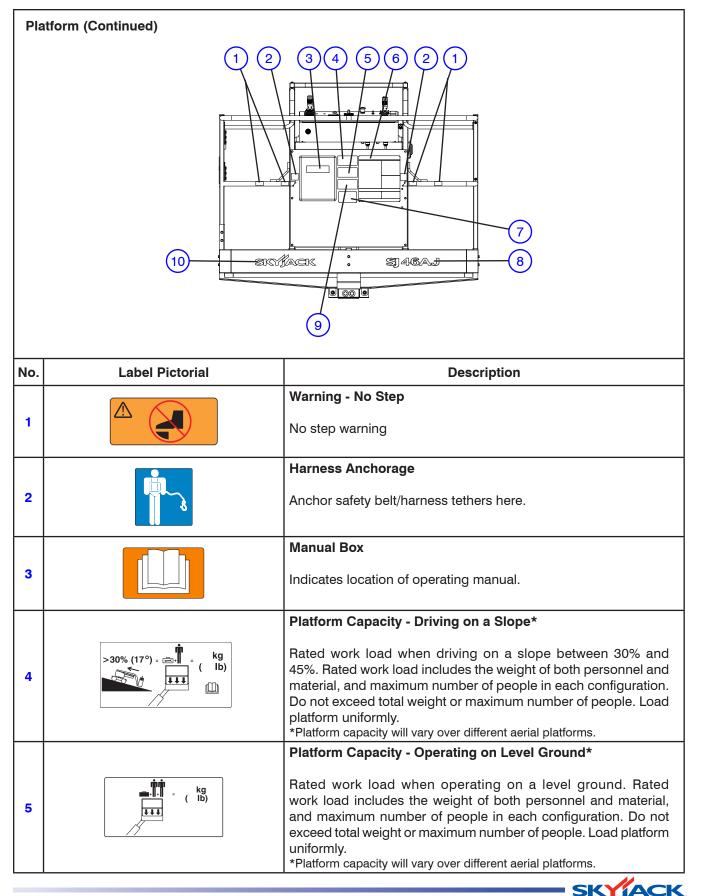


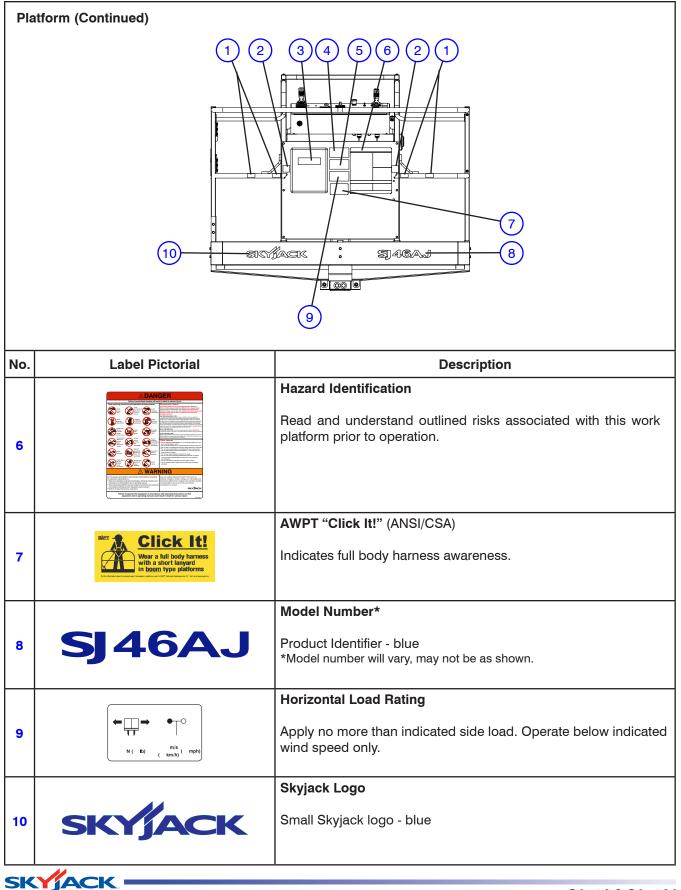

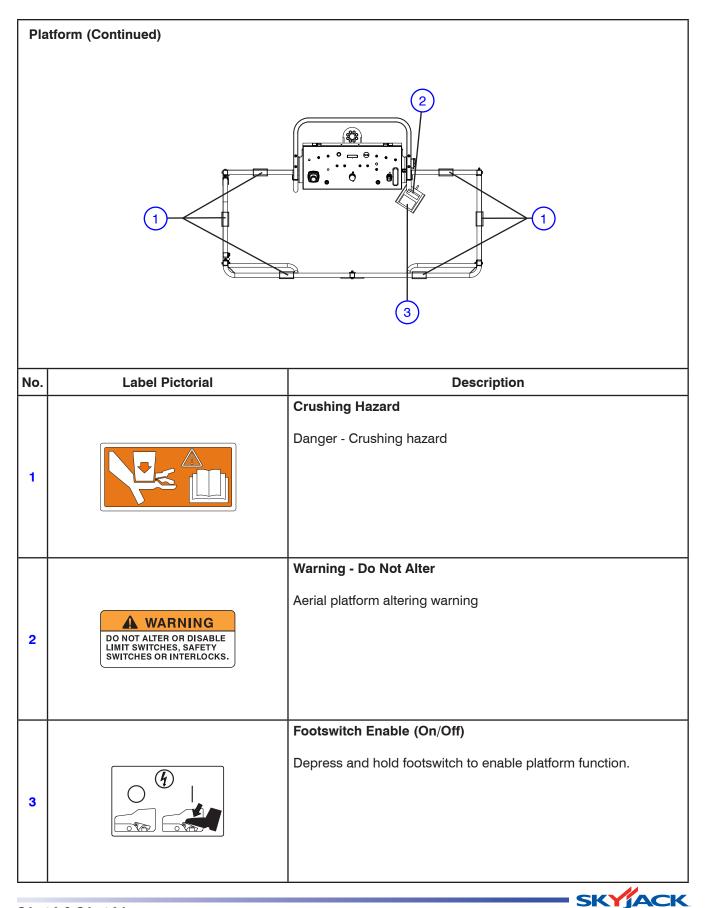

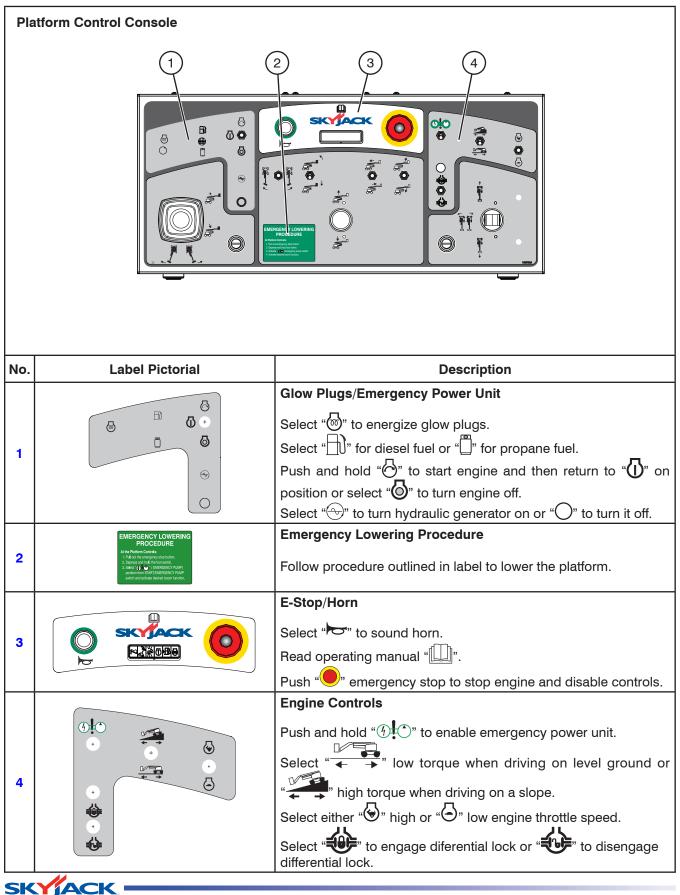

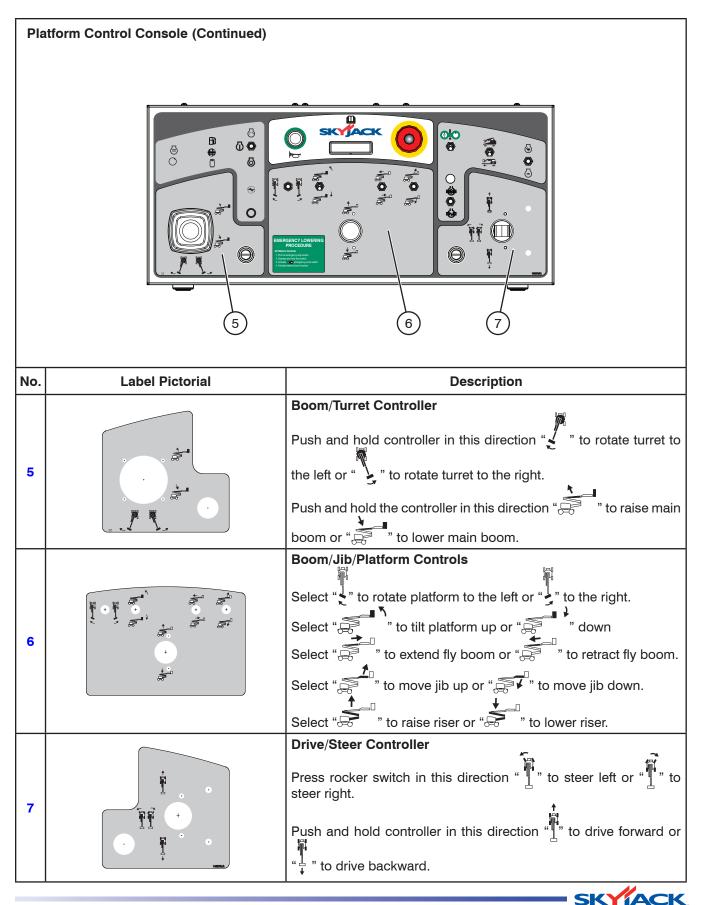

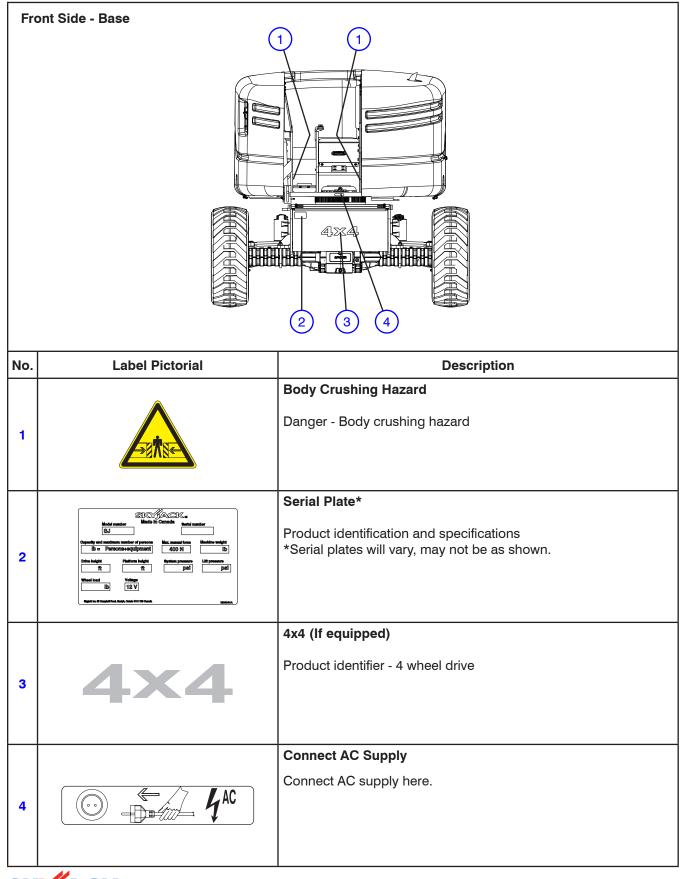



## **California Proposition 65**



Engine exhaust and some of its constituents are known to the State of California to cause cancer, birth defects, and other reproductive harm.

Battery posts, terminals, and related accessories contain lead and lead compounds, chemicals known to the State of California to cause cancer, birth defects, and other reproductive harm.

WASH HANDS AFTER HANDLING.



www.skyjack.com